## **USB005 User Guide** September 2014, v1.0 International Rectifier

## Purpose of the USB005





Provide interface between IR
 PowIRCenter GUI and the IR controllers

## **USB005** Interfaces and Spec



Brown: GND

Red: SDA

Orange: SCL


To PC USB Port



- No external power supply. Powered by USB 5V connector pin
- i2c speed up to 400 KHz. Speed can be set by IR PowIRCenter GUI.
- Require Silicon Labs USBXpress driver which is included in the IR PowIRCenter GUI installation package.
- USB005 has clear blue casing

## Successful USB005 Connection to the GUI



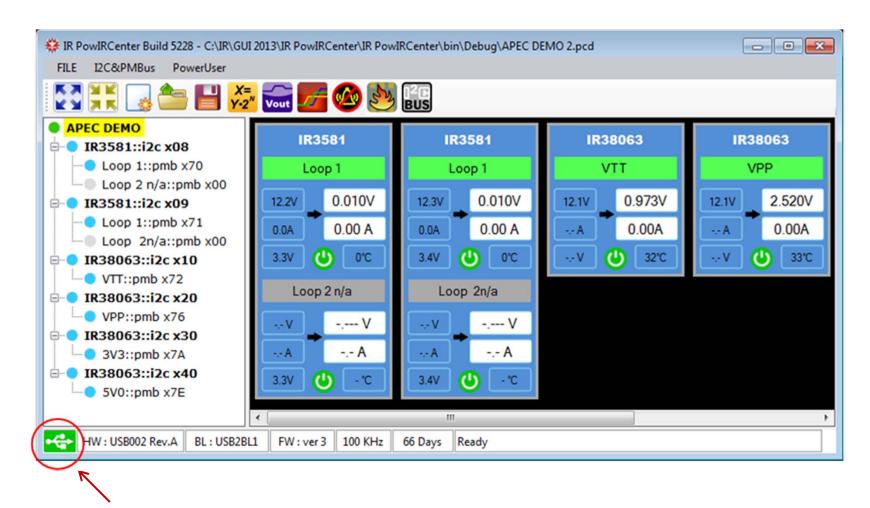

Green color indicates good USB connection between PC and USB005 board

单击下面可查看定价,库存,交付和生命周期等信息

>>Infineon Technologies(英飞凌)