































REMOTE INDICATION

| REMOTE INDICATION & METERS | | |
|---|---|--|
| Product | Features | Accessory For |
| RK-105 Remote Indication and Reset Assembly    | Panel-mounted remote indication and reset with NEMA 1 rating. | SE-105 SE-107 |
| RK-105I Remote Indication Assembly    | Panel-mounted remote indication with NEMA 1 rating. | SE-105 SE-107 |
| RK-102 Industrial Remote Indication and Reset Kit    | Panel-mounted remote indication and reset, standard 22 mm mounting, with NEMA 4 and NEMA 13 rating. | SE-105 SE-107 |
| RK-132 Industrial Remote Indication and Reset Kit    | Panel-mounted remote indication and reset, standard 22 mm mounting, with NEMA 4 and NEMA 13 rating. | SE-134C SE-135 SE-145 |
| RK-325 Remote Indication and Reset Assembly    | Panel-mounted remote indication and reset with NEMA 1 rating. | SE-325 |
| RK-325I Remote Indication Assembly    | Panel-mounted remote indication with NEMA 1 rating. | SE-325 |
| RK-302 Remote Indication and Reset Kit    | Panel-mounted remote indication and reset, standard 22 mm mounting with NEMA 4 and NEMA 13 rating. | SE-325 |
| RK-332 Remote Indication and Reset Kit    | Panel-mounted remote indication and reset, standard 22 mm mounting with NEMA 4 and NEMA 13 rating. | SE-330 SE-330AU SE-330HV |
| PGB-6130 Remote Indication and Reset Assembly  | Remote indication of overcurrent, phase unbalance, phase loss, phase sequence, and overtemperature. Remote reset included. | PGR-6130 |
| PGB-6800 Remote Indication and Reset Assembly  | Remote indication of overcurrent, undercurrent, phase unbalance, phase loss, and phase sequence. Remote reset included. | PGR-6800 |
| PGA-0500 Analog % Current Meter  | Panel-mounted analog meter displays ground-fault current as a percentage of the set point. | SE-601 PGR-4300 PGR-6100 SE-701 SE-703 SE-704 |
| PGA-0510 Analog Ohm Meter  | Panel-mounted analog ohmmeter displays insulation resistance from 0 Ω to infinity. | PGR-3200 PGR-6100 |
| E2323 & E2324 Megaohmmeter & Kiloohmmeter  | Flush-mounted units designed for connection with the T3200 for instrument readings. | T3200 |
| M8100 Synchroscope  | Flush-mounted units provide illuminated indication of the phase and frequency difference between voltages on two separate AC systems. | T5000 T4500 C6200 FlexGen S6000 Sigma |

单击下面可查看定价，库存，交付和生命周期等信息

[>>Littelfuse\(美国力特\)](#)