


FL NP PND-4TX PB

PROFINET IO proxy for PROFIBUS DP with integrated switch with four RJ45 ports

AUTOMATION

Data sheet
7744_en_04

© PHOENIX CONTACT 2010-03-11

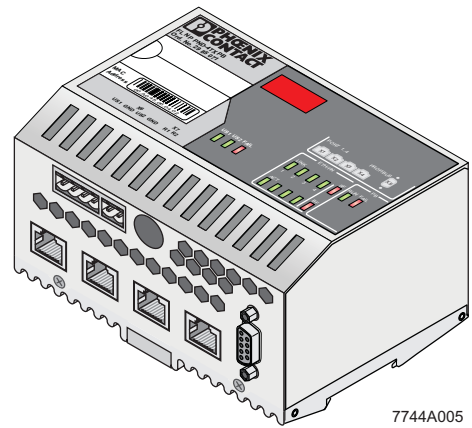

1 Description

PROFINET IO/PROFIBUS proxy

1.1 Features

- PROFINET IO device
- 10/100Base-T(X) Ethernet twisted pair interface
- Integrated PROFINET IO proxy for PROFIBUS
- Supports PROFINET conformance class B
- Integrated managed switch with four ports
- PROFIBUS DP Class 1 master
- PROFIBUS DP protocol (IEC 61158 Type 3 and IEC 61784)
- PROFIBUS DP master connection up to 12 Mbps (RS-485 copper technology)
- Complete configuration using PC WorX

1.2 Application

- Connection of a PROFIBUS DP system to a PROFINET IO controller from Phoenix Contact
- Use in small control boxes in order to seamlessly integrate existing PROFIBUS DP solutions in PROFINET



A quick start guide for PC WorX can be found in the Download Center at www.phoenixcontact.net/catalog (see "Ordering data" on page 2).



Make sure you always use the latest documentation for the proxy. This documentation can be downloaded at www.phoenixcontact.net/catalog.



This data sheet is valid for the products listed on the following page:

2 Ordering data

Products

Description	Type	Order No.	Pcs./Pkt.
PROFINET IO proxy for PROFIBUS DP with integrated switch with four RJ45 ports	FL NP PND-4TX PB	2985071	1

Documentation

Description	Type	Order No.	Pcs./Pkt.
Quick start guide for PC WorX	UM QS EN PC WORX	2699862	1

3 Technical data

General data

Function	PROFINET IO proxy for PROFIBUS DP/switch
Housing dimensions (width x height x depth)	128 mm x 95 mm x 69 mm (without connectors, memory card not inserted)
Weight	650 g
Permissible temperature (operation)	0°C to +55°C
Permissible temperature (storage/transport)	-25°C to +70°C
Humidity (operation)	10% to 75%, no condensation
Humidity (storage/transport)	10% to 75%, no condensation
Air pressure (operation)	80 kPa to 108 kPa, 2000 m above sea level
Air pressure (storage/transport)	66 kPa to 108 kPa, 3000 m above sea level
Degree of protection	IP20, IEC 60529
Protection class	Class 3 according to EN 61131-2, IEC 61131-2; PELV with preconnected power supply unit with safe isolation
Pollution degree (installation in housing with $\geq$ IP54 protection)	2
Air and creepage distances	According to IEC 60439-1
Preferred mounting position	On a standard DIN rail; For the mounting position, see Figure 8 on page 8.
Connection to functional earth ground	Snapped onto a grounded DIN rail
Indication elements	Local diagnostic and status LEDs

Supply voltage (U_{S1}/U_{S2} redundant)

Connection	Via COMBICON; conductor cross-section = 2.5 mm ² , maximum
Nominal value	24 V DC
Permissible ripple	3.6 V _{PP} within the permissible voltage range
Permissible voltage range	19.5 V DC to 30 V DC
Current consumption	350 mA, typical
Typical power consumption	8.5 W

Interfaces

Ethernet (RJ45 ports)

Number	4
Connection format	8-pos. RJ45 female connector
Connection medium	Twisted pair cable with a conductor cross-section of 0.14 mm ² to 0.22 mm ²
Cable impedance	100 Ω
Transmission Speed	10/100 Mbps
Maximum network segment expansion	100 m
Function	10/100Base-T(X)

PROFIBUS DP

Connection format	9-pos. D-SUB female connector (RS-485)
Transmission speed	9.6 kbps to 12 Mbps

Interfaces (continued)**Floating alarm contact**

Voltage	24 V DC
Current carrying capacity	100 mA, maximum

PROFIBUS DP functions

Master class	DP/V0 Class 1 master
Number of PROFIBUS DP devices	Up to 125 PROFIBUS DP slaves
Maximum length of I/O data	Up to 1400 bytes

Software

Software requirements	PC WorX Version 5.20 Service Pack 3 or later Firmware 3.0 or later on PC WorX-based control system
Device description	None

PROFINET

Type	Modular PROFINET IO device
Specification	2.1
Conformance class	B
Update rate	≥ 1 ms

Mechanical tests

Shock test according to IEC 60068-2-27	Operation: 15g Storage/transport: 15g
Vibration resistance according to IEC 60068-2-6	Operation/storage/transport: 2g
Free fall according to IEC 60068-2-32	1 m

Conformance with EMC Directive 2004/108/EC**Noise immunity test according to EN 61000-6-2**

Electrostatic discharge (ESD)	EN 61000-4-2 IEC 61000-4-2	Criterion B 6 kV contact discharge 8 kV air discharge
Electromagnetic HF field	EN 61000-4-3 IEC 61000-4-3	Criterion A Field strength: 10 V/m
Fast transients (burst)	EN 61000-4-4 IEC 61000-4-4	Criterion B Signal/data lines: 2.2 kV
Surge current load (surge)	EN 61000-4-5 IEC 61000-4-5	Criterion B Signal/data lines: 1.1 kV
Conducted interference	EN 61000-4-6 IEC 61000-4-6	Criterion A Test voltage: 10 V

Noise emission test according to EN 61000-6-4

Noise emission of housing	EN 55011	Class A
---------------------------	----------	---------

Approvals

For the latest approvals, please visit www.phoenixcontact.com or www.phoenixcontact.net/catalog.

4 Safety notes



WARNING: Disregarding this warning may result in damage to equipment and/or serious personal injury. Only qualified personnel may start up and operate this device. According to the safety instructions in this text, qualified personnel are persons who are authorized to start up, to ground, and to mark devices, systems, and equipment according to the standards of safety technology. In addition, these persons must be familiar with all warning instructions and maintenance measures in this text.



WARNING: Only use PELV

The FL NP PND-4TX PB proxy is designed exclusively for protective extra-low voltage (PELV) operation according to EN 60204-1. Only protective extra-low voltages according to the defined standard may be used to supply and connect the alarm contact.



Shielding

The shielding ground of the connectable twisted pair cables is electrically connected to the female connector. When connecting network segments, avoid ground loops, potential transfers, and voltage equalization currents via the braided shield.



NOTE: Electrostatic discharge

The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD) according to EN 61340-5-1.



Housing

Only personnel authorized by Phoenix Contact are permitted to open the housing.

5 Front view of the FL NP PND-4TX PB proxy


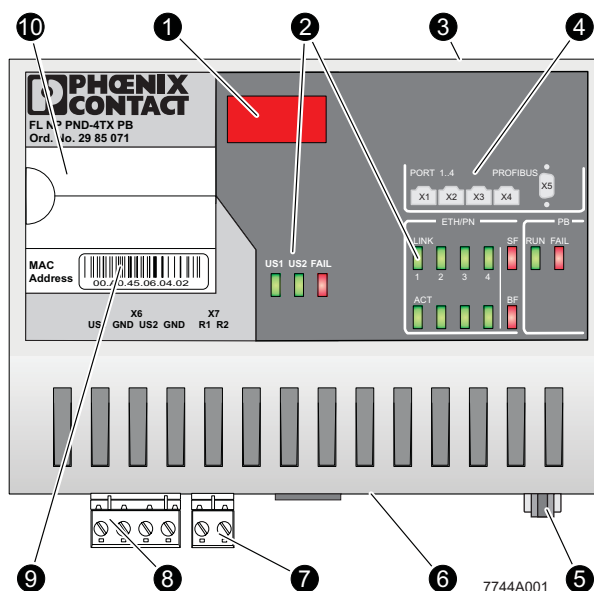


Figure 1 Front view of the FL NP PND-4TX PB

The following components are located on the proxy:

- 1 7-segment display
- 2 Diagnostic and status indicators
- 3 Slot for the parameterization memory
- 4 Diagram of Ethernet port numbering and the PROFIBUS DP connection
- 5 PROFIBUS DP connection
- 6 Ethernet ports
- 7 COMBICON alarm contact
- 8 Supply voltage
- 9 MAC address
- 10 Labeling field

6 Interfaces of the FL NP PND-4TX PB proxy

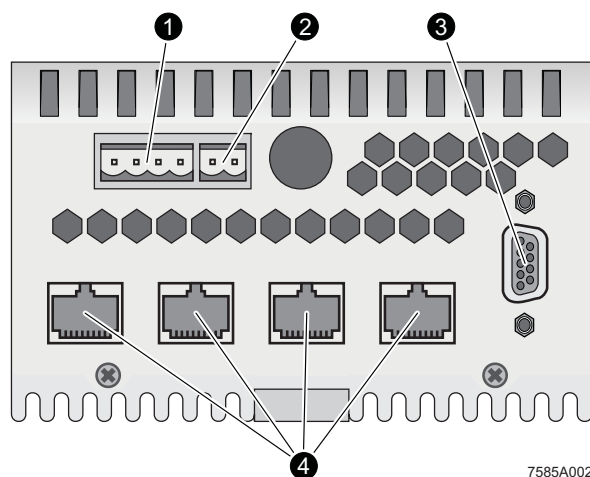

7585A002

Figure 2 Interfaces of the FL NP PND-4TX PB

The following interfaces are located on the proxy:

- 1 Supply voltage
- 2 COMBICON alarm contact
- 3 PROFIBUS DP connection (RS-485, 9-pos. D-SUB female connector)
- 4 Ethernet ports

7 Slot for the parameterization memory

The slot for the optional parameterization memory is located on the top of the housing (3 in Figure 1)

8 Housing dimensions of the proxy

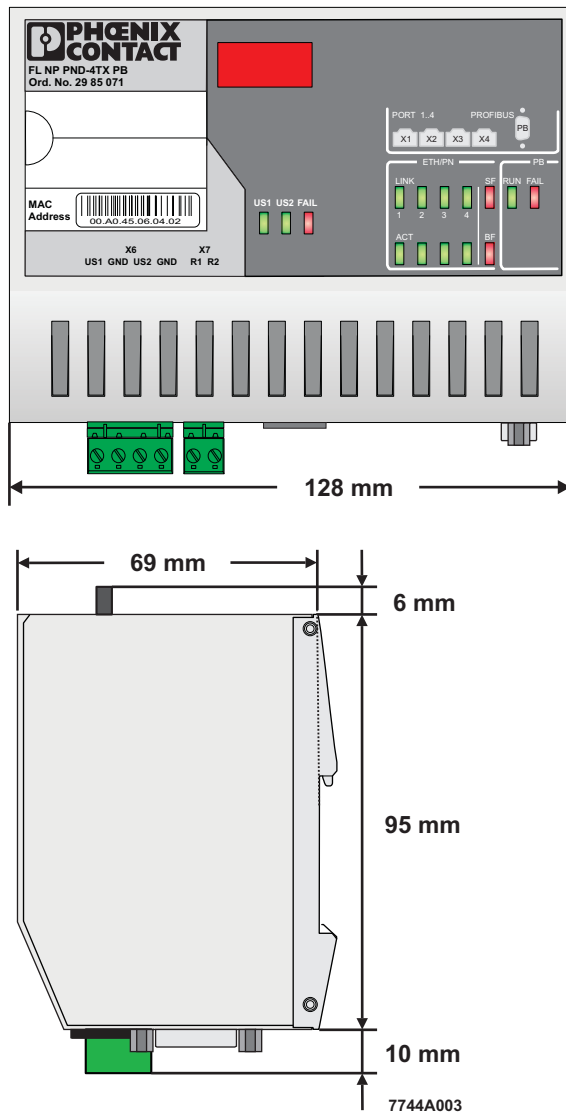


Figure 3 Housing dimensions of the proxy FL NP PND-4TX PB

Depth: 69 mm/71 mm from the top edge of the DIN rail

9 Mounting and removing the proxy

Mount the proxy on a clean DIN rail according to DIN EN 50022 (e.g., NS 35 ... from Phoenix Contact). To avoid contact resistance only use clean, corrosion-free DIN rails. Before mounting the modules, an end clamp (E/NS 35N, Order No. 0800886) should be mounted on the left-hand side next to the proxy to stop the modules from slipping on the DIN rail. The end clamp should only be mounted on the right-hand side once the proxy has been mounted.

10 Assignment of Ethernet ports

The proxy has four Ethernet ports in RJ45 format (4 in Figure 2 on page 5). Only one twisted pair cable with an impedance of 100Ω may be connected to a port. Depending on the Ethernet network used, the data transmission rate is 10 Mbps or 100 Mbps. The Ethernet ports of the proxy can detect a pair of incorrectly connected receive cables (RD+/RD-) and correct them using the auto polarity correction function.¹⁰

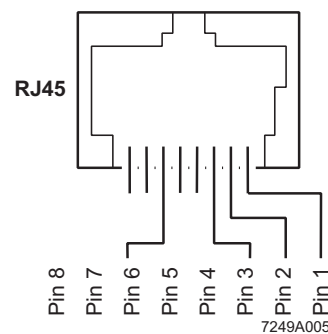


Figure 4 Pin assignment of the Ethernet port in RJ45 format

PIN	Assignment	Meaning
8	res.	Reserved
7	res.	Reserved
6	TD-	Transmit data -
5	res.	Reserved
4	res.	Reserved
3	TD+	Transmit data +
2	RD-	Receive data -
1	RD+	Receive data +

11 Assignment of the D-SUB female connector (PROFIBUS connection)

Connect the device to the PROFIBUS DP master via a 9-pos. D-SUB female connector.

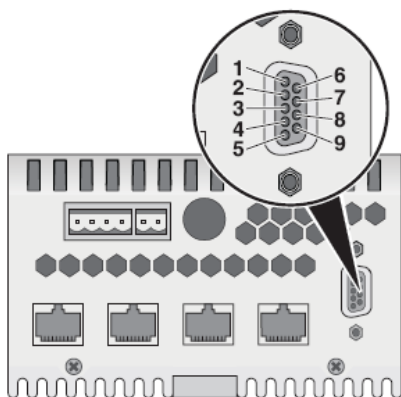


Figure 5 Assignment of the D-SUB female connector (PROFIBUS connection)

PIN	Assignment
1	Braided shield, functional earth ground
2	Not used
3	RxD/TxD-P (cable B)
4	Not used
5	DGND
6	VP (+5 V DC)
7	Not used
8	RxD/TxD-N (cable A)
9	Not used
Housing	Functional earth ground

12 Status and diagnostic indicators (LEDs)

Des.	Color	Status	Meaning
Power supply			
US1	Green	ON	Supply voltage 1 present
		OFF	Supply voltage 1 too low
US2	Green	ON	Supply voltage 2 present
		OFF	Supply voltage 2 too low
FAIL	Red	ON	Alarm contact open → an error has occurred
		OFF	Alarm contact closed → no error has occurred
Port 1 ... 4/Ethernet			
A LINK LED (link) for each port is located on the proxy (2 in Figure 1 on page 5).			
LINK	Green	ON	Physical network connection ready to operate
		Flash-ing	Flashing function of the configuration and parameterization software active/ device search
		OFF	Physical network connection interrupted or not present
An ACT LED (activity) for each port is located below the LINK LED on the proxy (2 in Figure 1 on page 5).			
ACT	Green	ON	Sending/receiving data telegrams
		OFF	Not sending/receiving data telegrams
SF	Red	ON	Group error message: PROFIBUS DP master fault due to faulty parameterization, bus error, I/O error.
		OFF	Group error message not present.
BF	Red	ON	No PROFINET IO communication.
		Flash-ing	No communication connection to the PROFINET IO controller, connection is being established.
		OFF	The PROFINET IO controller has established an active communication connection to the PROFINET IO device.
PROFIBUS			
RUN state	Green	ON	PROFIBUS DP master has started.
		OFF	PROFIBUS DP master has not started.
FAIL	Red	ON	PROFIBUS DP faulty parameterization, bus error, I/O error, individual slave diagnostics present.
		OFF	PROFIBUS DP running without any errors.

13 Installation

13.1 Connecting the supply voltage/grounding

The 24 V supply voltage (8 in Figure 1 on page 5) and the alarm contact (7 in Figure 1 on page 5) are connected via two COMBICON terminal block bases. To connect the cables, remove the relevant terminal block base.

13.2 Connecting the supply voltage

The 24 V supply voltage can be connected redundantly. Both voltage inputs (U_{S1} and U_{S2}) each are electrically isolated from one another and the housing.

In the event of redundant voltage supply the higher of the two voltages supplies the device. The load is not distributed.



In the event of non-redundant power supply, the proxy indicates a supply voltage failure via the alarm contact and the FAIL LED. This error message can be prevented, as shown in Figure 6, version 1, by connecting the supply voltage to both terminal blocks in parallel.

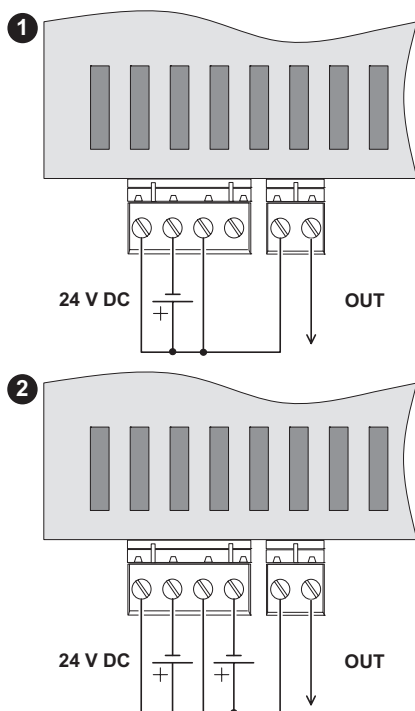


Figure 6 Typical connection of supply voltage and alarm contact

13.3 Connecting the alarm contact

The proxy has a floating alarm contact. This alarm contact monitors the operation of the proxy and thus enables remote diagnostics. The alarm contact is floating and is closed during correct operation of the proxy. An error is indicated if the contact is interrupted. The alarm contact can be connected as shown in Figure 6 or it can be supplied from an independent voltage source.

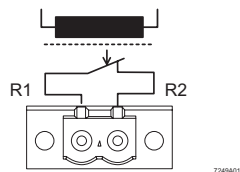


Figure 7 Basic circuit diagram for the alarm contact

13.4 Connecting functional earth ground

Snapping the proxy onto a grounded DIN rail connects it to the ground potential..



WARNING: Ensure correct grounding

Grounding protects people and machines against hazardous voltages. Correct grounding, taking the local conditions into account, is vital.

All Factoryline devices must be grounded so that any possible interference is shielded from the data telegram and discharged to ground potential.

A conductor of at least 2.5 mm² must be used for grounding. When mounting on a DIN rail, the DIN rail must be connected with protective earth ground using grounding terminal blocks. The module is connected to protective earth ground via the metal base element.

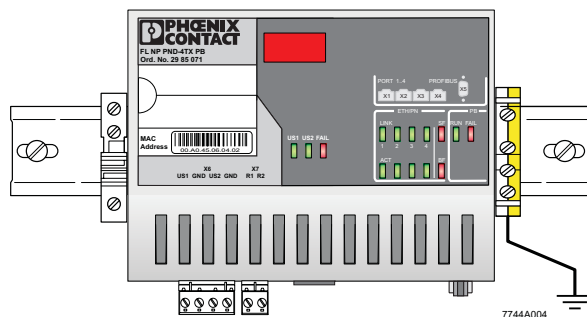


Figure 8 Proxy on a grounded DIN rail

13.5 Connecting PROFIBUS DP

Connect the bus cable, which goes to the first PROFIBUS DP device, to the PROFIBUS DP connection (RS-485, 9-pos. D-SUB female connector) on the proxy (3 (PROFIBUS) in Figure 2 on page 5).

14 Meaning of the 7-segment display

14.1 On startup/during operation

Display	Meaning
Pxx	Boot phases in the firmware
-I I-	PROFINET communication has been interrupted or not initialized (see BF LED).
- - -	PROFINET communication has been initialized, data is being exchanged.
	Operating (no errors present, PROFIBUS is in RUN mode (see RUN LED)).
"0-0", alternating with an error indication or RUN line; the LINK LED flashes during the device search.	PROFINET device identification
"bUS" alternating with "xxx"	PROFIBUS DP bus error message xxx_{dec} = Faulty PROFIBUS DP slave address In the event of a group error message (SF), the PROFIBUS address is indicated on the 7-segment display. Example: Addressing in Table 15 on page 12 "bUS" alternating with "5" using a second clock cycle.  NOTE: The output PROFIBUS address does not match the slot address in PC WorX. As a rule: PROFIBUS address + 2 = Slot address The error cause can be decoded from the corresponding slave diagnostic data.
"Err" alternating with "xxx" "xxx" between "0xx" and "1xx"	Error in the PROFIBUS firmware.  Remedy: Reset the proxy. Switch the supply voltage off and on again. If the error occurs again, please contact Phoenix Contact and state the error number that is displayed.

Display (continued)	Meaning
"Err" alternating with "3xx"	301_{dec} = The device has problems with the configuration received from the control system at module level.  Remedy: - Check the configuration in the control system. The modules and submodules must comply with PNO standards. - Reset the proxy. To do this, switch the supply voltage off and on again. If the error occurs again, please contact Phoenix Contact and state the error number that is displayed.
	303_{dec} = The parameterization memory was removed during operation.  Remedy: Only use compatible parameterization memories. - Switch off the supply voltage. - Insert the parameterization memory in the card holder. - Switch on the supply voltage.
"Err" alternating with "3xx"	304_{dec} = Error in the startup parameterization.  Remedy: - Check the device firmware. - Check the version of the device integration in PC WorX. - Reset the proxy. To do this, switch the supply voltage off and on again. If the error occurs again, please contact Phoenix Contact and state the error number that is displayed.
	305_{dec} = Error during firmware update via TFTP connection.  Remedy: - Check the Ethernet connection. - Check the TFTP server configuration. - Confirm the BootP server.
	306_{dec} = Faulty firmware. Device waiting for BootP response with new firmware reference.  Remedy: Reset the proxy. To do this, switch the supply voltage off and on again. If the error occurs again, please contact Phoenix Contact and state the error number that is displayed.

Display (continued)	Meaning
"Err" alternating with "4xx"	402_{dec} = The parameterization memory was removed during operation. 403_{dec} = The parameterization memory is not a compatible memory card. 404_{dec} = The parameterization memory was inserted while the supply voltage was switched on. The parameterization memory can only be written again once the supply voltage has been switched on and off (reset).  Remedy: Only use compatible parameterization memories from Phoenix Contact. • Switch off the supply voltage. • Insert the parameterization memory in the card holder. • Switch on the supply voltage.
"Err" alternating with "xxx" All other error codes:	These are error codes that cannot be attributed to a specific error cause.  Remedy: Reset the proxy. • Switch the supply voltage off and on again. If the error occurs again, please contact Phoenix Contact and state the error number that is displayed.

14.2 During firmware update



An application note for firmware update via TFTP (AH EN TFTP FIRMWARE UPDATE) can be found at www.phoenixcontact.net/catalog.

Display	Meaning
03	The TFTP server is receiving a request for a firmware download.
04	The firmware is being downloaded to the memory.
05	The firmware transfer to the memory is complete.

15 Diagnostic indicators (LEDs) during operation and in the event of an error

LED		Meaning	Measure/remedy in the event of an error
States during operation:			
SF	OFF	The PROFINET IO device is waiting for communication with the PROFINET IO controller. PROFIBUS has not started.	
BF	Flashing		
RUN state	OFF		
FAIL	OFF		
SF	OFF	The PROFINET IO controller was able to establish communication without errors. PROFIBUS has been started and does not indicate any errors.	
BF	OFF		
RUN state	ON		
FAIL	OFF		
States in the event of an error:			
SF	ON	The PROFIBUS configuration that was sent by the PROFINET IO controller to the PROFINET IO device could not be executed, as not all PROFIBUS DP slaves entered the "Data exchange" state. Refer to the diagnostic indicator on the 7-segment display ("bUS").	Check and correct the PROFIBUS parameterization created.
BF	OFF		Analyze the slave diagnostic data of the PROFIBUS DP slave indicated as being faulty.
RUN state	ON		Check the electrical connection of the slave indicated as being faulty.
FAIL	ON		
SF	ON	One or more slaves transmitting external, manufacturer-specific error messages. Refer to the diagnostic indicator on the 7-segment display ("bUS").	Check the PROFIBUS DP slaves for errors such as open circuit at the inputs or outputs, or for possible manufacturer-specific error messages.
BF	OFF		
RUN state	ON		
FAIL	OFF		
SF	OFF	The physical communication connection was interrupted, the PROFINET IO controller can no longer be accessed. No link.	Restore the physical connection.
BF	ON		
RUN state	OFF		
FAIL	OFF		
ACT	OFF		
LINK	OFF		

16 Properties of the PROFINET IO proxy

The PROFIBUS DP proxy can only be configured using PC WorX. Once the device has been integrated in the PROFINET project tree, the following appears:

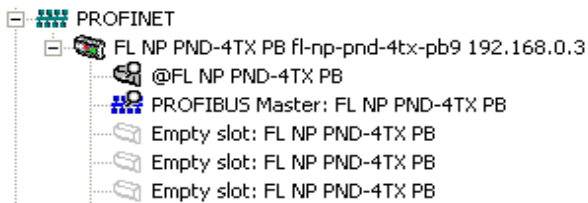


Figure 9 Integrating the device in the PROFINET project tree under PC WorX

PROFIBUS address	Slot	Text	Description	Data length
	0	@FL NP PND-4TX PB	Device proxy with PDEV parameters for topology detection	0 DW
	1	PROFIBUS master	Device parameters for the master	0 DW
0	2	Empty slot	Empty slot which cannot be used.	0 DW
1	3	Empty slot	Empty slot which can be filled with modules (PROFIBUS devices).	0 DW
2	4	Empty slot	Empty slot which cannot be used when the master is in the default setting.	0 DW
3	5	...	First free slot that can be used	...
x	x+2	...		...

Fill the entire bus configuration with additional empty slots and with the PROFIBUS devices.



The device slot clearly specifies the PROFIBUS DP address, e.g., a PROFIBUS device occupying slot 9 automatically uses PROFIBUS address 7.

Parameterization of the PROFIBUS DP master

The PROFIBUS master is parameterized at slot 1.

Baudrate	9.6 kbaud to 12 Mbaud
PROFIBUS master address	Usually: 2  From the point of view of PROFINET, the PROFIBUS master is always at slot 1, regardless of how the PROFIBUS address is set.



The following bus parameters for timing should only be modified if you are familiar with the meaning of the individual parameters.

16.1 Adjustable bus parameters:

Parameter	Meaning
Tslot (Slot time)	Specifies the maximum waiting time the sender should wait for a response from the partner. $\text{Maximum Tsdr} + 15 \leq \text{Tslot} \leq 16,383 \text{ t_bit}$
Max Tsdr (Maximum station delay responder)	Specifies the maximum time within which the partner must send the response. $35 + 2 \times \text{Tset} + \text{Tqui} \leq \text{Max Tsdr} \leq 1023 \text{ t_bit}$
Min Tsdr (Minimum station delay responder)	Specifies the minimum time that must elapse before the partner sends the response. $11 \text{ t_bit} \leq \text{Min Tsdr} \leq \text{Max Tsdr} - 1$
Tset	Specifies the time the partner requires to generate the response after receiving a frame. $1 \text{ t_bit} \leq \text{Tset} \leq 494 \text{ t_bit}$
Tqui	Specifies the time a repeater requires to change data direction. $0 \text{ t_bit} \leq \text{Tqui} \leq \text{Minimum} (31 \text{ t_bit}, \text{Minimum Tsdr} - 1)$
Gap Factor	Specifies the number of token rotations before a new active device (master) is added to the ring. $1 \leq \text{Gap Factor} \leq 100$
Retry Limit	Specifies the number of attempts to resend a telegram if a device does not respond. $1 \leq \text{Retry Limit} \leq 15$
Delta_Ttr (Target rotation time)	Added to the calculated Ttr in order to operate networks with multiple masters. $256 \text{ t_bit} \leq \text{Ttr} \leq 16,776,960 \text{ t_bit}$
Ttr (Target rotation time)	Specifies the maximum time for a token rotation. During this time, the active devices receive the token for sending data once. $256 \text{ t_bit} \leq \text{Ttr} \leq 16,776,960 \text{ t_bit}$ The user interface calculates an optimum Ttr for the various bus profiles. If user-defined bus parameters are set, the Ttr can be entered directly. In this case, the Delta_Ttr parameter is not taken into consideration.
Watchdog	Specifies the watchdog time that is to be transmitted to the slaves. The slaves must be addressed by the master within this time, otherwise they switch to the safe state. $10 \text{ ms} \leq \text{Watchdog} \leq 650 \text{ s}$

Non-adjustable bus parameters:

Parameter	Meaning
Tid2 (Idle time 2)	Specifies the maximum waiting time between two consecutive transmit telegrams. Tid2 = Maximum Tsdr
Tid1 (Idle time 2)	Specifies the minimum waiting time between two consecutive transmit telegrams. Tid1 = $35 + 2 \times \text{Tset} + \text{Tqui}$
Trdy (Ready time)	Specifies the minimum time that must elapse before a sender can receive a response. Trdy = Minimum Tsdr

17 Startup of the PROFIBUS proxy

17.1 Offline configuration

- Drag the device from the "FL NP PND-4TX PB 01/1.1.1/01" device catalog under "FL/Gateway" and drop it in the structure. The following appears:

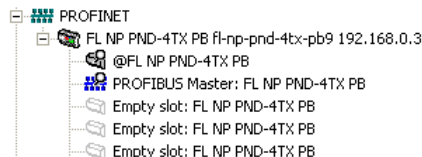


Figure 10 PROFINET project tree

- Open the device details assigned to the slot 1 "PROFIBUS Master" under the "PROFIBUS Parameters" tab and modify these as necessary.
 - Set the baud rate to the desired value.
 - The PROFIBUS master address should usually be set to 2.
 - Adjust the other timing settings only if necessary.
- For all PROFIBUS DP devices that are to be connected below the proxy, import the GSD file by right-clicking in the "Device Dialog" window and selecting "Import GSD". For each device, these files can be downloaded from the manufacturer websites.
- Select "View" and "Open Module Catalog". With the focus on the project tree at slot level, all the modules, i.e., PROFIBUS devices, that have been imported are displayed in the module catalog, e.g., FLM BK PB...

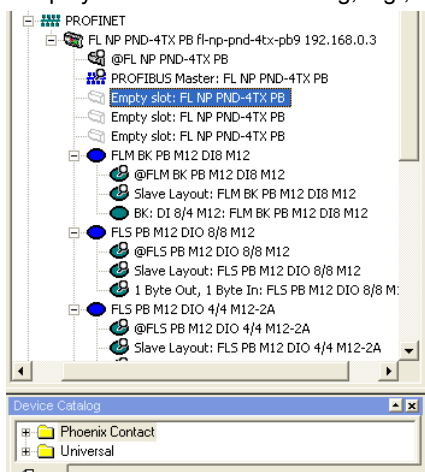


Figure 11 Module catalog

- These PROFIBUS DP devices can be inserted as devices directly below the proxy using drag and drop. The insertion position also directly specifies the PROFIBUS DP address, as illustrated below: Slot number -2 = PROFIBUS DP address
- Fill unused PROFIBUS DP addresses with empty slots. For reasons of clarity, we recommend using slot 5 and onwards, i.e., PROFIBUS address 3.

For modular PROFIBUS DP devices, with the focus on the device in the "Bus Structure" in the "Module Catalog" window, the modules that can be inserted (subslots from the point of view of PROFINET) are automatically displayed.

- For modular devices, select the correct module in the corresponding order and drag and drop it in the bus topology.

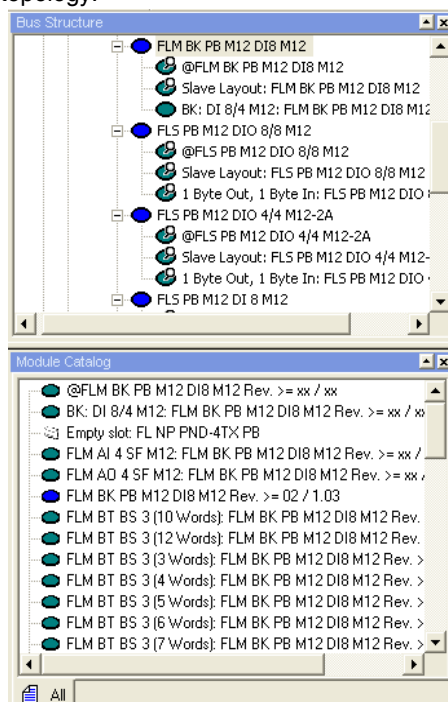


Figure 12 Module catalog for modular devices

17.2 Diagnostics

In PC WorX, the PROFIBUS diagnostics are displayed in the Diag+ window via the PROFINET diagnostics.



NOTE: The familiar PROFIBUS slot address is mapped to subslots in PROFINET. Here, the following applies: PROFINET address + 1 = PROFINET subslot address.

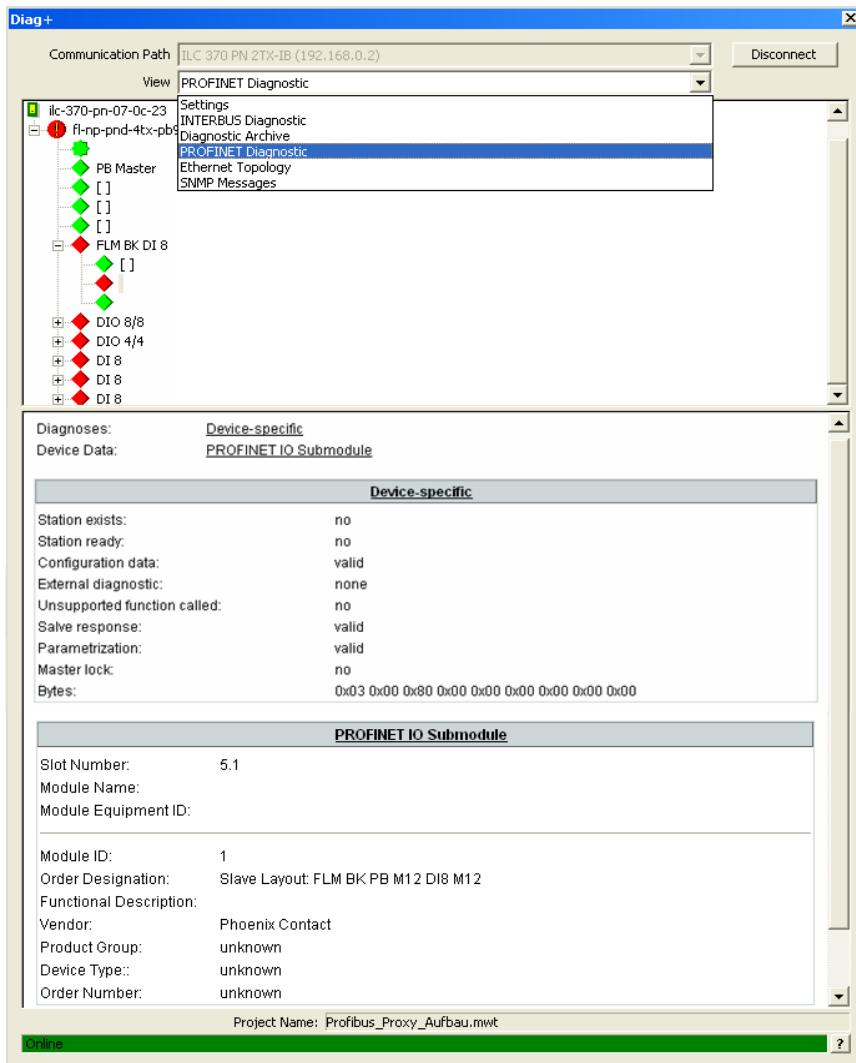


Figure 13 Diagnostics

18 Parameterization memory

The parameterization memory simplifies the replacement of devices if the PROFINET IO controller does not support automatic, topology-based device identification.



Only insert or remove the parameterization memory when the power is switched off.



First insert the parameterization memory in the device and then name the device. If this procedure is reversed, the device name will not be stored on the parameterization memory. In this case, the device name is lost and you must carry out device naming again.

单击下面可查看定价，库存，交付和生命周期等信息

[>>Phoenix Contact\(菲尼克斯\)](#)