

# AL8807EV1 EVALUATION BOARD USER GUIDE

# DESCRIPTION

The AL8807EV1, Figure 1, is a double sided evaluation board for the AL8807 step-down, or 'buck', LED driver with internal switch. The evaluation board is preset to drive 680mA into a single LED, or multiple LEDs, the maximum number of which depends on their total forward voltage drop and the supply voltage. (The maximum drive current of the AL8807 is 1000mA)

The operating voltage is nominally 30 volts, but it can be reduced to a minimum of 6 volts. The 68uH inductor used in the circuit is based on this nominal supply. The evaluation board should be connected as in Figure 1 below.

## Note: The evaluation board does not have reverse supply protection.

The nominal current, 680mA, is set with the 0R15 sense resistor, R1.

Terminal CTRL provides a connection point for DC or PWM dimming and shutdown.

#### Warning: At 30V nominal operation with 680mA output, the LED will be hot and very bright



Figure 1: AL8807EV1 evaluation board and connection diagram

| AL8807EV1 Connection Point Definition |   |  |  |  |  |  |
|---------------------------------------|---|--|--|--|--|--|
| Name                                  | Description   |  |  |  |  |  |
| Vin                                   | Positive supply voltage. 6 to 30V   |  |  |  |  |  |
| GND                                   | Supply Ground (0V).   |  |  |  |  |  |
| CTRL                                  | Internal voltage ref. pin (2.5V). This pin can be used to achieve dimming and for switching the output current off.<br>Leave floating for normal operation. |  |  |  |  |  |
| LED A                                 | LED A connects to the external LED anode  |  |  |  |  |  |
| LED K                                 | LED K connects to the external LED cathode  |  |  |  |  |  |

### AL8807 DEVICE DESCRIPTION


The AL8807 is a continuous mode inductive driver in a SOT25 package, for driving one or more series-connected LEDs efficiently from a voltage source higher than the LED voltage. The device includes the output switch and a current sense circuit, which requires an external sense resistor to set the nominal current up to 1000mA.

## AL8807 DEVICE FEATURES

- Drives one or more series-connected LEDs
- LEDs up to 1000mA.
- Internal 30V switch.
- Wide input voltage: 6V to 30V.
- Inherent open circuit LED protection.
- Brightness control using DC or PWM.

#### **DEVICE APPLICATIONS**

- LED flashlights.
- High Power LED driving.
- Low-voltage halogen replacement LEDs.
- Automotive lighting.
- Illuminated signs.

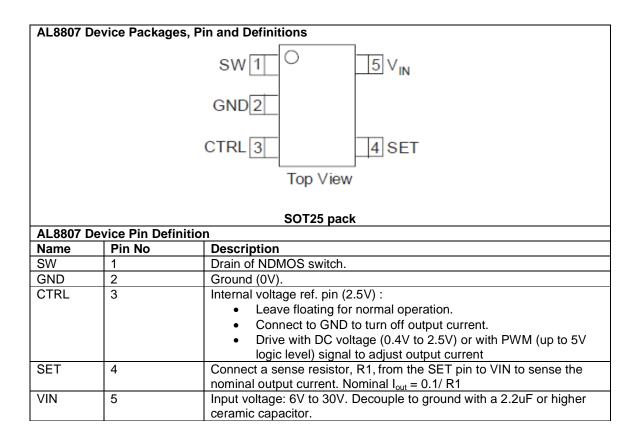

### **ORDERING INFORMATION**

| EVALBOARD ORDER |           |  |  |  |  |  |
|-----------------|-----------|--|--|--|--|--|
|                 | NUMBER    |  |  |  |  |  |
|                 | AL8807EV1 |  |  |  |  |  |

DEVICE ORDER NUMBER AL8807E5TA

Please note: Evaluation boards are subject to availability and qualified sales leads.

## AL8807EV1 EVALUATION BOARD REFERENCE DESIGN

The AL8807EV1 is configured to the reference design in Figure 2.

The operating voltage is a nominal 30V. The nominal current is set at 680mA with a 0R15 sense resistor R1. The circuit operates in continuous mode at approximately 188kHz, with a 68uH inductor and one LED.

Both DC and PWM dimming can be achieved by driving the CTRL pin. For DC dimming, the CTRL pin may be driven between 0.5V and 2.5V adjusting the output current from 25% to 100% of  $I_{LED}$ .

Driving the CTRL pin below 0.4V will shut down the output current.

A PWM signal (low level  $\leq$  0.4V and high level > 2.5) allows the output current to be adjusted above or below the level set by the resistor connected to SET input pin. The PWM frequency can be around 100Hz to 1kHz, providing a resolution of 10 bits.

For low frequency PWM, C2 should be removed from the evaluation board, to give a more accurate duty cycle .

Shorting R2 will connect the test pin CTRL to device pin CTRL, if required.

For other reference designs or further applications information, please refer to the AL8807 datasheet.

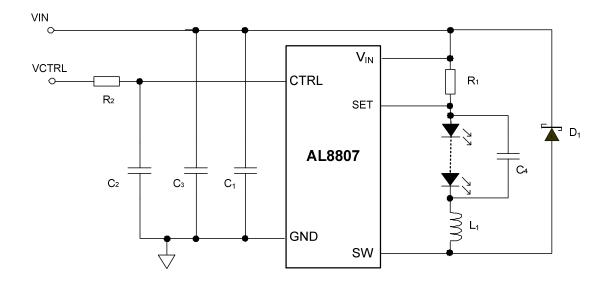


Figure 2: Schematic diagram

#### AL8807 Operation

In normal operation, when a voltage is applied at +Vin, the AL8807 internal NDMOS switch is turned on. Current starts to flow through sense resistor R1, inductor L1, and the LED. The current ramps up linearly, the ramp rate being determined by the input voltage +Vin and the inductor L1. This rising current produces a voltage ramp across R1. The internal circuit of the AL8807 senses the voltage across R1 and applies a proportional voltage to the input of the internal comparator. When this voltage reaches an internally set upper threshold, the NDMOS switch is turned off. The inductor current continues to flow through R1, L1, the LED and the Schottky diode D1, and back to the supply rail, but it decays, with the rate of decay determined by the forward voltage drop of the LEDs and the Schottky diode. This decaying current produces a falling voltage at R1, which is sensed by the AL8807. A voltage proportional to the sense voltage across R1 is applied at the input of the internal comparator. When this voltage falls to the internally set lower threshold, the NDMOS switch is turned on again. This switch-on-and-off cycle continues to provide the average LED current set by the sense resistor R1. Please refer to the datasheets for the threshold limits, AL8807 internal circuits, electrical characteristics and parameters.

| Ref | Value       | Package | Part Number          | Manufactu | Notes           |
|-----|-------------|---------|----------------------|-----------|-----------------|
|     |             |         |                      | rer       |                 |
| U1  | AL8807      | SOT25   | AL8807E5TA           | Diodes    | DC-DC converter |
|     |             |         |                      | Zetex     |                 |
| D1  | 40V, 3A     |         | B240A                | Diodes    | Schottky diode  |
|     |             |         |                      | Zetex     |                 |
| R1  | 0R15        | 0805    |                      | Generic   | 5%              |
| R2, | 1K          | 0805    |                      | Generic   | 1%              |
| C1  | 4.7uF 50V   | 1210    |                      | Generic   | X7R             |
|     |             |         | C1210X475K5RAC       | KEMET     |                 |
| C2  | Not Fitted  |         |                      |           | Optional soft   |
|     |             |         |                      |           | start capacitor |
| C3  | 100nF, 100V | 0805    |                      | Generic   | X7R             |
|     |             |         | NMC0805X7R104K100 PF | NIC Comps |                 |
|     |             |         | GRM21BR71H104KA01L   | MURATA    |                 |
| C4  | 100nF 100V  | 1206    |                      | Generic   | X7R             |
|     |             |         | NMC1206X7R104K100    | NIC Comps |                 |
| L1  | 68uH        |         | MSS1038-683ML        | Coilcraft |                 |
|     |             |         | NPIS24H680MTRF       | NIC Comps |                 |

### AL8807EV1 Component list

Note: The component part numbers are correct at the time of publication. Diodes Inc reserves the right to substitute other parts where necessary, without further notification.

## AL8807EV1 Basic operation at full voltage

- 1. Connect Vin and GND Warning: The board does not feature reverse battery/supply protection.
- 2. Set the PSU to 30V
- 3. Turn on the PSU and the LED will illuminate and the current should be approximately 680mA. <u>Warning: Do not stare at the LED directly.</u>

#### Switching the output current off

Shorting the CTRL pin to GND will cause the LED current to go to zero.

#### Soft start

Adding a C2 capacitor will create a soft-start power-up sequence (0.1ms/nF). This delay will reduce the PWM dimming performance.

#### Changing the LED current

- 1. Remove R1.
- 2. Calculate and replace sense resistor, R1, the value of which is based on the required LED current without dimming. R1 can be calculated using following equation :

 $R1 = 0.1 V / I_{OUT}$ 

where  $I_{OUT}$  = the LED current. R1 = the sense resistor value in ohms. 0.1V is the nominal sense voltage with 'CTRL' open circuit or set to 2.5V.

The device calculator at the address below can be used to speed up the redesign phase:

http://www.diodes.com/destools/calculators.html

### PERFORMANCE

The system efficiency depends on the sense resistor, supply voltage, switching frequency and the number of LEDs.

With a 30V supply and one LED, the switching frequency is typically 188kHz. The efficiency level is >85%.

For further advice, please contact your local Diodes Field Applications Engineer, or one of our sales offices listed on the back page of this document.

# INTENTIONALLY BLANK

# INTENTIONALLY BLANK

#### IMPORTANT NOTICE

DIODES INCORPORATED MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION).

Diodes Incorporated and its subsidiaries reserve the right to make modifications, enhancements, improvements, corrections or other changes without further notice to this document and any product described herein. Diodes Incorporated does not assume any liability arising out of the application or use of this document or any product described herein; neither does Diodes Incorporated convey any license under its patent or trademark rights, nor the rights of others. Any Customer or user of this document or products described herein in such applications shall assume all risks of such use and will agree to hold Diodes Incorporated and all the companies whose products are represented on Diodes Incorporated website, harmless against all damages.

Diodes Incorporated does not warrant or accept any liability whatsoever in respect of any products purchased through unauthorized sales channels. Should Customers purchase or use Diodes Incorporated products for any unintended or unauthorized application, Customers shall indemnify and hold Diodes Incorporated and its representatives harmless against all claims, damages, expenses, and attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized application.

Products described herein may be covered by one or more United States, international or foreign patents pending. Product names and markings noted herein may also be covered by one or more United States, international or foreign trademarks.

#### LIFE SUPPORT

Diodes Incorporated products are specifically not authorized for use as critical components in life support devices or systems without the express written approval of the Chief Executive Officer of Diodes Incorporated. As used herein:

A. Life support devices or systems are devices or systems which:

- 1. are intended to implant into the body, or
- 2. support or sustain life and whose failure to perform when properly used in accordance with instructions for use provided in the labeling can be reasonably expected to result in significant injury to the user.
- B. A critical component is any component in a life support device or system whose failure to perform can be reasonably be expected to cause the failure of the life support device or to affect its safety or effectiveness.

Customers represent that they have all necessary expertise in the safety and regulatory ramifications of their life support devices or systems, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of Diodes Incorporated products in such safety-critical, life support devices or systems, notwithstanding any devices- or systems-related information or support that may be provided by Diodes Incorporated. Further, Customers must fully indemnify Diodes Incorporated and its representatives against any damages arising out of the use of Diodes Incorporated products in such safety-critical, life support devices or systems.

Copyright © 2011, Diodes Incorporated

www.diodes.com

#### Sales offices

#### The Americas

3050 E. Hillcrest Drive Westlake Village, CA 91362-3154 Tel: (+1) 805 446 4800 Fax: (+1) 805 446 4850

Europe Kustermannpark Balanstraße 59, D-81541 München Germany Tel: (+49) 894 549 490 Fax: (+49) 894 549 4949

Taiwan 7F, No. 50, Min Chuan Road Hsin-Tien Taipei, Taiwan Tel: (+886) 289 146 000 Fax: (+886) 289 146 639

Shanghai Rm. 606, No.1158 Changning Road Shanghai, China Tel: (+86) 215 241 4882 Futian CBD, Fax (+86) 215 241 4891

#### Shenzhen Room A1103-04.

ANLIAN Plaza, #4018 Jintian Road Shenzhen, China Tel: (+86) 755 882 849 88 Fax: (+82) 312 731 885 Fax: (+86) 755 882 849 99

#### Korea

6 Floor, Changhwa B/D, 1005-5 Yeongtong-dong, Yeongtong-gu, Suwon-si, Gyeonggi-do, Korea 443-813 Tel: (+82) 312 731 884

#### Issue 1 – October 2011 © Diodes Incorporated 2011

单击下面可查看定价,库存,交付和生命周期等信息

>>Diodes Incorporated(达迩科技(美台))