

AC Current Transducer AT-B10

Split-core transducer for the electronic measurement of AC waveform currents, with galvanic separation between the primary circuit and the secondary circuit. 0-10 V DC switch voltage output proportional to the RMS value of the primary current.



Electrical data

Primary nominal RMS current I _{PN} (At RMS)		Output voltage	Туре		
		$U_{\rm out}$ (V DC)			
5		0-10	AT 5 B10		
10		0-10	AT 10 B1		
20		0-10	AT 20 B1		
50		0-10	AT 50 B1		
100 150		0-10 0-10		AT 100 B10 AT 150 B10	
R	Load resista	ance		≥2	MΩ
U _c	Supply voltage			self-powered	
U _{sz}		nping voltage		15	V
Îp	Overload ca		IS	120	% of I _{PN}
-P		- 1 min		150	% of $I_{\rm PN}$
Ре	rformance	data			
Е	Frror @ I	, $T_{A} = 25 \text{ °C}$ (excluding c	offset)	< ±1.5	% of I _{PN}
ε	Linearity er			< ±0.5	% of I _{PN}
-	-	o 90 % of the final output	t value for <i>L</i> step	≤ 300	ms
t _{D 90} BW			value for r _{PN} step	⊒ 300 50/60	Hz
DW	Frequency	bandwidth		30/00	I IZ
Ge	neral data				
T _A	Ambient op	erating temperature		-20 +60	°C
T _{Ast}	Ambient sto	orage temperature		-20 +85	°C
RH	Relative hu	midity (non-condensing) 1)	≤ 85	%
		ove sea level	<i>,</i>	2000	m
				Indoor use	only
т	Mass			90	g

Protection degree ¹⁾ Long term exposure to high humidity environment may affect to product Notes: reliability. Deviation of the output during test IEC 61000-4-3 @ 10 V/m between 280 to 500 MHz.

N° U2.05.08.200.0; U2.05.13.200.0; U2.05.17.200.0; U2.05.25.200.0; U2.05.34.200.0; U2.05.39.200.0

9November2022/version 10

IPxx

LEM reserves the right to carry out modifications on its transducers, in order to improve them.





Features

- RMS (average) output
- 0-10 V DC voltage output
- Split-core type
- Ø 16 mm sensing aperture for non-contact measurement
- Terminal output
- Insulating plastic case recognized according to UL 94-V0.

Advantages

- High insulation between primary and secondary circuits
- Compact case
- Cost-effective solution
- · Easy installation.

Applications

- Automation and Supervision Current measurement for process regulation by distributed PLCs or remote control (e.g. SCADA software)
- Safety and Condition Monitoring

Load monitoring for protection systems and predictive maintenance (e.g. conveyers, pumps or HVAC motors).

Application domains

Energy

Automation.

Page 1/4

IP 40



Current Transducer AT-B10

Insulation coordination						
$U_{ m Nm}$	Rated insulation RMS voltage ¹⁾ , reinforced or basic insulation with IEC 61010-1 standards and following conditions - Reinforced insulation - Over voltage category CAT III - Pollution degree PD2 - Heterogeneous field	300 s:	V			
$U_{\rm d}$	RMS voltage for AC insulation test ²⁾ , 50 Hz, 1 min	3.5 Min	kV			
d_{Cp}	Creepage distance	6	mm			
d _{CI}	Clearance	6	mm			
CTI	Comparative tracking index (group I)	600				

<u>Notes:</u> ¹⁾ If insulated cable is used for the primary circuit, the voltage category could be improved according to the insulation coordination given by the cable manufacturer

²⁾ Between primary (completely filling the hole) and secondary.



Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly! Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications. Ensure you get up-to-date technical information that can be found in the latest associated datasheet under www.lem.com.



Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage! The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training.

The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor. The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturer' operating instructions.



Caution, Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (eg. primary conductor, power supply). The user shall ensure to take all measures necessary to protect against electrical shock. The transducer is a build-in device containing conducting parts that shall not be accessible after installation. A protective enclosure or additional insulation barrier may be necessary. The transducer shall not be put into operation if the jaw opening is open


(split core version) or the installation is not completed. Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.

1217 Meyrin www.lem.com



Dimensions AT-B10 (in mm)

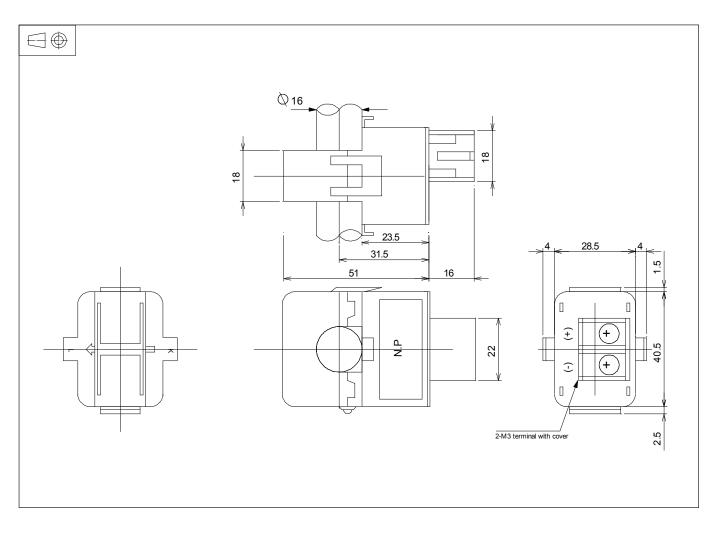

Remark

Κ

L

• Attention: contact areas (air gap) must be kept clean


(particle free) to ensure proper performance.

Mechanical characteristics

- General tolerance
- Primary aperture
- Fastening

Connections

• Wires up to 2 mm Ø

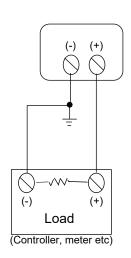

±1 mm

Ø 16 mm

Cable tie

9November2022/version 10

LEM reserves the right to carry out modifications on its transducers, in order to improve them.

Page 4/4

LEM International SA Route du Nant-d'Avril, 152 1217 Meyrin www.lem.com

2 Measure +

1 Measure -

单击下面可查看定价,库存,交付和生命周期等信息

>>LEM(莱姆)