Atmel M90E32AS

# Atmel

# Enhanced Poly-Phase High-Performance Wide-Span Energy Metering IC

# DATASHEET

# FEATURES

## **Metering Features**

- Metering features fully in compliance with the requirements of IEC62052-11, IEC62053-22 and IEC62053-23, ANSI C12.1 and ANSI C12.20; applicable in polyphase class 0.2S, 0.5S or class 1 watt-hour meter or class 2 var-hour meter.
- Accuracy of  $\pm 0.1\%$  for active energy and  $\pm 0.2\%$  for reactive energy over a dynamic range of 6000:1.
- Temperature coefficient is 6 ppm/ °C (typ.) for on-chip reference voltage. Automatically temperature compensated.
- Single-point calibration on each phase over the whole dynamic range for active energy; no calibration needed for reactive/ apparent energy.
- $\pm$  1 °C (typ.) temperature sensor accuracy.
- Flexible piece-wise non-linearity compensation: three current (RMS value)-based segments with two programmable thresholds for each phase. Independent gain and phase angle compensation for each segment.
- Electrical parameters measurement: less than  $\pm 0.5\%$  fiducial error for Vrms, lrms, mean active/ reactive/ apparent power, frequency, power factor and phase angle.
- Active (forward/reverse), reactive (forward/reverse), apparent energy with independent energy registers.
- Programmable startup and no-load power thresholds.
- 6 dedicated ADCs for phase A/B/C current and voltage sampling circuits. Current sampled over Current Transformer (CT) or Rogowski coil (di/dt coil); voltage sampled over resistor divider network.
- Programmable power modes: Normal, Idle, Detection and Partial Measurement mode.
- Fundamental (0.2%) and harmonic (1%) active energy with dedicated energy / power registers and independent energy outputs.
- Current and voltage instantaneous signal monitoring.
- Enhanced event detection: sag, over voltage, phase loss, over current, reverse V/I phase sequence, calculated neutral line current I<sub>NC</sub> over-current and frequency upper and lower threshold.

#### **Other Features**

- 3.3V single power supply. Operating voltage range: 2.8V~3.6V. Metering accuracy guaranteed within 3.0V~3.6V.
- Four-wire SPI interface.
- Programmable voltage sag detection and zero-crossing output.
- Crystal oscillator frequency: 16.384MHz. On-chip two capacitors and no need of external capacitors.
- Lower power consumption. I=13mA (typ.) in Normal mode.
- TQFP48 package.
- Operating temperature: -40  $^\circ\!\!\mathbb{C}$  ~ +85  $^\circ\!\!\mathbb{C}$  .

# **APPLICATION**

- Poly-phase energy meters of class 0.2S, 0.5S and class 1 which are used in three-phase four-wire (3P4W, Y0) or three-phase three-wire (3P3W, Y or Δ) systems.
- Power monitoring instruments which need to measure voltage, current, mean power, etc.

# **GENERAL DESCRIPTION**

The M90E32AS is a poly-phase high performance wide-dynamic range metering IC. The M90E32AS incorporates 6 independent 2nd order sigma-delta ADCs, which could be employed in three voltage channels (phase A, B and C) and three current channels (phase A, B, C) in a typical three-phase four-wire system.


The M90E32AS has an embedded DSP which executes calculation of active energy, reactive energy, apparent energy, fundamental and harmonic active energy over ADC signal and on-chip reference voltage. The DSP also calculates measurement parameters such as voltage and current RMS value as well as mean active/reactive/apparent power.

A four-wire SPI interface is provided between the M90E32AS and the external microcontroller.

The M90E32AS is suitable for poly-phase multi-function meters which could measure active/reactive/apparent energy and fundamental/harmonic energy either through four independent energy pulse outputs CF1/CF2/CF3/CF4 or through the corresponding registers.

The ADC and auto-temperature compensation technology for reference voltage ensure the M90E32AS's long-term stability over variations in grid and ambient environment conditions.

# **BLOCK DIAGRAM**

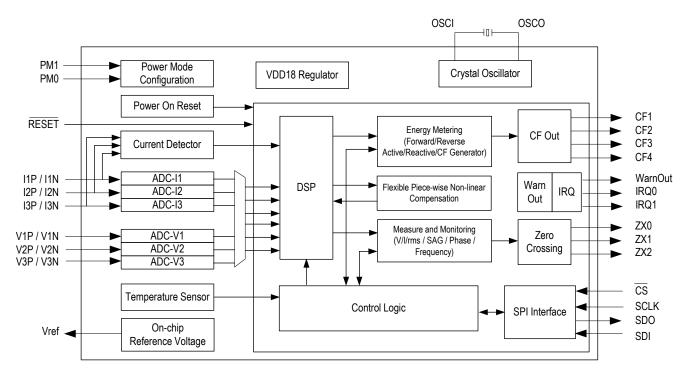





# **Table of Contents**

FE		URES	1
AF	PPL		2
GI		RAL DESCRIPTION	2
	-		
		ASSIGNMENT	
2	PIN	DESCRIPTION	. 8
3	FUI	NCTION DESCRIPTION	10
Ŭ		POWER SUPPLY	
	-	RESET	-
	3.3	3.3.1 RESET Pin	-
		3.3.2 Power On Reset (POR)	-
		3.3.3 Software Reset	
	31	ANALOG/DIGITAL CHANNEL MAPPING	
		METERING FUNCTION	
	3.5	3.5.1 Theory of Energy Registers	
		3.5.2 Energy Registers	
		3.5.3 Energy Pulse Output	
		3.5.4 Startup and No-load Power	
	36	MEASUREMENT FUNCTION	
	0.0	3.6.1 Active/ Reactive/ Apparent Power	-
		3.6.2 Fundamental / Harmonic Active Power	
		3.6.3 Mean Power Factor (PF)	
		3.6.4 Voltage / Current RMS	
		3.6.5 Phase Angle	
		3.6.6 Frequency	
		3.6.7 Temperature	
		3.6.8 Peak Value	17
	3.7	POWER QUALITY MONITORING	18
		3.7.1 Instantaneous Signal Monitoring	18
		3.7.2 Instantaneous Signal Related Status And Events	19
		3.7.3 Frequency Monitoring Related Status And Events	20
		3.7.4 Zero-Crossing Detection	20
		3.7.5 Neutral Line Overcurrent Detection	20
		3.7.6 Phase Sequence Error Detection	20
	3.8	POWER MODE	21
		3.8.1 Normal Mode (N Mode)	21
		3.8.2 Idle Mode (I Mode)	
		3.8.3 Detection Mode (D Mode)	
		3.8.4 Partial Measurement mode (M Mode)	
		3.8.5 Transition of Power Modes	
	3.9	EXTERNAL COMPONENT COMPENSATION	
		3.9.1 Gain Based Compensation	
		3.9.2 Delay/Phase Based Compensation	29

4	SPI	INTERFACE	30
	4.1	INTERFACE DESCRIPTION	.30
	4.2	SPI INTERFACE	.30
		4.2.1 SPI Slave Interface Format	30
		4.2.2 Reliability Enhancement Feature	31
5	RE	GISTER	32
	5.1	REGISTER LIST	.32
	5.2	SPECIAL REGISTERS	. 39
		5.2.1 Configuration Registers CRC Generation	39
		5.2.2 IRQ and WarnOut Signal Generation	
		5.2.3 Special Configuration Registers	45
	5.3	LOW-POWER MODES REGISTERS	.48
		5.3.1 Detection Mode Registers	
		5.3.2 Partial Measurement mode Registers	
	5.4	CONFIGURATION AND CALIBRATION REGISTERS	
		5.4.1 Configuration Registers	
		5.4.2 Energy Calibration Registers	
		5.4.3 Fundamental/Harmonic Energy Calibration registers	
		5.4.4 Measurement Calibration	
		5.4.5 EMM Status	
	5.5	ENERGY REGISTER	
		<ul><li>5.5.1 Regular Energy Registers</li><li>5.5.2 Fundamental / Harmonic Energy Register</li></ul>	
	E 6	MEASUREMENT REGISTERS	
	5.0	5.6.1 Power and Power Factor Registers	
		5.6.2 Fundamental/ Harmonic Power and Voltage/ Current RMS Registers	
		5.6.3 Peak, Frequency, Angle and Temperature Registers	
6	FLE	ECTRICAL SPECIFICATION	
U		ELECTRICAL SPECIFICATION	
		METERING/ MEASUREMENT ACCURACY	
	0.2	6.2.1 Metering Accuracy	
		6.2.2 Measurement Accuracy	
	6.3	INTERFACE TIMING	
	0.0	6.3.1 SPI Interface Timing (Slave Mode)	
	6.4	POWER ON RESET TIMING	
	-	ZERO-CROSSING TIMING	
		VOLTAGE SAG AND PHASE LOSS TIMING	
		ABSOLUTE MAXIMUM RATING	
0			
		AGE DIMENSIONS	
R		SION HISTORY	83

# List of Tables

Table-1	Pin Description	8
Table-2	Power Mode Mapping	21
Table-3	Digital I/O and Power Pin States in Idle Mode	22
Table-4	Compensation Related Registers	
Table-5	Register List	32
Table-6	Configuration Registers	
Table-7	Calibration Registers	57
Table-8	Fundamental/Harmonic Energy Calibration Registers	58
Table-9	Measurement Calibration Registers	59
Table-10	EMM Status Registers	59
Table-11	Regular Energy Registers	67
Table-12	Fundamental / Harmonic Energy Register	68
Table-13	Power and Power Factor Register	69
Table-14	Fundamental/ Harmonic Power and Voltage/ Current RMS Registers	70
Table-15	Peak, Frequency, Angle and Temperature Registers	71
Table-16	Metering Accuracy for Different Energy within the Dynamic Range	74
Table-17	Measurement Parameter Range and Format	75
Table-18	SPI Timing Specification	
Table-19	Power On Reset Specification	77
Table-20	Zero-Crossing Specification	78

# List of Figures

Figure-1	M90E32AS Block Diagram	2
Figure-2	Pin Assignment (Top View)	7
Figure-3	Channel to Phase Mapping	11
Figure-4	Energy Accumulation Diagram	13
Figure-5	CFx Pulse Output Regulation	14
Figure-6	Active Power Startup/Noload Processing	14
Figure-7	Fundamental Active Power Startup/Noload Processing	15
Figure-8	Harmonic Active Power Startup/Noload Processing	15
Figure-9	Power Quality Monitor in Datapath	18
Figure-10	Block Diagram in Normal Mode	21
Figure-11	Block Diagram in Idle Mode	22
Figure-12	Block Diagram in Detection Mode	24
Figure-13	Block Diagram in Partial Measurement mode	25
Figure-14	Power Mode Transition	26
Figure-15	Segment Gain Compensation	28
Figure-16	Slave Mode	30
Figure-17	Read Sequence	31
Figure-18	Write Sequence	31
Figure-19	CRC Checking Diagram	39
Figure-20	IRQ and WarnOut Generation	40
Figure-21	Current Detection Register Latching Scheme	48
Figure-22	SPI Timing Diagram	76
Figure-23	Power On Reset Timing (M90E32AS and MCU are Powered on Simultaneously)	77
Figure-24	Power On Reset Timing in Normal & Partial Measurement Mode	77
Figure-25	Zero-Crossing Timing Diagram (per phase)	78
Figure-26	Voltage Sag and Phase Loss Timing Diagram	79

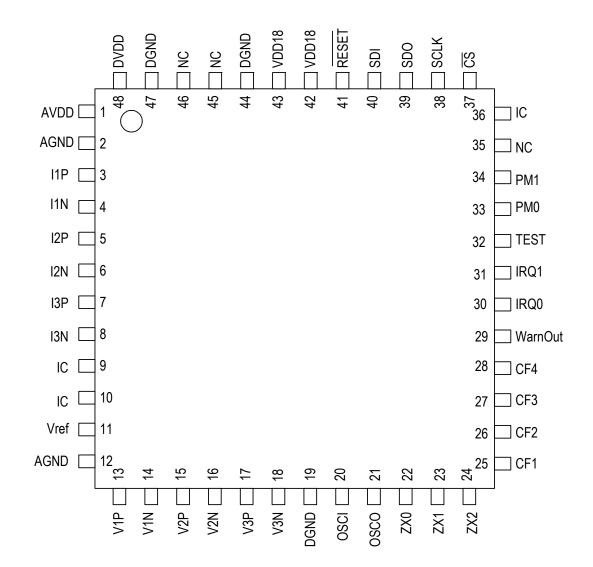


Figure-2 Pin Assignment (Top View)

# **2 PIN DESCRIPTION**

Table-1 Pin Description

Name	Pin No.	I/O	Туре	Description
Reset	41	I	LVTTL	<b>Reset:</b> Reset Pin (active low) This pin should connect to ground through a 0.1 $\mu$ F filter capacitor and a 10k $\Omega$ resistor to VDD. In application it can also directly connect to one output pin from microcontroller (MCU).
AVDD	1	I	Power	<b>AVDD: Analog Power Supply</b> This pin provides power supply to the analog part. This pin should connect to DVDD and be decoupled with a $0.1\mu$ F capacitor.
DVDD	48	I	Power	<b>DVDD: Digital Power Supply</b> This pin provides power supply to the digital part. It should be decoupled with a $10\mu$ F capacitor and a $0.1\mu$ F capacitor.
VDD18	42, 43	Р	Power	<b>VDD18: Digital Power Supply (1.8 V)</b> These two pins should be connected together and connected to ground through a 10µF capacitor.
DGND	19, 44, 47	I	Power	DGND: Digital Ground
AGND	2, 12	I	Power	AGND: Analog Ground
l1P l1N	3 4	I	Analog	I1P: Positive Input for Analog ADC Channel I1N: Negative Input for Analog ADC Channel These pins are differential inputs for analog ADC channel. These 6 analog ADC channels can be flexibly mapped, refer to 3.4 Analog, digital Channel Mapping. <sup>1</sup>
12P 12N	5 6	I	Analog	I2P: Positive Input for Analog ADC Channel I2N: Negative Input for Analog ADC Channel These pins are differential inputs for analog ADC channel. These 6 analog ADC channels can be flexibly mapped, refer to 3.4 Analog
				digital Channel Mapping. <sup>1</sup>
I3P I3N	7 8	I	Analog	<ul> <li>I3P: Positive Input for Analog ADC Channel</li> <li>I3N: Negative Input for Analog ADC Channel</li> <li>These pins are differential inputs for analog ADC channel.</li> <li>These 6 analog ADC channels can be flexibly mapped, refer to 3.4 Analog.</li> </ul>
				digital Channel Mapping. <sup>1</sup>
Vref	11	0	Analog	<b>Vref: Output Pin for Reference Voltage</b> This pin should be decoupled with a $4.7\mu$ F capacitor, it is better to add a $0.1\mu$ F ceramic capacitor.
V1P V1N	13 14	I	Analog	V1P: Positive Input for Analog ADC Channel V1N: Negative Input for Analog ADC Channel These pins are differential inputs for analog ADC channel. These 6 analog ADC channels can be flexibly mapped, refer to 3.4 Analog
				digital Channel Mapping. <sup>1</sup>
V2P V2N	15 16	I	Analog	V2P: Positive Input for Analog ADC Channel V2N: Negative Input for Analog ADC Channel These pins are differential inputs for analog ADC channel.
				These 6 analog ADC channels can be flexibly mapped, refer to 3.4 Analog digital Channel Mapping. <sup>1</sup>
V3P V3N	17 18	I	Analog	V3P: Positive Input for Analog ADC Channel V3N: Negative Input for Analog ADC Channel These pins are differential inputs for analog ADC channel. These 6 analog ADC channels can be flexibly mapped, refer to 3.4 Analog digital Channel Mapping. <sup>1</sup>



## Table-1 Pin Description (Continued)

OSCI OSCO	20	I	OSC	
			030	OSCI: External Crystal Input
				OSCO: External Crystal Output
	21	0	OSC	A 16.384 MHz crystal is connected between OSCI and OSCO. There
				two on-chip capacitors, therefore no need of external capacitors.
ZX0	22			ZX2/ZX1/ZX0:Zero-Crossing Output
ZX1	23	0	LVTTL	These pins are asserted when voltage or current crosses zero. Zero-cro
ZX2	24			ing mode can be configured by the ZXConfig register (07H).
CF1	25	0	LVTTL	CF1: (all-phase-sum total) Active Energy Pulse Output
050	20	0		CF2: (all-phase-sum total) Reactive/ Apparent Energy Pulse Output
CF2	26	0	LVTTL	The output of this pin is determined by the CF2varh bit (b7, MMode0).
CF3	27	0	LVTTL	CF3: (all-phase-sum total) Active Fundamental Energy Pulse Outpu
CF4	28	0	LVTTL	CF4: (all-phase-sum total) Active Harmonic Energy Pulse Output
				WarnOut: Fatal Error Warning
		•		This pin is asserted high when there is metering related parameter ch
WarnOut	29	0	LVTTL	sum error. Otherwise this pin stays low. Refer to 5.2.2 IRQ and Warr
				Signal Generation.
				IRQ0: Interrupt Output 0
				This pin is asserted when one or more events in the EMMIntState0 regi
1000	00	0		(1CCH) occur. It is deasserted when there is no bit set in the EMMIntSta
IRQ0	30	0	LVTTL	register (1CCH).
				In Detection mode, the IRQ0 is used to indicate the output of current de
				tor. The IRQ0 state is cleared when entering or exiting Detection mode.
				IRQ1: Interrupt Output 1
				This pin is asserted when one or more events in the EMMIntState1 reg
IRQ1	31	0	LVTTL	(1D0H) occur. It is deasserted when there is no bit set in the EMMIntSta
ii (Q)	01	Ŭ		register (1D0H).
				In Detection mode, the IRQ1 is used to indicate the output of current de
				tor. The IRQ1 state is cleared when entering or exiting Detection mode.
PM0	33	1 <sup>2</sup>	LVTTL	PM1/0: Power Mode Configuration
PM1	34	I		These two pins define the power mode of M90E32AS. Refer to Table-2.
		-		CS: Chip Select (Active Low)
CS	37	$I^2$	LVTTL	In SPI mode, this pin must be driven from high to low for each read/ w
				operation, and maintain low for the entire operation.
SCLK	38	1 <sup>2</sup>	LVTTL	SCLK: Serial Clock
	00			This pin is used as the clock for the SPI interface. Refer to 4 SPI Interface
				SDO: Serial Data Output
SDO	39	0	LVTTL	This pin is used as the data output for the SPI mode. Refer to 4 SPI Ir
				face.
SDI	40	1 <sup>2</sup>	LVTTL	SDI: Serial Data Input
501	40	I		This pin is used as the data input for the SPI mode. Refer to 4 SPI Interface
TEST	32	I	LVTTL	This pin should be always connected to DGND in system application.
IC	9, 10, 36		LVTTL	These pins should be always connected to DGND in system application
NC	35, 45, 46			NC: These pins should be left open.

# **3 FUNCTION DESCRIPTION**

# 3.1 **POWER SUPPLY**

The M90E32AS works with single power rail 3.3V. An on-chip voltage regulator regulates the 1.8V voltage for the digital logic.

The regulated 1.8V power is connected to the VDD18 pin. It needs to be bypassed by an external capacitor.

The M90E32AS has four power modes: Normal (N mode), Partial Measurement (M mode), Detection (D mode) and Idle (I mode). In Idle and Detection modes the 1.8V power regulator is not turned on and the digital logic is not powered. When the logic is not powered, all the configured register values are not kept (all context lost) except for Detection mode related registers (10H~13H) for Detection mode configuration.

The registers in Partial Measurement mode or Normal mode have to be re-configured when transiting from Idle or Detection mode. Refer to <u>3.8 Power Mode</u> for power mode details.

## 3.2 CLOCK

The M90E32AS has an on-chip oscillator and can directly connect to an external crystal.

The OSCI pin can also be driven with a clock source.

The oscillator will be powered down in Idle and Detection power modes, as described in 3.8 Power Mode.

## 3.3 RESET

There are three reset sources for the M90E32AS:

- RESET pin
- On-chip Power On Reset circuit
- Software Reset generated by the SoftReset register

#### 3.3.1 RESET PIN

The  $\overline{\text{RESET}}$  pin can be asserted to reset the M90E32AS. The  $\overline{\text{RESET}}$  pin has RC filter with typical time constant of 2µs in the I/O, as well as a 2µs (typical) de-glitch filter.

Any reset pulse that is shorter than 2µs can not reset the M90E32AS.

#### 3.3.2 POWER ON RESET (POR)

The POR circuit resets the M90E32AS at power up.

POR circuit triggers reset when:

- DVDD power up with crossing the power-up threshold. Refer to Figure-24.
- VDD18 regulator changing from disable to enable, i.e. from Idle or Detection mode to Partial Measurement mode or Normal mode. Refer to Figure-23.

#### 3.3.3 SOFTWARE RESET

Chip reset can be triggered by writing to the SoftReset register in Normal mode. The software reset is the same as the reset scope generated from the RESET pin or POR.

These three reset sources have the same reset scope.

All digital logics and registers except for some special registers will be subjected to reset.

- Interface logic: clock dividers
- Digital core/ logic: All registers except for some special registers. Refer to 5.3.1 Detection Mode Registers.




# 3.4 ANALOG/DIGITAL CHANNEL MAPPING

Analog channel to digital channel mapping:

The 6 analog ADC channels can be flexibly mapped to the 6 digital metering/measuring channels (V/I phase A/B/C). Refer to the ChannelMapI and ChannelMapU registers for configuration.

Note that channel mapping is only valid in Normal mode and Patial Measurement mode.

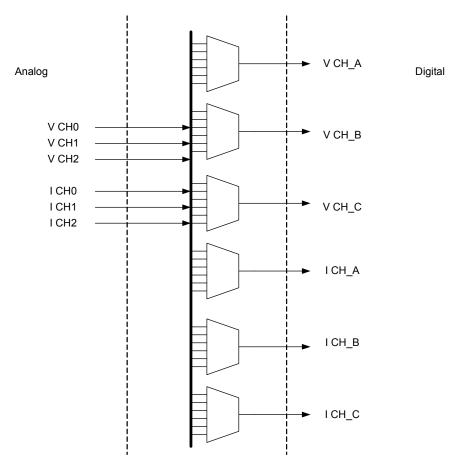

Flexible Channel mapping

Figure-3 Channel to Phase Mapping

## 3.5 METERING FUNCTION

Metering is enabled when any of the MeterEn bits are set.

When metering is not enabled, the CF pulse will not be generated and energy accumulator will not accumulate energy. All energy accumulation related status will be cleared, while startup/noload handling block related status will be still working.

The accumulated energy will be converted to pulse frequency on the CF pins and stored in the corresponding energy registers.

#### 3.5.1 THEORY OF ENERGY REGISTERS

The energy accumulation runs at 1 MHz clock rate by accumulating the power value calculated by the DSP processor.

The power accumulation process is equivalent to digitally integrating the instantaneous power with a delta-time of about 1us. The accumulated energy is used to calculate the CF pulses and the corresponding internal energy registers.

The accumulated energy is converted to frequency of the CF pulses. One CF usually corresponds to 1KWh / MC (MC is Meter Constant, e.g. 3200 imp/kWh), and is usually referenced as an energy unit in this datasheet. The internal energy resolution for accumulation and conversion is 0.01 CF.

The 0.01 CF pulse energy constant is referenced as 'PL\_constant'.

Within 0.01 CF, forward and reverse energy are counteracted. When energy exceeds 0.01 pulse, the respective forward/ reverse energy is increased.

Take the example of active energy. Suppose:

T0: Forward energy register is 12.34 pulses and reverse energy register is 1.23 pulses.

From t0 to t1: 0.005 forward pulses appeared.

From t1 to t2: 0.004 reverse pulses appeared.

From t2 to t3: 0.005 reverse pulses appeared.


From t3 to t4: 0.007 reverse pulses appeared.

The following table illustrates the process of energy accumulation process:

	t0	t1	t2	t3	t4
Input energy	+ 0.005	-0.004	-0.005	-0.007	
Bidirectional energy accumulator	0.005	0.001	-0.004	-0.001	
Forward 0.01 CF	0	0	0	0	
Reverse 0.01CF	0	0	0	1	
Forward energy register	12.34	12.34	12.34	12.34	12.34
Reverse energy register	1.23	1.23	1.23	1.23	1.24

When forward/reverse energy reaches 0.01 pulse, the respective register is updated. When forward or reverse energy reaches 1 pulse, CFx pins output pulse and the CFxRevST bits (b3~0, EMMState0) are updated. Refer to Figure-4.



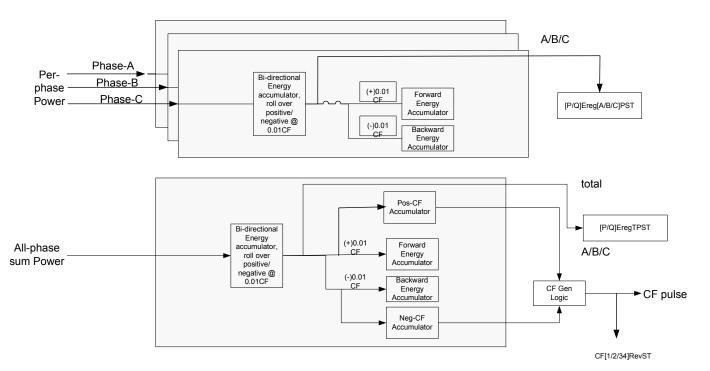

#### Figure-4 Energy Accumulation Diagram

For all-phase-sum total of active, reactive and (arithmetic sum) apparent energy, the associated power is obtained by summing the power of the three phases. The accumulation method of all-phase-sum energy is determined by the EnPC/EnPB/ EnPA/ABSEnP/ABSEnQ bits (b0~b4, MMode0).

Note that the direction of all-phase-sum power and single-phase power might be different.

#### 3.5.2 ENERGY REGISTERS

The M90E32AS meters non-decomposed total active, reactive and apparent energy, as well as decomposed active fundamental and harmonic energy. The registers are listed as below.

#### 3.5.2.1 Total Energy Registers

Each phase and all-phase-sum has the following registers:

- Active forward/ reverse
- Reactive forward/ reverse
- Apparent energy

Altogether there are 20 energy registers. Those registers are defined in 5.5.1 Regular Energy Registers.

#### 3.5.2.2 Fundamental and Harmonic Energy Registers

The M90E32AS counts decomposed active fundamental and harmonic energy. Reactive energy is not decomposed to fundamental and harmonic.

The fundamental/harmonic energy is accumulated in the same way as active energy accumulation method described above.

Registers:

- Fundamental / harmonic
- all-phase-sum / phase A / phase B / phase C
- Forward / reverse

Altogether there are 16 energy registers. Refer to 5.5.2 Fundamental / Harmonic Energy Register.



#### 3.5.3 ENERGY PULSE OUTPUT

CF1 is fixed to be total active energy output (all-phase-sum). Both forward and reverse energy registers can generate the CF pulse (change of forward/ reverse direction can generate an interrupt if enabled).

CF2 is reactive energy output (all-phase-sum) by default. It can also be configured to be arithmetic sum apparent energy output (all-phase-sum).

CF3 is fixed to be active fundamental energy output (all-phase-sum).

CF4 is fixed to be active harmonic energy output (all-phase-sum).

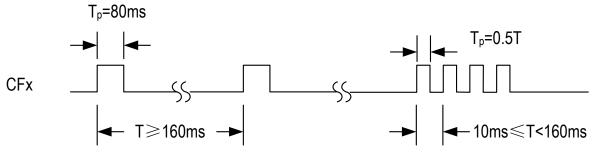


Figure-5 CFx Pulse Output Regulation

For CFx pulse width regulation, refer to Figure-5.

Case1 T>=160ms, Tp=80ms

Case 2 10ms<=T<160ms, Tp=T/2

#### 3.5.4 STARTUP AND NO-LOAD POWER

There are startup power threshold registers (e.g. PStartTh(35H)). Refer to 5.4 Configuration and Calibration Registers. The power threshold registers are defined for all-phase-sum active, reactive and apparent power. The M90E32AS starts metering when the corresponding all-phase-sum power is greater than the startup threshold. When the power value is lower than the startup threshold, energy is not accumulated and it is assumed as in no-load status. Refer to Figure-6.

There are also no-load Current Threshold registers for Active, Reactive and Apparent energy metering participation for each of the 3 phases. If |P|+|Q| is lower than the corresponding power threshold, that particular phase will not be accumulated. Refer to the PStartTh register and other threshold registers.

There are also no-load status bits (the TPnoload/TQnoload bits (b14~15, Fundamental / Harmonic Energy Register)) defined to reflect the no-load status. The M90E32AS does not output any pulse in no-load status. The power-on state is of no-load status.

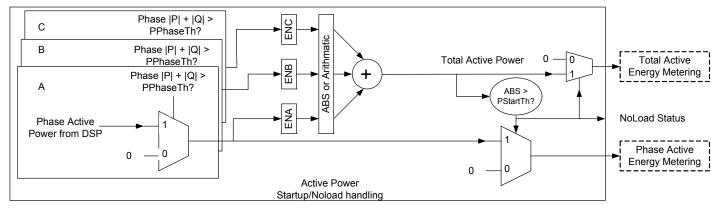


Figure-6 Active Power Startup/Noload Processing



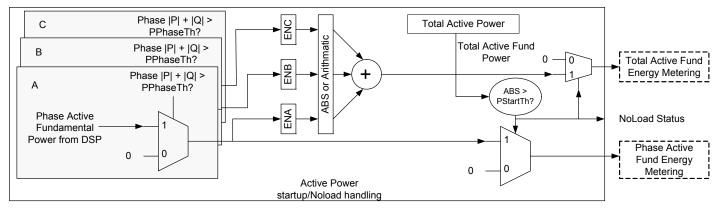


Figure-7 Fundamental Active Power Startup/Noload Processing

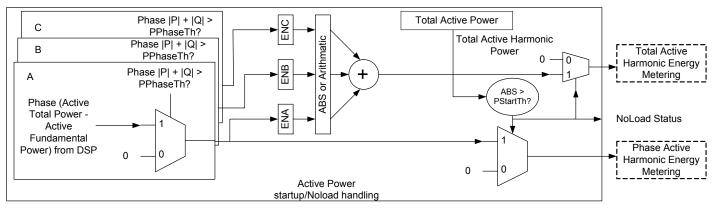


Figure-8 Harmonic Active Power Startup/Noload Processing

Atmel

## 3.6 MEASUREMENT FUNCTION

Measured parameters can be divided to 8 types as follows:

- Active/ Reactive/ Apparent Power
- Fundamental/ Harmonic Power
- RMS for Voltage and Current
- Power Factor
- Phase Angle
- Frequency
- Temperature
- Peak Value

Measured parameters are average values that are averaged among 16 phase-voltage cycles (about 320ms at 50Hz) except for the temperature. The measured parameter update frequency is approximately 3Hz. Refer to Table-17.

#### 3.6.1 ACTIVE/ REACTIVE/ APPARENT POWER

Active/ Reactive/ Apparent Power measurement registers can be divided as below:

- active, reactive, apparent power
- all-phase-sum / phase A / phase B / phase C

Altogether there are 12 power registers. Refer to 5.6.1 Power and Power Factor Registers.

Per-phase apparent power is defined as the product of measured Vrms and Irms of that phase.

All-phase-sum power is measured by arithmetically summing the per-phase measured power. The summing of phases can be configured by the MMode0 register.

#### 3.6.2 FUNDAMENTAL / HARMONIC ACTIVE POWER

Fundamental / harmonic active power measurement registers can be divided as below:

- fundamental and harmonic power
- all-phase-sum / phase A / phase B / phase C

Altogether there are 8 power registers. Refer to 5.6.2 Fundamental/ Harmonic Power and Voltage/ Current RMS Registers.

#### 3.6.3 MEAN POWER FACTOR (PF)

Power Factor is defined for those cases: all-phase-sum / phase A / phase B / phase C.

Altogether there are 4 power factor registers. Refer to 5.6.1 Power and Power Factor Registers.

For all-phase:

PF\_all = All\_phase\_ sum active\_pow er All\_phase\_ sum apparent\_p ower

For each of the phase::

PF\_phase =  $\frac{active_power}{apparent_power}$ 

#### 3.6.4 VOLTAGE / CURRENT RMS

Voltage/current RMS registers can be divided as follows:

Per-phase: Phase A / Phase B / Phase C

Voltage / Current

#### **Neutral Line Current RMS:**

Neutral line current can be calculated by instantaneous value  $i_N = i_A + i_B + i_C$ .

Altogether there are 7 RMS registers.

Refer to 5.6.2 Fundamental/ Harmonic Power and Voltage/ Current RMS Registers.

#### 3.6.5 PHASE ANGLE

Phase Angle measurement registers can be divided as below:

- phase A / phase B / phase C
- voltage / current

Altogether there are 6 phase angle registers. Refer to 5.6.3 Peak, Frequency, Angle and Temperature Registers.

Phase Angle is measured by the time-difference between the Voltage and Current channel of the same phase.

#### 3.6.6 FREQUENCY

The frequency is measured basing on the zero-crossing point of voltage channels.

The phase A voltage signal zero-crossing will be used to compute the frequency. If phase A is in the SAG condition, phase C will be used. If phase C is also in SAG condition, phase B will be used.

If all the phases are in the SAG condition, Frequency will be measured based on the channels which are not in phaseLoss condition (with the same order). If all phases are lost, the frequency will return zero.

The frequency data is not averaged (updated cycle by cycle).

Refer to 5.6.3 Peak, Frequency, Angle and Temperature Registers.

#### 3.6.7 TEMPERATURE

Chip Junction-Temperature is measured roughly every 100 ms by on-chip temperature sensor.

Refer to 5.6.3 Peak, Frequency, Angle and Temperature Registers.

#### 3.6.8 PEAK VALUE

Altogether there are 6 peak value registers. Refer to 5.6.3 Peak, Frequency, Angle and Temperature Registers.

Refer to 3.7.1 Instantaneous Signal Monitoring.

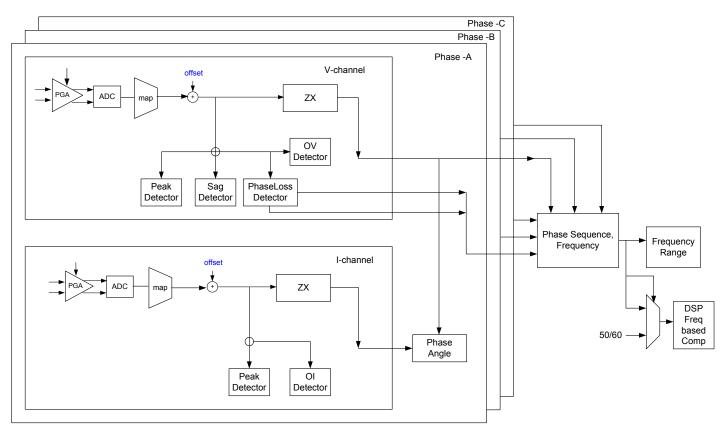


Figure-9 Power Quality Monitor in Datapath

## 3.7.1 INSTANTANEOUS SIGNAL MONITORING

Peak detection function:

Peak value for each channel was detected within timing period configured by the PeakDet\_period bits (b15~8, SagPeak-DetCfg).

The detected peak value is updated on period intersection.

Registers:

The peak value detected can be accessed through register U/I Peak registers. Refer to 5.6.3 Peak, Frequency, Angle and Temperature Registers.



#### 3.7.2 INSTANTANEOUS SIGNAL RELATED STATUS AND EVENTS

The registers involved are OVth, Olth, SagTh, PhaseLossTh and SagPeakDetCfg.

The result can be reflected in EMMState0 and EMMState1 registers, as well as EMMIntState0 and EMMIntState1 registers if the corresponding bits in EMMIntEn0/EMMIntEn1 registers are set.

The threshold value has the following relationship with the RMS register (MSB-16bit):

xxThRegValue = 
$$\frac{RmsRegValue * \sqrt{2}}{Vlgain/2^{14}}$$

Here VIgain is Ugain register value or Igain register value.

#### 3.7.2.1 Sag Detection

Usually in the application the Sag threshold is set to be 78% of the reference voltage. The M90E32AS generates Sag event when there are less than three 8KHz samples (absolute value) greater than the sag threshold in one detecting period. Refer to 6.6 Voltage Sag and Phase Loss Timing. The detecting period length can be configured by the Sag\_Period bits (b7~0, SagPeakDetCfg).

Sag status is asserted when there is no voltage instantaneous sample's absolute value goes beyond the Sag threshold in any phase. Sag status is cleared when there are three samples detected with absolute value above the Sag threshold.

For the computation of Sag threshold register value, refer to application note 46103.

The Sag event is captured by the SagPhaseIntST bits (b14-12, EMMIntState1). If the corresponding IRQ enable bits the SagPhaseIntEN bits (b14-12, EMMIntEn1) is set, IRQ can be generated. Refer to Figure-26.

#### 3.7.2.2 Phase Loss Detection

The phase loss detection detects if there is one or more phases' voltage is less than the phase-loss threshold voltage.

The processing and handling is similar to sag detection, only the threshold is different. The threshold computation flow is also similar. The typical threshold setting could be 10% Un or less.

If any phase line is detected as in phase-loss mode, that phase's zero-crossing detection function (both voltage and current) is disabled.

#### 3.7.2.3 Over Voltage (OV) Detection

When any phase's absolute voltage sample instantaneous value goes beyond the over voltage threshold, the Over Voltage status is asserted. The status is de-asserted when the voltage sample instantaneous value go back below the over voltage threshold.

Change of the Over Voltage status can generate interrupt and flagged in the EMMState0 and EMMIntState0 registers.

#### 3.7.2.4 Over Current (OI) Detection

When any phase's absolute current sample instantaneous value go beyond the over current threshold, the Over Current status is asserted. The status is de-asserted when the current sample instantaneous value go back below the over current threshold.

Change of the Over Current status can generate interrupt and flagged in the EMMState0 and EMMIntState0 registers.

**Atmel** 

#### 3.7.3 FREQUENCY MONITORING RELATED STATUS AND EVENTS

The measured frequency is compared with two thresholds configured in the the FreqLoTh register and the FreqHiTh register.

If the measured frequency goes beyond the range defined by the two thresholds, the FreqLoST bit (b11, EMMState1) and FreqHiST bit (b15, EMMState1) will be asserted.

The interrupt status will be updated as well; and if enabled, interrupt signal can be asserted.

#### 3.7.4 ZERO-CROSSING DETECTION

Zero-crossing detector detects the zero-crossing point of the fundamental component of voltage and current for each of the 3 phases. Refer to 6.5 Zero-Crossing Timing.

Zero-crossing signal can be independently configured and output. Refer to the definition of the ZXConfig register.

#### 3.7.5 NEUTRAL LINE OVERCURRENT DETECTION

The neutral line rms current (calculated) I<sub>NC</sub> is checked with the threshold defined in the InWarnTh register. If the N Line current is greater than the threshold, the INOv0ST bit (b7, EMMState0) is set. IRQ0 is generated if the INOv0IntEN bit (b7, EMMIntEn0) is set.

#### 3.7.6 PHASE SEQUENCE ERROR DETECTION

The phase sequence is detected in two cases: 3P4W and 3P3W, which is defined by the 3P3W bit (b8, MMode0).

#### 3P4W case:

Correct sequence: Voltage/current zero-crossing sequence: phase-A, phase-B and phase-C.

#### 3P3W case:

Correct sequence: Voltage/current zero-crossing between phase-A and phase-C is greater than 180 degree.

If the above mentioned criteria are violated, it is assumed as a phase sequence error, the URevWnST bit (b9, EMMState0) or the IRevWnST bit (b9, EMMState0) will be set.



## 3.8 POWER MODE

The M90E32AS has four power modes. The power mode is solely defined by the PM1 and PM0 pins.

PM1:PM0 Value	Power Mode
11	Normal (N mode)
10	Partial Measurement (M mode)
01	Detection (D mode)
00	Idle (I mode)

#### Table-2 Power Mode Mapping

#### 3.8.1 NORMAL MODE (N MODE)

In Normal mode, the default is that all function blocks are active except for current detector block. Refer to Figure-10. The current detector can be enabled and calibrated in normal mode using control bits in DetectCtrl register.

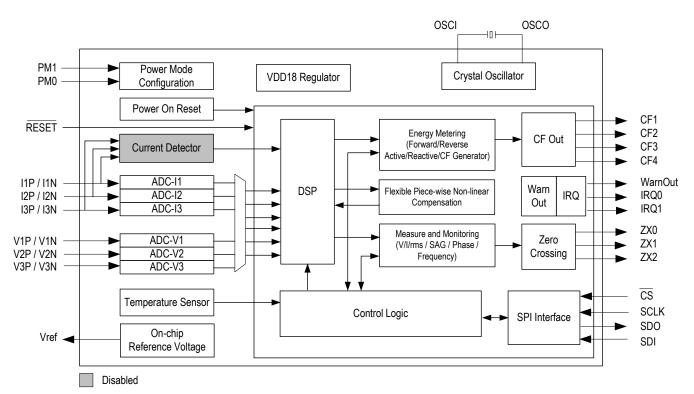


Figure-10 Block Diagram in Normal Mode


#### 3.8.2 IDLE MODE (I MODE)

In Idle mode, all functions are shut off.

The analog blocks' power supply is powered but circuits are set into power-down mode, i.e, power supply applied but all current paths are shut off. There is very low current since only very low device leakage could exist in this mode.

The digital I/Os' supply is powered.

In I/O and analog interface, the input signals from digital core (which is not powered) will be set to known state as described in Table-3. The PM1 and PM0 pins which are controlled by external MCU are active and can configure the M90E32AS to other modes.

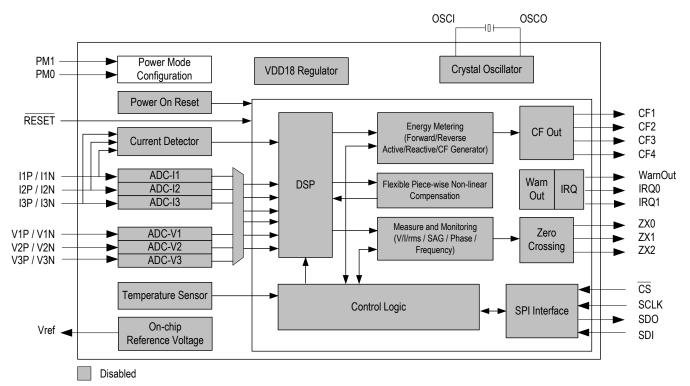

#### Figure-11 Block Diagram in Idle Mode

Please note that since the digital I/O is not shut off, the I/O circuit is active in the Idle mode. The application shall make sure that valid logic levels are applied to the I/O.

Table-3 lists digital I/O and power pins' states in Idle mode. It lists the requirements for inputs and the output level for output.

Table-3 Digital I/O and Power Pin States in Idle Mode

Name	I/O type	Туре	Pin State in Idle Mode
Reset	I	LVTTL	Input level shall be VDD33.
CS	I	LVTTL	I/O set in input mode. Input level shall be VDD33 or VSS.
SCLK	I	LVTTL	I/O set in input mode. Input level shall be VDD33 or VSS.
SDO	0	LVTTL	I/O set in input mode. Input level shall be VDD33 or VSS.
SDI	I	LVTTL	I/O set in input mode. Input level shall be VDD33 or VSS.
PM1 PM0	I	LVTTL	As defined in Table-2.



Table-3	Digital I/O	and Power P	in States in	Idle Mode	(Continued)
---------	-------------	-------------	--------------	-----------	-------------

Name	I/O type	Туре	Pin State in Idle Mode
OSCI OSCO	I O	OSC	Oscillator powered down. OSCO stays at fixed (low) level.
ZX0 ZX1 ZX2	0	LVTTL	0
CF1 CF2 CF3 CF4	0	LVTTL	0
WarnOut	0	LVTTL	0
IRQ0 IRQ1	0	LVTTL	0
VDD18	I	Power	Regulated 1.8V: high impedance
DVDD	I	Power	Digital Power Supply: powered by system
AVDD	I	Power	Analog Power Supply: powered by system
Test	I	Input	Always tie to ground in system application

#### 3.8.3 DETECTION MODE (D MODE)

In Detection mode, the current detector is active. The current detector compares whether any phase current exceeds the configured threshold using low-power comparators.

When the current of one phase or multiple phases exceeds the configured threshold, the M90E32AS asserts the IRQ0 pin to high and hold it until power mode change. The IRQ0 state is cleared when entering or exiting Detection mode.

When the current of all three current channels exceed the configured threshold, the M90E32AS asserts the IRQ1 pin to high and hold it until power mode change. The IRQ1 state is cleared when entering or exiting Detection mode.


The threshold registers need to be programmed in Normal mode before entering Detection mode.

The digital I/O state is the same as that in Idle state (except for IRQ0/IRQ1 and PM1/PM0).

The M90E32AS has two comparators for detecting each phase's positive and negative current. Each comparator's threshold can be set individually. The two comparators are both active by default, which called 'double-side detection'. User also can enable one comparator only to save power consumption, which called 'single-side detection'.

Double-side detection has faster response and can detect 'half-wave' current. But it consumes nearly twice as much power as single-side detection.

Comparators can be power-down by configuring the DetectCtrl register. The current detector can be enabled and calibrated in normal mode using control bits in the DetectCtrl register.

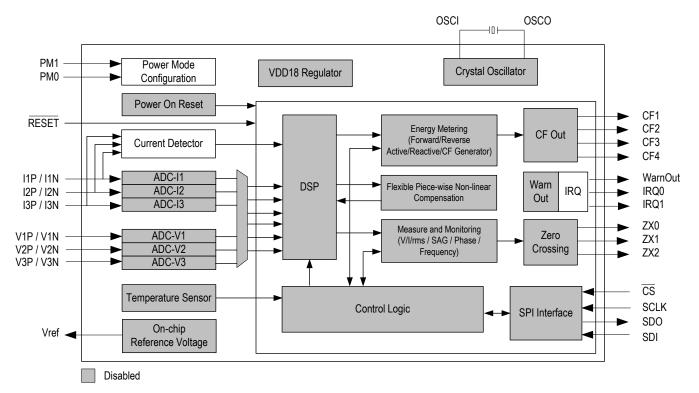





#### 3.8.4 PARTIAL MEASUREMENT MODE (M MODE)

In this mode, all the measurements are through the same hardware that does the measurement in the normal mode. To save power, the energy accumulation block and a portion of the DSP computation code will not be running in this mode.

In this mode, There are configuration bits in the PMPwrCtrl register to get lower power if the application allows:

- Option to turn-off the three analog voltage channel if there is no need to measure voltage and power.
- Option to lower down the digital clock from 16.384Mhz to 8.192MHz

In Partial Measurement mode, CRC checking will be disabled. The interrupts will not be generated.

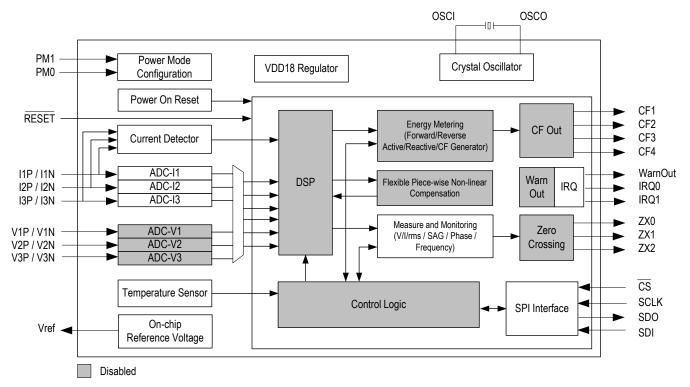


Figure-13 Block Diagram in Partial Measurement mode

#### 3.8.5 TRANSITION OF POWER MODES

The above power modes are controlled by the PM0 and PM1 pins. In application, the PM0 and PM1 pins are connected to external MCU. The PM0 and PM1 pins have internal RC- filters.

Generally, the M90E32AS stays in Idle mode most of the time while outage. It enters Detection mode at a certain interval (for example 5s) as controlled by the MCU. It informs the MCU if the current exceeds the configured threshold. The MCU then commands the M90E32AS to enter Partial Measurement mode at a certain interval (e.g. 60s) to read related current. After current reading, the M90E32AS gets back to the Idle mode.

The measured current may be used to count energy according to some metering model (like current RMS multiplying the rated voltage to compute the power).

Any power mode transition goes through the Idle mode, as shown in Figure-14.

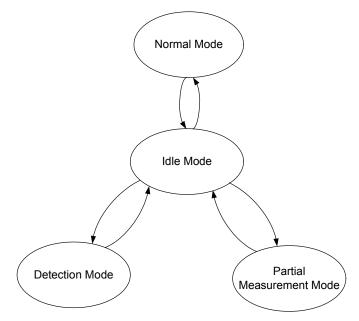


Figure-14 Power Mode Transition



## 3.9 EXTERNAL COMPONENT COMPENSATION

The calibrated channel gain and phase-delay offset could be tuned with respect to some reference parameter. This feature is useful when external component is not ideal and allow low cost sensors used in the system.

There are three reference parameters:

- Measured Current RMS (per phase)
- Measured line frequency (all phase in common)
- Measured temperature

•

There are two tuning parameters to compensate:

- Channel gain compensation
- Channel phase delay compensation

Following are the compensation correspondences:

- Measured current RMS is per phase. It goes to Igain and Phi for each phase.
- This is to compensate the non-linearity of current sensors, like a Current-Transformer. Non-linearity can be gain-nonlinearity or phase nonlinearity. The gain nonlinearity is compensated by Igain compensation and phase nonlinearity is compensated by phase compensation.
- Frequency compensation only goes to Phi/Delay (all phases are the same).
- Temperature compensation only goes to UGain (per phase).

#### **Table-4 Compensation Related Registers**

Parameter	Describtion	Registers
LogIrms	Measured Current RMS	LOGIrms0, LOGIrms1
F0	Nominal line frequency	F0
Т0	Nominal temperature	ТО
GainIrms	Gain compensation for Irms	GainAlrms01, GainAlrms2, GainBlrms01, GainBlrms2, GainClrms01, GainClrms2
Philrms	Phase compensation for Irms	PhiAlrms01, PhiAlrms2, PhiBlrms01, PhiBlrms2, PhiClrms01, PhiClrms2
UGainT	Temperature compensation only goes to UGain	UGainTAB, UGainTC
PhiF Frequency compensation only goes to Phi/Delay		PhiFreqComp

#### 3.9.1 GAIN BASED COMPENSATION

The channel gain can be tuned automatically according to measured temperature and current RMS.

Channel\_Gain  
= Gain0\* 
$$\left(1 + \frac{\text{GainIrms}*(\text{Log}(\text{Irms}_{\text{Irms}_{ref}}))}{2^{19}} + \text{GainIrms}_{offset}\right)$$
  
Channel\_Gain\_Voltage = UGain0\*  $\left(1 + \frac{\text{UGainT}*(\text{T}-\text{T0})}{2^{20}}\right)$ 

Here

 $Log(x) = Log_2(x)*16$ , e.g.: Log(2) = 16, Log(16) = 64

- Gain0 is the calibrated Gain at nominal condition,
- GainIrms is the gain adjustment per Irms change (8 bit)
- Irms\_ref is the reference current RMS
- · GainIrms\_offset is the offset for segment calibration
- UGain0 is the calibrated Gain at nominal temperature
- UGainT is the gain adjustment per temperature degree change,
- T0 is the nominal temperature,

If (Irms > Irms0)

GainIrms = GainIrms0, Irms\_ref = Irms0, GainIrms\_offset = 0,

If (Irms1<Irms < Irms0)

GainIrms = GainIrms1, Irms\_ref = Irms0, GainIrms\_offset = 0,

GainIrms = GainIrms2, Irms\_ref = Irms1

GainIrms\_offset =

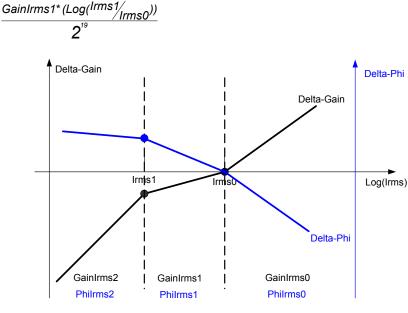


Figure-15 Segment Gain Compensation



#### 3.9.2 DELAY/PHASE BASED COMPENSATION

The Channel phase compensation delay can be tuned according to the measured frequency and current RMS.

Channel\_Phi

 $= Phi0 + \frac{PhiF^{*}(F - F0)}{512} + \frac{PhiIrms^{*}(Log(Irms_ref))}{256} + Phi_offset$ 

- Phi0 is the calibrated delay between the V/I channel (in terms of 2.048Mhz clock cycles)
- PhiF is the delay change per frequency change
- F0 is the nominal frequency,
- · Philrms is the delay change per current change
- Phi\_offset is the offset for segment calibration
- Log(x)= Log<sub>2</sub>(x)\*16

If (Irms > Irms0)

Philrms = Philrms0, Irms\_ref = Irms0, Phi\_offset=0

If (Irms1<Irms < Irms0) PhiIrms= PhiIrms1, Irms\_ref = Irms0, Phi\_offset=0

If (Irms < Irms1) PhiIrms = PhiIrms2, Irms\_ref = Irms1,

$$Phi_offset = \frac{Philrms1 * (Log(\frac{lrms1}{lrms0}))}{256}$$

Implementation Note:

The channel\_phi could be computed at the 8Khz rate. The computed channel\_phi (before applied to the delay chain in the decimator) shall be averaged and updated every 8192 8Khz-samples (about one update per second). This is to attenuate the fluctuation generated in the computation when the current is small and avoid frequent updating of the delay, which is assumed to be a fixed value in the decimator.

# 4 SPI INTERFACE

# 4.1 INTERFACE DESCRIPTION

Four pins are associated with the interface as below:

- SDI Data pin, input.
- SDO Data pin, output.
- SCLK Clock input pin.
- $\overline{CS}$  Chip select pin Input.

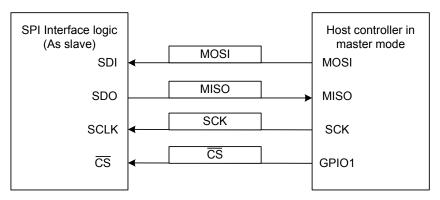


Figure-16 Slave Mode

# 4.2 SPI INTERFACE

The interface works in slave mode as shown in Figure-16.

#### 4.2.1 SPI SLAVE INTERFACE FORMAT

In the SPI mode, data on SDI is shifted into the chip on the rising edge of SCLK while data on SDO is shifted out of the chip on the falling edge of SCLK.

Refer to Figure-17 and Figure-18 below for the timing diagram.

#### Access type:

The first bit on SDI defines the access type as below:

Instruction	Description	Instruction Format
Read	read from registers	1
Write	write to registers	0

#### Address:

Fixed 15-bit, following the access type bits. The lower 10-bit is decoded as address; the higher 5 bits are 'Don't Care'. Read/Write data:

Fixed as 16 bits.

#### Read Sequence:




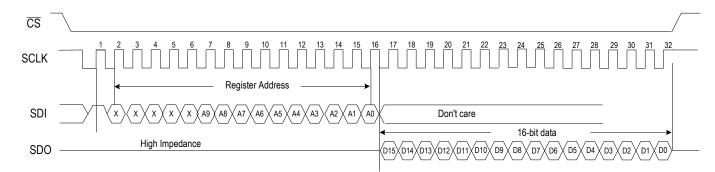


Figure-17 Read Sequence

#### Write Sequence:

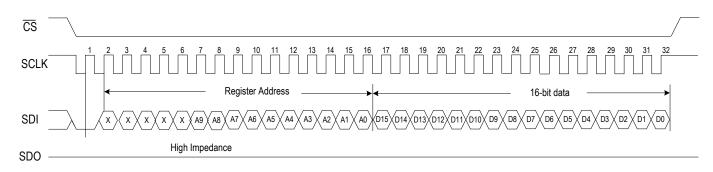

#### Figure-18 Write Sequence

#### 4.2.2 RELIABILITY ENHANCEMENT FEATURE

The SPI read/write transaction is  $\overline{\text{CS}}$ -low defined. Each transaction can only access one register.

Within each  $\overline{\text{CS}}$ -low defined transaction:

Write: access occurs only when  $\overline{CS}$  goes from low to high and there are exactly 32 SCLK cycles received during  $\overline{CS}$  low period.

Read: if SCLK>=16 (full address received), data is read out from internal registers and gets to the SDO pin; and the LastS-PIData register is updated. The R/C registers can only be cleared after the LastSPIData register is updated.

# 5 **REGISTER**

# 5.1 REGISTER LIST

## Table-5 Register List

Register Address	Register Name	Read/ Write Type	Functional Description	Comment	Page
	0		Status and Special Register		
00H	MeterEn	R/W	Metering Enable		P 41
01H	ChannelMapl	R/W	Current Channel Mapping Configuration		P 42
02H	ChannelMapU	R/W	Voltage Channel Mapping Configuration		P 42
05H	SagPeakDetCfg	R/W	Sag and Peak Detector Period Configuration		P 44
06H	OVth	R/W	Over Voltage Threshold		P 44
07H	ZXConfig	R/W	Zero-Crossing Configuration	Configuration of ZX0/1/2 pins' source	P 45
08H	SagTh	R/W	Voltage Sag Threshold		P 45
09H	PhaseLossTh	R/W	Voltage Phase Losing Threshold	Similar to Voltage Sag Threshold register	P 45
0AH	InWarnTh	R/W	Neutral Current (Calculated) Warning Threshold		P 46
0BH	Olth	R/W	Over Current Threshold		P 46
0CH	FreqLoTh	R/W	Low Threshold for Frequency Detection		P 46
0DH	FreqHiTh	R/W	High Threshold for Frequency Detection		P 46
0EH	PMPwrCtrl	R/W	Partial Measurement Mode Power Control		P 47
0FH	IRQ0MergeCfg	R/W	IRQ0 Merge Configuration	Refer to 4.2.2 Reliability E nhancement Feature	P 47
			Low Power Mode Register		
10H	DetectCtrl	R/W	Current Detect Control		P 48
11H	DetectTh1	R/W	Channel 1 Current Threshold in Detection Mode		P 49
12H	DetectTh2	R/W	Channel 2 Current Threshold in Detection Mode		P 49
13H	DetectTh3	R/W	Channel 3 Current Threshold in Detection Mode		P 49
14H	IDCoffsetA	R/W	Phase A Current DC offset		P 50
15H	IDCoffsetB	R/W	Phase B Current DC offset		P 50
16H	IDCoffsetC	R/W	Phase C Current DC offset		P 50
17H	UDCoffsetA	R/W	Voltage DC offset for Channel A		P 50
18H	UDCoffsetB	R/W	Voltage DC offset for Channel B		P 50
19H	UDCoffsetC	R/W	Voltage DC offset for Channel C		P 51
1AH	UGainTAB	R/W	Voltage Gain Temperature Compensation for Phase A/B		P 51
1BH	UGainTC	R/W	Voltage Gain Temperature Compensation for Phase C		P 51
1CH	PhiFreqComp	R/W	Phase Compensation for Frequency		P 51
20H	LOGIrms0	R/W	Current (Log Irms0) Configuration for Segment Compensation		P 51
21H	LOGIrms1	R/W	Current (Log Irms1) Configuration for Seg- ment Compensation		P 51



Register Address	Register Name	Read/ Write Type	Functional Description	Comment	Page
22H	F0	R/W	Nominal Frequency		P 52
23H	ТО	R/W	Nominal Temperature		P 52
24H	PhiAlrms01	R/W	Phase A Phase Compensation for Current Segment 0 and 1		P 52
25H	PhiAlrms2	R/W	Phase A Phase Compensation for Current Segment 2		P 52
26H	GainAlrms01	R/W	Phase A Gain Compensation for Current Seg- ment 0 and 1		P 53
27H	GainAlrms2	R/W	Phase A Gain Compensation for Current Seg- ment 2		P 53
28H	PhiBIrms01	R/W	Phase B Phase Compensation for Current Segment 0 and 1		P 53
29H	PhiBlrms2	R/W	Phase B Phase Compensation for Current Segment 2		P 54
2AH	GainBlrms01	R/W	Phase B Gain Compensation for Current Seg- ment 0 and 1		P 53
2BH	GainBlrms2	R/W	Phase B Gain Compensation for Current Seg- ment 2		P 54
2CH	PhiClrms01	R/W	Phase C Phase Compensation for Current Segment 0 and 1		P 54
2DH	PhiCIrms2	R/W	Phase C Phase Compensation for Current Segment 2		P 54
2EH	GainClrms01	R/W	Phase C Gain Compensation for Current Seg- ment 0 and 1		P 54
2FH	GainClrms2	R/W	Phase C Gain Compensation for Current Seg- ment 2		P 54
•			Configuration Registers		
31H	PLconstH	R/W	High Word of PL_Constant		P 55
32H	PLconstL	R/W	Low Word of PL_Constant		P 56
33H	MMode0	R/W	Metering Method Configuration		P 56
34H	MMode1	R/W	PGA Gain Configuration		P 57
35H	PStartTh	R/W	Active Startup Power Threshold		
36H	QStartTh	R/W	Reactive Startup Power Threshold		
37H	SStartTh	R/W	Apparent Startup Power Threshold	Refer to Table-6.	
38H	PPhaseTh	R/W	Startup Power Threshold for Any Phase (Active Energy Accumulation)		
39H	QPhaseTh	R/W	Startup Power Threshold for Any Phase (ReActive Energy Accumulation)		
3AH	SPhaseTh	R/W	Startup Power Threshold for Any Phase (Apparent Energy Accumulation)		

Register Address	Register Name	Read/ Write Type	Functional Description	Comment	Page
•			Calibration Registers		•
41H	PoffsetA	R/W	Phase A Active Power offset		P 57
42H	QoffsetA	R/W	Phase A Reactive Power offset		P 58
43H	PoffsetB	R/W	Phase B Active Power offset		
44H	QoffsetB	R/W	Phase B Reactive Power offset		
45H	PoffsetC	R/W	Phase C Active Power offset		
46H	QoffsetC	R/W	Phase C Reactive Power offset	– Refer to Table-7.	
47H	PQGainA	R/W	Phase A Calibration Gain		P 58
48H	PhiA	R/W	Phase A Calibration Phase Angle		P 58
49H	PQGainB	R/W	Phase B Calibration Gain		
4AH	PhiB	R/W	Phase B Calibration Phase Angle		
4BH	PQGainC	R/W	Phase C Calibration Gain		
4CH	PhiC	R/W	Phase C Calibration Phase Angle		
		Fund	lamental/ Harmonic Energy Calibration Regi	sters	
51H	PoffsetAF	R/W	Phase A Fundamental Active Power offset		
52H	PoffsetBF	R/W	Phase B Fundamental Active Power offset		
53H	PoffsetCF	R/W	Phase C Fundamental Active Power offset	Refer to Table-8.	
54H	PGainAF	R/W	Phase A Fundamental Calibration Gain		
55H	PGainBF	R/W	Phase B Fundamental Calibration Gain		
56H	PGainCF	R/W	Phase C Fundamental Calibration Gain		
			Measurement Calibration Registers		
61H	UgainA	R/W	Phase A Voltage RMS Gain		
62H	IgainA	R/W	Phase A Current RMS Gain		
63H	UoffsetA	R/W	Phase A Voltage RMS offset		
64H	loffsetA	R/W	Phase A Current RMS offset	- Refer to Table-9.	
65H	UgainB	R/W	Phase B Voltage RMS Gain		
66H	IgainB	R/W	Phase B Current RMS Gain		
67H	UoffsetB	R/W	Phase B Voltage RMS offset		
68H	loffsetB	R/W	Phase B Current RMS offset		
69H	UgainC	R/W	Phase C Voltage RMS Gain	1	
6AH	IgainC	R/W	Phase C Current RMS Gain	1	
6BH	UoffsetC	R/W	Phase C Voltage RMS offset		
6CH	loffsetC	R/W	Phase C Current RMS offset		

Register Address	Register Name	Read/ Write Type	Functional Description	Comment	Page
			EMM Status Registers		
70H	SoftReset	R/W	Software Reset		P 59
71H	EMMState0	R	EMM State 0		P 60
72H	EMMState1	R	EMM State 1		P 61
73H	EMMIntState0	R/W1C	EMM Interrupt Status 0		P 62
74H	EMMIntState1	R/W1C	EMM Interrupt Status 1		P 63
75H	EMMIntEn0	R/W	EMM Interrupt Enable 0		P 64
76H	EMMIntEn1	R/W	EMM Interrupt Enable 1		P 65
78H	LastSPIData	R	Last Read/Write SPI Value		P 65
79H	CRCErrStatus	R	CRC Error Status		P 66
7AH	CRCDigest	R/W	CRC Digest		P 66
7FH	CfgRegAccEn	R/W	Configure Register Access Enable		P 66
			Energy Register		
80H	APenergyT	R/C	Total Forward Active Energy		P 67
81H	APenergyA	R/C	Phase A Forward Active Energy		
82H	APenergyB	R/C	Phase B Forward Active Energy		
83H	APenergyC	R/C	Phase C Forward Active Energy		
84H	ANenergyT	R/C	Total Reverse Active Energy		
85H	ANenergyA	R/C	Phase A Reverse Active Energy		
86H	ANenergyB	R/C	Phase B Reverse Active Energy		
87H	ANenergyC	R/C	Phase C Reverse Active Energy		
88H	RPenergyT	R/C	Total Forward Reactive Energy		
89H	RPenergyA	R/C	Phase A Forward Reactive Energy	Refer to Table-11.	
8AH	RPenergyB	R/C	Phase B Forward Reactive Energy		
8BH	RPenergyC	R/C	Phase C Forward Reactive Energy		
8CH	RNenergyT	R/C	Total Reverse Reactive Energy		
8DH	RNenergyA	R/C	Phase A Reverse Reactive Energy		
8EH	RNenergyB	R/C	Phase B Reverse Reactive Energy	1	
8FH	RNenergyC	R/C	Phase C Reverse Reactive Energy		
90H	SAenergyT	R/C	Total (Arithmetic Sum) Apparent Energy		
91H	SenergyA	R/C	Phase A Apparent Energy		
92H	SenergyB	R/C	Phase B Apparent Energy		
93H	SenergyC	R/C	Phase C Apparent Energy		

Register		Read/ Write					
Address	Register Name	Туре	Functional Description	Comment	Page		
	Fundamental / Harmonic Energy Register						
A0H	APenergyTF	R/C	Total Forward Active Fundamental Energy		P 68		
A1H	APenergyAF	R/C	Phase A Forward Active Fundamental Energy				
A2H	APenergyBF	R/C	Phase B Forward Active Fundamental Energy				
A3H	APenergyCF	R/C	Phase C Forward Active Fundamental Energy				
A4H	ANenergyTF	R/C	Total Reverse Active Fundamental Energy				
A5H	ANenergyAF	R/C	Phase A Reverse Active Fundamental Energy				
A6H	ANenergyBF	R/C	Phase B Reverse Active Fundamental Energy				
A7H	ANenergyCF	R/C	Phase C Reverse Active Fundamental Energy	Refer to Table-12.			
A8H	APenergyTH	R/C	Total Forward Active Harmonic Energy				
A9H	APenergyAH	R/C	Phase A Forward Active Harmonic Energy				
AAH	APenergyBH	R/C	Phase B Forward Active Harmonic Energy				
ABH	APenergyCH	R/C	Phase C Forward Active Harmonic Energy				
ACH	ANenergyTH	R/C	Total Reverse Active Harmonic Energy				
ADH	ANenergyAH	R/C	Phase A Reverse Active Harmonic Energy				
AEH	ANenergyBH	R/C	Phase B Reverse Active Harmonic Energy				
AFH	ANenergyCH	R/C	Phase C Reverse Active Harmonic Energy	1			



# Table-5 Register List (Continued)

Register		Read/ Write			
Address	Register Name	Туре	Functional Description	Comment	Page
			Power and Power Factor Registers	1	
B0H	PmeanT	R	Total (all-phase-sum) Active Power		P 69
B1H	PmeanA	R	Phase A Active Power		
B2H	PmeanB	R	Phase B Active Power		
B3H	PmeanC	R	Phase C Active Power		
B4H	QmeanT	R	Total (all-phase-sum) Reactive Power		
B5H	QmeanA	R	Phase A Reactive Power		
B6H	QmeanB	R	Phase B Reactive Power		
B7H	QmeanC	R	Phase C Reactive Power		
B8H	SmeanT	R	Total (Arithmetic Sum) Apparent Power		
B9H	SmeanA	R	Phase A Apparent Power		
BAH	SmeanB	R	Phase B Apparent Power		
BBH	SmeanC	R	Phase C Apparent Power		
BCH	PFmeanT	R	Total Power Factor		
BDH	PFmeanA	R	Phase A Power Factor		
BEH	PFmeanB	R	Phase B Power Factor		
BFH	PFmeanC	R	Phase C Power Factor	Refer to Table-13.	
СОН	PmeanTLSB	R	Lower Word of Total (all-phase-sum) Active Power		
C1H	PmeanALSB	R	Lower Word of Phase A Active Power		
C2H	PmeanBLSB	R	Lower Word of Phase B Active Power		
C3H	PmeanCLSB	R	Lower Word of Phase C Active Power		
C4H	QmeanTLSB	R	Lower Word of Total (all-phase-sum) Reactive Power		
C5H	QmeanALSB	R	Lower Word of Phase A Reactive Power		
C6H	QmeanBLSB	R	Lower Word of Phase B Reactive Power		
C7H	QmeanCLSB	R	Lower Word of Phase C Reactive Power		
C8H	SAmeanTLSB	R	Lower Word of Total (Arithmetic Sum) Apparent Power		
C9H	SmeanALSB	R	Lower Word of Phase A Apparent Power		
CAH	SmeanBLSB	R	Lower Word of Phase B Apparent Power		
CBH	SmeanCLSB	R	Lower Word of Phase C Apparent Power		
	Fu	undamenta	I / Harmonic Power and Voltage / Current RM	IS Registers	I
D0H	PmeanTF	R	Total Active Fundamental Power	Refer to Table-14.	P 70
D1H	PmeanAF	R	Phase A Active Fundamental Power		
D2H	PmeanBF	R	Phase B Active Fundamental Power		
D3H	PmeanCF	R	Phase C Active Fundamental Power		
D4H	PmeanTH	R	Total Active Harmonic Power		
D5H	PmeanAH	R	Phase A Active Harmonic Power		
D6H	PmeanBH	R	Phase B Active Harmonic Power		
D7H	PmeanCH	R	Phase C Active Harmonic Power		
D9H	UrmsA	R	Phase A Voltage RMS		
DAH	UrmsB	R	Phase B Voltage RMS		
DBH	UrmsC	R	Phase C Voltage RMS		

# Table-5 Register List (Continued)

Register Address	Register Name	Read/ Write Type	Functional Description	Comment	Page
DCH	IrmsN	R	N Line Calculated Current RMS		
DDH	IrmsA	R	Phase A Current RMS		
DEH	IrmsB	R	Phase B Current RMS		
DFH	IrmsC	R	Phase C Current RMS		
E0H	PmeanTFLSB	R	Lower Word of Total Active Fundamental Power		
E1H	PmeanAFLSB	R	Lower Word of Phase A Active Fundamental Power		
E2H	PmeanBFLSB	R	Lower Word of Phase B Active Fundamental Power		
E3H	PmeanCFLSB	R	Lower Word of Phase C Active Fundamental Power		
E4H	PmeanTHLSB	R	Lower Word of Total Active Harmonic Power		
E5H	PmeanAHLSB	R	Lower Word of Phase A Active Harmonic Power		
E6H	PmeanBHLSB	R	Lower Word of Phase B Active Harmonic Power		
E7H	PmeanCHLSB	R	Lower Word of Phase C Active Harmonic Power		
E9H	UrmsALSB	R	Lower Word of Phase A Voltage RMS		
EAH	UrmsBLSB	R	Lower Word of Phase B Voltage RMS		
EBH	UrmsCLSB	R	Lower Word of Phase C Voltage RMS		
EDH	IrmsALSB	R	Lower Word of Phase A Current RMS		
EEH	IrmsBLSB	R	Lower Word of Phase B Current RMS		
EFH	IrmsCLSB	R	Lower Word of Phase C Current RMS		
•		Pea	k, Frequency, Angle and Temperature Regis	ters	•
F1H	UPeakA	R	Channel A Voltage Peak		P 71
F2H	UPeakB	R	Channel B Voltage Peak		P 71
F3H	UPeakC	R	Channel C Voltage Peak	7	
F5H	IPeakA	R	Channel A Current Peak		
F6H	IPeakB	R	Channel B Current Peak	7	
F7H	IPeakC	R	Channel C Current Peak		
F8H	Freq	R	Frequency	Refer to Table-15.	
F9H	PAngleA	R	Phase A Mean Phase Angle		
FAH	PAngleB	R	Phase B Mean Phase Angle		
FBH	PAngleC	R	Phase C Mean Phase Angle		
FCH	Temp	R	Measured Temperature		
FDH	UangleA	R	Phase A Voltage Phase Angle		
FEH	UangleB	R	Phase B Voltage Phase Angle		
FFH	UangleC	R	Phase C Voltage Phase Angle		

# 5.2 SPECIAL REGISTERS

## 5.2.1 CONFIGURATION REGISTERS CRC GENERATION

The registers between address '0H' to '6FH' are considered as user configuration registers. CRC-16 with the following polynomial was used to compute the CRC digest:

Polynomial =  $x^{16} + x^{12} + x^5 + 1$ 

The CRC computation rate is every 16 bit word per 125us. The result can be read from the CRC result register.

The device can automatically monitor the CRC changes versus a golden CRC which is latched after the first time the CRC computation is done. The latching event is triggered by none "0x55AA" value written to the CfgRegAccEn register (which means configuration done), followed by a new CRC result available event. Once golden CRC is latched, the CRC\_CMP signal is enabled. Subsequent CRC result will be compared with the latched CRC to generate the CRC error status. CRC error status can be read, and if configured, can goes to WARN or IRQ0 pins to alert the MCU in the case of CRC error.

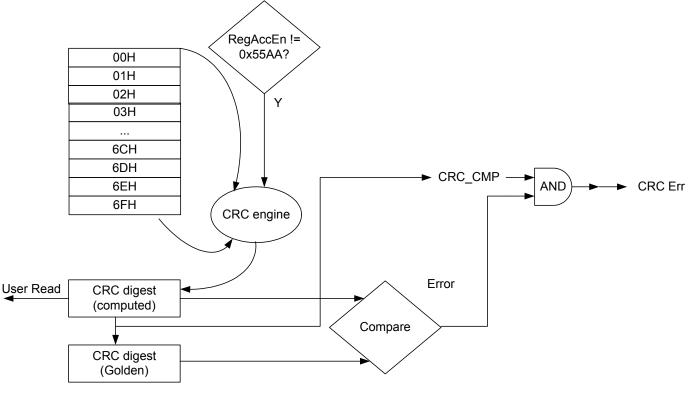



Figure-19 CRC Checking Diagram

## 5.2.2 IRQ AND WARNOUT SIGNAL GENERATION

The interrupt generation scheme is consistent for all the interrupt sources. For any interrupt source, there is an interrupt status register and an interrupt enable register. Interrupt status register latches the interrupt event and is always available for polling. If the interrupt enable register is set, that interrupt can go to IRQ pin to notify the processor.

The interrupt status register is write-1-to-clear. It captures the interrupt event which is usually an internal state change. The (real time) internal state for that event is also available for read at any time.

The following diagram illustrates how the status bits, enable bits and IRQ/ WarnOut pins work together.

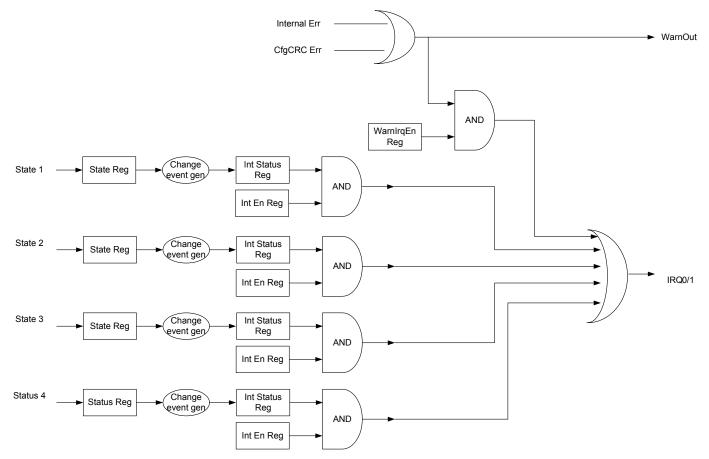

### Figure-20 IRQ and WarnOut Generation

There are two interrupt output pins: IRQ0 and IRQ1.

The IRQ 0 is associated with interrupt sources defined in EMMState0 register.

The IRQ 1 is associated with interrupt sources defined in EMMState1 register.

If configured, IRQ 1 state can be ORed together with IRQ0 state and output to IRQ0, in that case MCU need only process one IRQ pin. It is up to system designer to trade off between conveniences of locating interrupt source and saving GPIO pins.

The Warn pin will be asserted when there is a configuration register CRC check error. The Warn signal can be merged to IRQ0 if configured.



# MeterEn Metering Enable

Address: 00H Type: Read/Write					
Default Value:	Default Value: 00H				
Bit	Name	Description			
7:0	MeterEn[7:0]	Metering is enabled when any bit in this register is set.			

## ChannelMapl Current Channel Mapping Configuration

	Vrite		
ault Value Bit	: 0210H Name		
15:11	-	Reserved.	
			or phase C current char
			-
		Code	ADC Input Source
		000	10
		001	l1
10:8	IC_SRC	010	12
	_	011	Fixed-0
		100	U0
		101	U1
		110	U2
		111	Fixed-0
7	-	Reserved.	
	_		or phase B current char
	IB_SRC		
		Code	
		000	ADC Input Source
		000	I1
		010	2
6:4			
		011	Fixed-0
		100	UO
		101	U1
		110	U2
		111	Fixed-0
3	-	Reserved.	
		ADC Input source f	or phase A current char
		Code	ADC Input Source
		000	10
		001	I1
2:0	IA_SRC	010	12
2:0	IA_SRC	011	Fixed-0
		100	U0
		100	U1
		110	U2
			Fixed-0
		111	FIXEU-U



# ChannelMapU Voltage Channel Mapping Configuration

ddress: 02F	4		
/pe: Read/V	Vrite		
efault Value	: 0654H	I	
Bit	Name	-	
15:11	-	Reserved.	
		ADC Input source	e for phase C voltage cha
		Code	ADC Input Source
		000	10
		001	l1
		010	12
10:8	UC_SRC	011	Fixed-0
		100	U0
		100	U1
		110	U2
		111	Fixed-0
			1 1/00 0
7	-	Reserved.	fundamente de la companya de la company
		ADC Input source	e for phase B voltage cha
		Code	ADC Input Source
		000	10
		001	I1
		010	12
6:4	UB_SRC	010	Fixed-0
		100	U0
		100	U1
		110	U2
		110	Fixed-0
3	-	Reserved.	
		ADC Input source	e for phase A voltage cha
		0	
		Code	ADC Input Source
		000	10
		001	1
2:0	UA_SRC	010	l2
		011	Fixed-0
		100	UO
		101	U1
		110	U2
		111	Fixed-0

## SagPeakDetCfg Sag and Peak Detector Period Configuration

Address: 05H Type: Read/Write Default Value: 143FH				
Bit	Name	Description		
15:8	PeakDet_peri od	Period in which the peak detector detects the U/I peak. Unit is ms.		
7:0		Period in which the phase voltage needs to stay below the SagTh before to assert the Sag status. Unit is ms. The Phase Loss detector also uses this parameter in detecting Phase Loss.		

## OVth Over Voltage Threshold

Type: Read/W	Address: 06H Type: Read/Write Default Value: C000H				
Bit	Name	Description			
15:0	OVth	Over Voltage threshold. 0xFFFF maps to ADC output full-scale peak.			



# 5.2.3 SPECIAL CONFIGURATION REGISTERS

# ZXConfig Zero-Crossing Configuration

Bit	Name		Description	ì
5:13	ZX2Src[2:0]	These bits select the	ne signal source for the ZX2, ZX1 or ZX	0 pins.
2:10	ZX1Src[2:0]	] <u> </u>		_
		Code	Source	
		011	Fixed-0	
		000	Ua	7
		001	Ub	
9:7	ZX0Src[2:0]	010	Uc	
0.1	2,0000[2.0]	111	Fixed-0	
		100	la	
		101	lb	
		110	lc	
6:5	ZX2Con[1:0]	These bits configu	e zero-crossing type for the ZX2, ZX1 a	and ZX0 pins.
4:3	ZX1Con[1:0]			
		Code	Zero-Crossing Configuration	7
		00	Positive Zero-crossing	1
2:1	ZX0Con[1:0]	01	Negative Zero-crossing	7
		10	All Zero-crossing	7
		11	No Zero-crossing Output	1

## SagTh Voltage Sag Threshold

Address: 08H Type: Read/Write Default Value: 1000H				
Bit	Name	Description		
15:0	SagTh	Voltage sag threshold level. 0xFFFF map to ADC output full-scale peak.		

## PhaseLossTh Voltage Phase Losing Threshold

Address: 09H Type: Read/Write Default Value: 0400H				
Bit	Name	Description		
15:0	PhaseLossTh	PhaseLoss threshold level 0xFFFF map to ADC output full-scale peak.		

### InWarnTh Neutral Current (Calculated) Warning Threshold

Address: 0AH Type: Read/Write Default Value: FFFFH			
Bit	Name	Description	
15:0	INWarnTh0	Neutral current (calculated) warning threshold. Threshold for calculated (la + lb +lc) N line rms current. Unsigned 16 bit, unit 1mA. If N line rms current is greater than the threshold, the INOv0ST bit (b7, EMMState0) bit is asserted if enabled. Refer to 3.7.5 Neutral Line Overcurrent Detection.	

## Olth Over Current Threshold

Type: Read/W	Address: 0BH Type: Read/Write Default Value: C000H				
Bit	Name	Description			
15:0	Olth	Over Current threshold. 0xFFFF maps to ADC output full-scale peak.			

### FreqLoTh Low Threshold for Frequency Detection

Address: 0CH	Address: 0CH			
Type: Read/Write				
Default Value:	: 1324H			
Bit	Name	Description		
15:0	FreqLoTh	Low threshold for frequency detection.		

### FreqHiTh High Threshold for Frequency Detection

Address: 0DH Type: Read/Write			
Default Value:			
Bit	Name	Description	
15:0	FreqHiTh	High threshold for frequency detection.	

#### PMPwrCtrl Partial Measurement Mode Power Control

e: Read/ ault Valu	Write e: 010FH	
Bit	Name	Description
15:9	-	Reserved.
8	PMPwrDown- Vch	In Partial Measurement Mode the V0/V1/V2 analog channel can be powered off to save power 0: Power on 1: Power off This feature can be used when voltage measurement is not required in partial mode.
3	ACTRL_CLK_ GATE	Power off the clock of analog control block to save power. 0: Power on 1: Power off
2	DSP_CLK_G ATE	Power off the clock of DSP register to save power. 0: Power on 1: Power off
1	MTMS_CLK_ GATE	Power off the metering and measuring block to save power. 0: Power on 1: Power off
0	PMClkLow	In Partial Measurement Mode the main clock can be reduced to 8.192MHz to save power. 0: 16.384MHz 1: 8.192MHz In this low rate mode, the SPI interface only support half the access rate at normal mode.

# IRQ0MergeCfg IRQ0 Merge Configuration

Address: 0FF Type: Read/V Default Value	Vrite	
Bit	Name	Description
15:2	-	Reserved.
1	WARN_OR	The WARN state can be ORed to IRQ0 output 0: normal 1: ORed
0	IRQ1_OR	The IRQ1 state can be ORed to IRQ0 output 0: normal 1: ORed

# 5.3 LOW-POWER MODES REGISTERS

## 5.3.1 DETECTION MODE REGISTERS

Current Detection register latching scheme is:

When any of the 4 current detection registers (0x10 - 0x13) were programmed, all the 4 current detection registers (including the registers that not being programmed) will be automatically latched into the current detector's internal configuration latches at the same time. Those latched configuration values are not subject to digital reset signals and will be kept in all the 4 power modes. The power up value of those latches is not deterministic, so user needs to program the current detection registers to update.

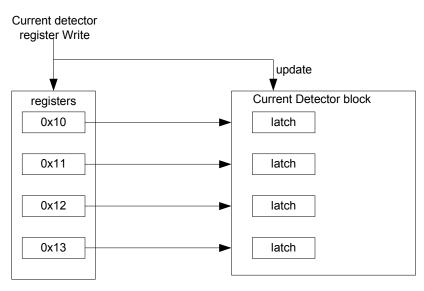


Figure-21 Current Detection Register Latching Scheme

#### DetectCtrl Current Detect Control

Address: 10 Type: Read/ Default Value	Write	
Bit	Name	Description
15:7	-	Must be written '3'.
6	DetCalEn	Detector calibration in Normal mode is enabled if this bit is set. The default written value is '0'. If set, current detectors are enabled and IRQ0/1 are assigned to current detector outputs as if in Detect mode. The current detector can be calibrated.
5:0	DetectCtrl	Detector power-down, active high: [5:3]: Power-down for negative detector of channel 3/2/1; [2:0]: Power-down for positive detector of channel 3/2/1. The default written value is '0'.



### DetectTh1 Channel 1 Current Threshold in Detection Mode

Bit	Name	Description
15:8	CalCodeN	Channel 1 current negative detector calculation code. Code mapping: 8'b0000-0000, Vc = -1.2mV =0.85mVrms (Vc is the threshold of low power computation) 8'b1111-1111, Vc = 9mV = $6.35mVrms$ DAC typical resolution is [9- (-1.2)]/256 = $40\mu$ V = $28\mu$ Vrms
7:0	CalCodeP	Channel 1 current positive detector calculation code. Code mapping: 8'b0000-0000, Vc = -1.2mV =0.85mVrms (Vc is the threshold of low power computation) 8'b1111-1111, Vc = 9mV = $6.35mVrms$ DAC typical resolution is [9- (-1.2)]/256 = $40\mu$ V = $28\mu$ Vrms

# DetectTh2 Channel 2 Current Threshold in Detection Mode

Address: 12H Type: Read/Write Default Value: 0000H			
Bit	Name	Description	
15:8	CalCodeN	Channel 2 current negative detector calculation code. Code mapping: 8'b0000-0000, Vc = -1.2mV =0.85mVrms (Vc is the threshold of low power computation) 8'b1111-1111, Vc = 9mV = 6.35mVrms DAC typical resolution is [9- (-1.2)]/256 = 40µV = 28µVrms	
7:0	CalCodeP	Channel 2 current positive detector calculation code. Code mapping: 8'b0000-0000, Vc = -1.2mV =0.85mVrms (Vc is the threshold of low power computation) 8'b1111-1111, Vc = 9mV = 6.35mVrms DAC typical resolution is [9- (-1.2)]/256 = 40µV = 28µVrms	

# DetectTh3 Channel 3 Current Threshold in Detection Mode

Address: 13H Type: Read/Write Default Value: 0000H		
Bit	Name	Description
15:8	CalCodeN	Channel 3 current negative detector calculation code. Code mapping: 8'b0000-0000, Vc = $-1.2mV =0.85mVrms$ (Vc is the threshold of low power computation) 8'b1111-1111, Vc = 9mV = $6.35mVrms$ DAC typical resolution is [9- (-1.2)]/256 = $40\mu V = 28\mu Vrms$
7:0	CalCodeP	Channel 3 current positive detector calculation code. 8'b0000-0000, Vc = -1.2mV =0.85mVrms (Vc is the threshold of low power computation) 8'b1111-1111, Vc = 9mV = $6.35mVrms$ DAC typical resolution is [9- (-1.2)]/256 = $40\mu$ V = $28\mu$ Vrms

### 5.3.2 PARTIAL MEASUREMENT MODE REGISTERS

### IDCoffsetA Phase A Current DC offset

Address: 14H Type: Read/W Default Value:	/rite		
Bit	Name	Description	
15:0	IDCoffsetA	Phase A current DC offset in decimator, signed with complement format.	

### IDCoffsetB Phase B Current DC offset

Address: 15H			
Type: Read/Write			
Default Value:	0000H		
Bit	Name	Description	
15:0	IDCoffsetB	Phase B current DC offset in decimator, signed with complement format.	

### IDCoffsetC Phase C Current DC offset

Address: 16H Type: Read/Write Default Value: 0000H		
Bit	Name	Description
15:0	IDCoffsetC	Phase C current DC offset in decimator, signed with complement format.

### UDCoffsetA Voltage DC offset for Channel A

Address: 17H Type: Read/Write Default Value: 0000H			
Bit	Name	Description	
15:0	UDCoffsetA	Phase A voltage DC offset in decimator, signed with complement format.	

## UDCoffsetB Voltage DC offset for Channel B

Address: 18H	Address: 18H		
Type: Read/W	Type: Read/Write		
Default Value:	Default Value: 0000H		
Bit	Name	Description	
15:0	UDCoffsetB	Phase B voltage DC offset in decimator, signed with complement format.	



### UDCoffsetC Voltage DC offset for Channel C

Address: 19H	Address: 19H		
Type: Read/W	Type: Read/Write		
Default Value:	Default Value: 0000H		
Bit	Name	Description	
15:0	UDCoffsetC	Phase C voltage DC offset in decimator, signed with complement format.	

# UGainTAB Voltage Gain Temperature Compensation for Phase A/B

Type: Read/W	Address: 1AH Type: Read/Write Default Value: 0000H		
Bit	Name	Description	
15:8	UGainTB	Voltage gain temperature compensation for phase B.	
10.0	OGaintb	voltage gain temperature compensation for phase b.	

## UGainTC Voltage Gain Temperature Compensation for Phase C

	Address:1BH Type: Read/Write Default Value: 0000H		
Bit	Name	Description	
15:8	-	Reserved.	
7:0	UGainTC	Voltage gain temperature compensation for phase C.	

### PhiFreqComp Phase Compensation for Frequency

Type: Read/W	Address: 1CH Type: Read/Write Default Value: 0000H		
Bit	Name	Description	
15:8	-	Reserved.	
7:0	PhiF	Phase compensation for frequency.	

# LOGIrms0 Current (Log Irms0) Configuration for Segment Compensation

••	Address: 20H Type: Read/Write Default Value: 0000H		
Bit	Name	Description	
15:8	-	Reserved.	
7:0	LogIrms0	= log2(Irms0), Irms0 is the nominal RMS current at calibration.	

## LOGIrms1 Current (Log Irms1) Configuration for Segment Compensation

Type: Read/V	Address: 21H Type: Read/Write Default Value: 0000H		
Bit	Name	Description	
15:8	-	Reserved.	
7:0	LogIrms1	= log2(Irms1), Irms1 is the nominal RMS current at calibration.	

### F0 Nominal Frequency

	Address: 22H Type: Read/Write Default Value: 5000		
Bit	Name	Description	
15:0	F0	Nominal frequency. For example, 5000 corresponds to 50.00Hz.	

# T0 Nominal Temperature

Address: 23H Type: Read/V Default Value	Vrite	
Bit	Name	Description
15:8	-	Reserved.
7:0	Т0	Signed, Nominal temperature in degree C.

# PhiAlrms01 Phase A Phase Compensation for Current Segment 0 and 1

Address: 24H Type: Read/Write Default Value: 0000H		
Bit	Name	Description
15:8	Philrms1	Phase compensation for current segment 1(Irms1 <irms 3.9.2="" <="" based="" compensation.<="" delay="" irms0).="" phase="" refer="" td="" to=""></irms>
7:0	Philrms0	Phase compensation for current segment 0 (Irms > Irms0). Refer to 3.9.2 Delay/Phase Based Compen- sation.

# PhiAlrms2 Phase A Phase Compensation for Current Segment 2

Address: 25H Type: Read/M Default Value:	/rite	
Bit	Name	Description
15:8	-	Reserved.
7:0	Philrms2	Phase compensation for current segment 2 (Irms < Irms1). Refer to 3.9.2 Delay/Phase Based Compen- sation.

### GainAlrms01 Phase A Gain Compensation for Current Segment 0 and 1

Address: 26H Type: Read/Write Default Value: 0000H		
Bit	Name	Description
15:8	GainIrms1	Gain compensation for current segment 1 (Irms1 <irms 3.9.1="" <="" based="" compensa-<br="" gain="" irms0).="" refer="" to="">tion.</irms>
7:0	Gainlrms0	Gain compensation for current segment 0 (Irms > Irms0). Refer to 3.9.1 Gain Based Compensation.

### GainAlrms2 Phase A Gain Compensation for Current Segment 2

Address: 27H Type: Read/W Default Value	/rite		
Bit	Bit Name Description		
15:8	-	Reserved.	
7:0	GainIrms2	Gain compensation for current segment 2 (Irms < Irms1). Refer to 3.9.1 Gain Based Compensation.	

# PhiBlrms01 Phase B Phase Compensation for Current Segment 0 and 1

Address: 28H Type: Read/W Default Value:	/rite	
Bit Name Description		Description
15:8	Philrms1	Phase compensation for current segment 1 (Irms1 <irms 3.9.2="" <="" based="" compensation.<="" delay="" irms0).="" phase="" refer="" td="" to=""></irms>
7:0	Philrms0	Phase compensation for current segment 0 (Irms > Irms0). Refer to 3.9.2 Delay/Phase Based Compen- sation.

### PhiBIrms2 Phase B Phase Compensation for Current Segment 2

Address: 29H Type: Read/W Default Value:	/rite	
Bit	Bit Name Description	
15:8	-	Reserved.
7:0	Philrms2	Phase compensation for current segment 2 (Irms < Irms1). Refer to 3.9.2 Delay/Phase Based Compen- sation.

## GainBlrms01 Phase B Gain Compensation for Current Segment 0 and 1

Address: 2AH Type: Read/W Default Value:	/rite	
Bit	Name	Description
15:8	Gainlrms1	Gain compensation for current segment 1 (Irms1 <irms 3.9.1="" <="" based="" compensa-<br="" gain="" irms0).="" refer="" to="">tion.</irms>
7:0	Gainlrms0	Gain compensation for current segment 0 (Irms > Irms0). Refer to 3.9.1 Gain Based Compensation.

### GainBlrms2 Phase B Gain Compensation for Current Segment 2

Address: 2BH Type: Read/Write Default Value: 0000H			
Bit	Name Description		
15:8	-	eserved.	
7:0	Gainlrms2	n compensation for current segment 2 (Irms < Irms1). Refer to 3.9.1 Gain Based Compensation.	

### PhiClrms01 Phase C Phase Compensation for Current Segment 0 and 1

Address: 2CH Type: Read/V Default Value	Vrite	
Bit	Name Description	
15:8	Philrms1	Phase compensation for current segment 1 (Irms1 <irms 3.9.2="" <="" based="" compensation.<="" delay="" irms0).="" phase="" refer="" td="" to=""></irms>
7:0	Philrms0	Phase compensation for current segment 0 (Irms > Irms0). Refer to 3.9.2 Delay/Phase Based Compensation.

### PhiClrms2 Phase C Phase Compensation for Current Segment 2

Address: 2DH Type: Read/W Default Value:	/rite		
Bit	Name	e Description	
15:8	-	Reserved.	
7:0	Philrms2	Phase compensation for current segment 2 (Irms < Irms1). Refer to 3.9.2 Delay/Phase Based Compen- sation.	

### GainClrms01 Phase C Gain Compensation for Current Segment 0 and 1

Address: 2EH Type: Read/W Default Value:	/rite		
Bit	Name	Name Description	
15:8	(-ainirms)	Gain compensation for current segment 1 (Irms1 <irms 3.9.1="" <="" based="" compensa-<br="" gain="" irms0).="" refer="" to="">tion.</irms>	
7:0	Gainlrms0	Gain compensation for current segment 0 (Irms > Irms0). Refer to 3.9.1 Gain Based Compensation.	

## GainClrms2 Phase C Gain Compensation for Current Segment 2

Address: 2FH Type: Read/Write Default Value: 0000H			
Bit	Name         Description		
15:8	-	Reserved.	
7:0	Gainlrms2	Gain compensation for current segment 2 (Irms < Irms1). Refer to 3.9.1 Gain Based Compensation.	

# 5.4 CONFIGURATION AND CALIBRATION REGISTERS

# 5.4.1 CONFIGURATION REGISTERS

# Table-6 Configuration Registers

Register Address	Register Name	Read/Write Type	Functional Description	Power-on Value and Comments
I		1	Configuration Registers	
31H	PLconstH	R/W	High Word of PL_Constant	0861H
32H	PLconstL	R/W	Low Word of PL_Constant	C468H
33H	MMode0	R/W	HPF/Integrator On/Off, CF and all-phase energy computation configuration	0087H
34H	MMode1	R/W	Pga Gain Configuration	0000H
35H	PStartTh	R/W	Active Startup Power Threshold.	0000H. 16 bit unsigned integer, Unit: 0.00032 Watt
36H	QStartTh	R/W	Reactive Startup Power Threshold.	0000H 16 bit unsigned integer, Unit: 0.00032 var
37H	SStartTh	R/W	Apparent Startup Power Threshold.	0000H 16 bit unsigned integer, Unit: 0.00032 VA
38H	PPhaseTh	R/W	Startup power threshold (for  P + Q  of a phase) for any phase participating Active E nergy Accumulation. Common for phase A/ B/C.	0000H 16 bit unsigned integer, Unit: 0.00032 Watt/var
39H	QPhaseTh	R/W	Startup power threshold (for  P + Q  of a phase) for any phase participating ReAc- tive Energy Accumulation. Common for phase A/B/C.	
ЗАН	SPhaseTh	RW	Startup power threshold (for  P + Q  of a phase) for any phase participating Apparent Energy Accumulation. Common for phase A/B/C.	0000H 16 bit unsigned integer, Unit: 0.00032 Watt/var

## PLconstH High Word of PL\_Constant

Address: 31H Type: Read/W Default Value:	/rite	
Bit	Name	Description
15:0	PLcon- stH[15:0]	The PLconstH[15:0] and PLconstL[15:0] bits are high word and low word of PL_Constant respectively. PL_Constant is a constant which is proportional to the sampling ratios of voltage and current, and inversely proportional to the Meter Constant. PL_Constant is a threshold for energy calculated inside the chip, i.e., energy larger than PL_Constant will be accumulated as 0.01CFx in the corresponding energy registers and then output on CFx if one CF reaches. It is suggested to set PL_constant as a multiple of 4 so as to double or redouble Meter Constant in low current state to save verification time.

### PLconstL Low Word of PL\_Constant

Address: 32H Type: Read/M Default Value:	/rite		
Bit	Bit Name Description		
15:0	PLcon- stL[15:0]	The PLconstH[15:0] and PLconstL[15:0] bits are high word and low word of PL_Constant respectively. t is suggested to set PL_constant as a multiple of 4.	

# MMode0 Metering Method Configuration

Bit	Name	Description	
15-13	-	Reserved.	
12	Freq60Hz	Current Grid operating line frequency. 0: 50Hz (default) 1: 60Hz	
11	HPFoff	Disable HPF in the signal processing path.	
10	didtEn	Enable Integrator for didt current sensor. 0: disable (default) 1: enable	
9	-	Reserved.	
8	3P3W	This bit defines the voltage/current phase sequence detection mode: 0: 3P4W (default) 1: 3P3W (Ua is Uab, Uc is Ucb, Ub is not used)	
7	CF2varh	CF2 pin source: 0: apparent energy 1: reactive energy (default)	
6-5	-	Reserved.	
4	ABSEnQ	<ul> <li>These bits configure the calculation method of total (all-phase-sum) reactive/active energy and power:</li> <li>0: Arithmetic sum: (default) ET=EA*EnPA+ EB*EnPB+ EC*EnPC PT= PA*EnPA+ PB*EnPB+ PC*EnPC</li> <li>1: Absolute sum:</li> </ul>	
3	ABSEnP	ET= EA *EnPA+  EB *EnPB+  EC *EnPC PT= PA *EnPA+  PB *EnPB+  PC *EnPC Note: ET is the total (all-phase-sum) energy, EA/EB/EC are the signed phase A/B/C energy respective Reverse energy is negative. PT is the total (all-phase-sum) power, PA/PB/PC are the signed phase A/B power respectively. Reverse power is negative.	
2	EnPA	These bits configure whether Phase A/B/C are counted into the all-phase sum energy/power (P/Q/S).	
1	EnPB	1: Corresponding Phase A/B/C to be counted into the all-phase sum energy/power (P/Q/S) (default)	
0	EnPC	0: Corresponding Phase A/B/C not counted into the all-phase sum energy/power (P/Q/S)	



#### MMode1 PGA Gain Configuration

Address: 34H Type: Read/V Default Value	Vrite	
Bit	Name	Description
15-6	-	Reserved.
5-0	PGA_GAIN	PGA gain for all ADC channels.         Mapping:         [5:4]: I3         [3:2]: I2         [1:0]: I1         Encoding:         00: 1X (default)         01: 2X         10: 4X         11: N/A

# 5.4.2 ENERGY CALIBRATION REGISTERS

# Table-7 Calibration Registers

Register Address	Register Name	Read/Write Type	Functional Description	Power-on Value
		,,	Calibration Registers	
41H	PoffsetA	R/W	Phase A Active Power Offset	0000H
42H	QoffsetA	R/W	Phase A Reactive Power Offset	0000H
43H	PoffsetB	R/W	Phase B Active Power Offset	0000H
44H	QoffsetB	R/W	Phase B Reactive Power Offset	0000H
45H	PoffsetC	R/W	Phase C Active Power Offset	0000H
46H	QoffsetC	R/W	Phase C Reactive Power Offset	0000H
47H	PQGainA	R/W	Phase A Active/reactive Energy Cali- bration Gain	0000H
48H	PhiA	R/W	Phase A Calibration Phase Angle	0000H
49H	PQGainB	R/W	Phase B Active/reactive Energy Cali- bration Gain	0000H
4AH	PhiB	R/W	Phase B Calibration Phase Angle	0000H
4BH	PQGainC	R/W	Phase C Active/reactive Energy Cali- bration Gain	0000H
4CH	PhiC	R/W	Phase C Calibration Phase Angle	0000H

### PoffsetA Phase A Active Power offset

Address: 41H Type: Read/W Default Value:	/rite		
Bit	Name	Description	
15-0	offset	Phase A active power offset, signed with complement format.	

#### QoffsetA Phase A Reactive Power offset

Address: 42H					
Type: Read/W	Type: Read/Write				
Default Value:	0000H				
Bit	Name	Description			
15-0	offset	Phase A reactive power offset, signed with complement format.			

# PQGainA Phase A Active/Reactive Energy Calibration Gain

Address: 47H Type: Read/W Default Value:	/rite		
Bit	Name	Description	
15-0	Gain	Phase A energy gain, signed with complement format.	

### PhiA Phase A Calibration Phase Angle

	Address: 48H Type: Read/Write Default Value: 0000H				
Bit	Name	Description			
15	DelayV	0: Delay Cycles are applied to current channel. (default) 1: Delay Cycles are applied to voltage channel.			
14:8	-	Reserved.			
7:0	DelayCycles	Number of delay cycles calculated in phase compensation. Unit is 2.048MHz cycle. It is an unsigned 8 bit integer.			

# 5.4.3 FUNDAMENTAL/HARMONIC ENERGY CALIBRATION REGISTERS

# Table-8 Fundamental/Harmonic Energy Calibration Registers

Register Address	Register Name	Read/Write Type	Functional Description	Power-on Value
51H	PoffsetAF	R/W	Phase A Fundamental Active Power offset	0000H
52H	PoffsetBF	R/W	Phase B Fundamental Active Power offset	0000H
53H	PoffsetCF	R/W	Phase C Fundamental Active Power offset	0000H
54H	PGainAF	R/W	Phase A Fundamental Calibration Gain	0000H
55H	PGainBF	R/W	Phase B Fundamental Calibration Gain	0000H
56H	PGainCF	R/W	Phase C Fundamental Calibration Gain	0000H



### 5.4.4 MEASUREMENT CALIBRATION

Register Address	Register Name	Read/Write Type	Functional Description	Power-on Value
61H	UgainA	R/W	Phase A Voltage RMS Gain	8000H
62H	IgainA	R/W	Phase A Current RMS Gain	8000H
63H	UoffsetA	R/W	Phase A Voltage RMS offset	0000H
64H	loffsetA	R/W	Phase A Current RMS offset	0000H
65H	UgainB	R/W	Phase B Voltage RMS Gain	8000H
66H	IgainB	R/W	Phase B Current RMS Gain	8000H
67H	UoffsetB	R/W	Phase B Voltage RMS offset	0000H
68H	loffsetB	R/W	Phase B Current RMS offset	0000H
69H	UgainC	R/W	Phase C Voltage RMS Gain	8000H
6AH	IgainC	R/W	Phase C Current RMS Gain	8000H
6BH	UoffsetC	R/W	Phase C Voltage RMS offset	0000H
6CH	loffsetC	R/W	Phase C Current RMS offset	0000H

### **Table-9 Measurement Calibration Registers**

## 5.4.5 EMM STATUS

# Table-10 EMM Status Registers

Register Address	Register Name	Read/Write Type	Functional Description	Power-on Value
70H	SoftReset	W	Software Reset	
71H	EMMState0	R	EMM State 0	
72H	EMMState1	R	EMM State 1	
73H	EMMIntState0	R/W1C	EMM Interrupt Status 0	
74H	EMMIntState1	R/W1C	EMM Interrupt Status 1	
75H	EMMIntEn0	R/W	EMM Interrupt Enable 0	
76H	EMMIntEn1	R/W	EMM Interrupt Enable 1	
78H	LastSPIData	R/W1C	Last Read/Write SPI Value	
79H	CRCErrStatus	R	CRC Error Status	
7AH	CRCDigest	R/W	CRC Digest	
7FH	CfgRegAccEn	R/W	Configure Register Access Enable	

#### SoftReset Software Reset

Address: 70H Type: Write Default Value: 0000H			
Bit	Name	Description	
15:0		Software reset register. The M90E32AS resets if 789AH is written to this register. The reset domain is the same as the RESET pin or Power On Reset. Reading this register always return 0.	

### EMMState0 EMM State 0

ddress: 71	IH		
ype: Read efault Valu	IA: 0000H		
Bit	Name	Description	
15	OIPhaseAST	Set to 1: if there is over current on phase A	
14		Set to 1: if there is over current on phase B	
13		Set to 1: if there is over current on phase C	
12		Set to 1: if there is over voltage on phase A	
11	OVPhaseBST	Set to 1: if there is over voltage on phase B	
10	OVPhaseCST	Set to 1: if there is over voltage on phase C	
9	URevWnST	Voltage Phase Sequence Error status	
8	IRevWnST	Current Phase Sequence Error status	
7	INOv0ST	When the calculated N line current is greater than the threshold set by the INWarnTh register, this bit is set.	
6	TQNoloadST	All phase sum reactive power no-load condition status	
5	TPNoloadST	All phase sum active power no-load condition status	
4	TASNoloadST	All phase arithmetic sum apparent power no-load condition status	
3	CF1RevST	Energy for CF1 Forward/Reverse status: 0: Forward 1: Reverse	
2	CF2RevST	Energy for CF2 Forward/Reverse status: 0: Forward 1: Reverse	
1	CF3RevST	Energy for CF3 Forward/Reverse status: ): Forward I: Reverse	
0	CF4RevST	Energy for CF4 Forward/Reverse status: ): Forward I: Reverse	

### EMMState1 EMM State 1

	e: 0000H				
Bit	Name	Description			
15	FreqHiST	This bit indicates whether frequency is greater than the high threshold			
14	SagPhase- AST	This bit indicates whether there is voltage sag on phase A			
13	Sag- PhaseBST	This bit indicates whether there is voltage sag on phase B			
12	SagPha- seCST	This bit indicates whether there is voltage sag on phase C			
11	FreqLoST	This bit indicates whether frequency is lesser than the low threshold			
10	PhaseLos- sAST	This bit indicates whether there is a phase loss in Phase A			
9	PhaseLoss- BST	This bit indicates whether there is a phase loss in Phase B			
8	PhaseLoss- CST	This bit indicates whether there is a phase loss in Phase C			
7	QERegTPST	ReActive (Q) Energy (E) Register (Reg) of all channel total sum (T) Positive (P) Status (ST): 0: Positive, 1: Negative			
6	QERegAPST	ReActive (Q) Energy (E) Register (Reg) of Channel (A/B/C) Positive (P) Status (ST):			
5	QERegBPST	0: Positive,			
4	QERegCPST	1: Negative			
3	PERegTPST	Active (P) Energy (E) Register (Reg) of all channel total sum (T) Positive (P) Status (ST) 0: Positive, 1: Negative			
2	PERegAPST	Active (P) Energy (E) Register (Reg) of Channel (A/B/C) Positive (P) Status (ST)			
1	PERegBPST	0: Positive,			
0	PERegCPST				

## EMMIntState0 EMM Interrupt Status 0

ault Valu	ie: 0000H					
Bit	Name	Description				
15	OIPhaseAIntS T	Over current on phase A status change flag				
14	OIPhaseBIntS T	Over current on phase B status change flag				
13	OIPhaseCInt ST	Over current on phase C status change flag				
12	OVPhaseAInt ST	Over Voltage on phase A status change flag				
11	OVPhaseBInt ST	Over Voltage on phase B status change flag				
10	OVPhaseCInt ST	Over Voltage on phase C status change flag				
9	URevWn- IntST	Voltage Phase Sequence Error status change flag				
8	IRevWnIntST	Current Phase Sequence Error status change flag				
7	INOv0IntST	Neutral line over current status change flag				
6	TQNoload- IntST	All phase sum reactive power no-load condition status change flag				
5	TPNoload- IntST	All phase sum active power no-load condition status change flag				
4	TASNoload- IntST	All phase arithmetic sum apparent power no-load condition status change flag				
3	CF1RevIntST	Energy for CF1 Forward/Reverse status change flag				
2	CF2RevIntST	Energy for CF2 Forward/Reverse status change flag				
1	CF3RevIntST	Energy for CF3 Forward/Reverse status change flag				
0	CF4RevIntST	Energy for CF4 Forward/Reverse status change flag				

## EMMIntState1 EMM Interrupt Status 1

	H Write 1 Clear e: 0000H		
Bit	Name	Description	
15	FreqHiIntST	FreqHiST change flag	
14	SagPhase- AIntST	Voltage sag on phase A status change flag	
13	SagPhase- BIntST	Voltage sag on phase B status change flag	
12	SagPhase- CIntST	Voltage sag on phase C status change flag	
11	FreqLoIntST	FreqLoST change flag	
10	PhaseLos- sAIntST	Voltage PhaseLoss on phase A status change flag	
9	PhaseLoss- BIntST	Voltage PhaseLoss on phase B status change flag	
8	PhaseLoss- CIntST	Voltage PhaseLoss on phase C status change flag	
7	QERegT- PIntST	ReActive (Q) Energy (E) Register (Reg) of all channel total sum (T) Positive (P) status change flag (Int	
6	QERegAP- IntST		
5	QERegB- PIntST	ReActive (Q) Energy (E) Register (Reg) of all channel (A/B/C) Positive (P) status change flag (IntST	
4	QE RegCPIntST		
3	PERegT- PIntST	Active (P) Energy (E) Register (Reg) of all channel total sum (T) Positive (P) status change flag (IntST	
2	PERegAP- IntST		
1	PERegB- PIntST	Active (P) Energy(E) Register (Reg) of Channel (A/B/C) Positive (P) status change flag (IntST)	
0	PE RegCPIntST		

## EMMIntEn0 EMM Interrupt Enable 0

ault Valu	ie: 0000H					
Bit	Name	Description				
15	OIPhaseAIntE N	Phase A Over current status change interrupt generation enable				
14	OIPhaseBIntE N	Phase B Over current status change interrupt generation enable				
13	OIPhaseCInt EN	Phase C Over current status change interrupt generation enable				
12	OVPhaseAInt EN	Phase A Over Voltage status change interrupt generation enable				
11	OVPhaseBInt EN	Phase B Over Voltage status change interrupt generation enable				
10	OVPhaseCInt EN	Phase C Over Voltage status change interrupt generation enable				
9	URevWnIntE N	Voltage Phase Sequence Error Status Change Interrupt Generation Enable				
8	IRevWnIntEN	Current Phase Sequence Error Status Change Interrupt Generation Enable				
7	INOv0IntEN	Neutral line over current Status Change Interrupt Generation Enable				
6	TQNoloadIntE N	All phase sum reactive power no-load condition Status Change Interrupt Generation Enable				
5	TPNoloadIntE N	All phase sum active power no-load condition Status Change Interrupt Generation Enable				
4	TASNoload- IntEN	All phase arithmetic sum apparent power no-load condition Status Change Interrupt Generation Enal				
3	CF1RevIntEN	Energy for CF1 Forward/Reverse Status Change Interrupt Generation Enable				
2	CF2RevIntEN	Energy for CF2 Forward/Reverse Status Change Interrupt Generation Enable				
1	CF3RevIntEN	Energy for CF3 Forward/Reverse Status Change Interrupt Generation Enable				
0	CF4RevIntEN	Energy for CF4 Forward/Reverse Status Change Interrupt Generation Enable				

## EMMIntEn1 EMM Interrupt Enable 1

Bit	Name	Description				
15	FreqHiIntEn	FreqHiIntST status change interrupt generation enable				
14	SagPhase- AIntEN	Phase A Sag status change interrupt generation enable				
13	SagPhase- BIntEN	Phase B Sag status change interrupt generation enable				
12	SagPhase- CIntEN	Phase C Sag status change interrupt generation enable				
11	FreqLoIntEn	FreqLoIntST status change interrupt generation enable				
10	PhaseLos- sAIntEN	Phase A Phase Loss status change interrupt generation enable				
9	PhaseLoss- BIntEN	Phase B Phase Loss status change interrupt generation enable				
8	PhaseLoss- CIntEN	Phase C Phase Loss status change interrupt generation enable				
7	QERegTPIntE N					
6	QERegAP- IntEN	ReActive (Q) Energy(E) Register (Reg) of all channel totoal sum (T) Positive (P) Status Change Intern				
5	QERegB- PIntEN	Generation Enable (IntEN)				
4	QE RegCPIntEN					
3	PERegTPIntE N					
2	PERegAPIntE N	Active (P) Energy (E) Register (Reg) of Channel A (A) Positive (P) Status Change Interrupt Generatior				
1	PERegBPIntE N	nable (ST)				
0	PERegCPIntE N					

### LastSPIData Last Read/Write SPI Value

Address: 78H Type: Read Default Value: 0000H				
Bit	Bit Name Description			
		This register is a special register which logs data of the previous SPI Read or Write access especially for Read/Clear registers. This register is useful when the user wants to check the integrity of the last SPI access.		

### CRCErrStatus CRC Error Status

Address: 79H Type: Read Default Value:		
Bit	Name	Description
15:2	-	Reserved.
1		Internal register CRC error
0	CFG_CRC_E RR	Configuration registers CRC error

# CRCDigest CRC Digest

Address: 7AH Type: Read/ Write Default Value: 0000H					
Bit	Name Description				
15:0 CRCDigest read operation.		This register can be conditionally written as the portal to update the golden CRC that internally latched.			

# CfgRegAccEn Configure Register Access Enable

Address: 7FH Type: Read/ Write Default Value: 0000H				
Bit	Description			
15:0	CfgRegAccEn	Enable register access configuration. '0x55AA' : Allow register configuration access (configuration operation). '0xAA55': Allow write to the "Golden CRC" register at the address of CRCDigest, on top of normal operation/CRC checking mode. This is just for validation of this feature. other: Normal operation. The device will start to compute a CRC digest/checksum and latch it the golden CRC register, then continuously running to check with it.		



# 5.5 ENERGY REGISTER

# 5.5.1 REGULAR ENERGY REGISTERS

# Table-11 Regular Energy Registers

Register Address	Register Name	Read/Write Type	Functional Description	Comment
80H	APenergyT	R/C	Total Forward Active Energy	
81H	APenergyA	R/C	Phase A Forward Active Energy	
82H	APenergyB	R/C	Phase B Forward Active Energy	
83H	APenergyC	R/C	Phase C Forward Active Energy	
84H	ANenergyT	R/C	Total Reverse Active Energy	
85H	ANenergyA	R/C	Phase A Reverse Active Energy	
86H	ANenergyB	R/C	Phase B Reverse Active Energy	
87H	ANenergyC	R/C	Phase C Reverse Active Energy	
88H	RPenergyT	R/C	Total Forward Reactive Energy	
89H	RPenergyA	R/C	Phase A Forward Reactive Energy	Resolution is 0.01CF. Cleared after
8AH	RPenergyB	R/C	Phase B Forward Reactive Energy	read.
8BH	RPenergyC	R/C	Phase C Forward Reactive Energy	
8CH	RNenergyT	R/C	Total Reverse Reactive Energy	
8DH	RNenergyA	R/C	Phase A Reverse Reactive Energy	
8EH	RNenergyB	R/C	Phase B Reverse Reactive Energy	
8FH	RNenergyC	R/C	Phase C Reverse Reactive Energy	
90H	SAenergyT	R/C	Total (Arithmetic Sum) Apparent E nergy	
91H	SenergyA	R/C	Phase A Apparent Energy	1
92H	SenergyB	R/C	Phase B Apparent Energy	1
93H	SenergyC	R/C	Phase C Apparent Energy	1

## 5.5.2 FUNDAMENTAL / HARMONIC ENERGY REGISTER

Register Address	Register Name	Read/Write Type	Functional Description	Comment
A0H	APenergyTF	R/C	Total Forward Active Fundamental E nergy	
A1H	APenergyAF	R/C	Phase A Forward Active Fundamental Energy	
A2H	APenergyBF	R/C	Phase B Forward Active Fundamental Energy	
A3H	APenergyCF	R/C	Phase C Forward Active Fundamen- tal Energy	
A4H	ANenergyTF	R/C	Total Reverse Active Fundamental E nergy	
A5H	ANenergyAF	R/C	Phase A Reverse Active Fundamen- tal Energy	
A6H	ANenergyBF	R/C	Phase B Reverse Active Fundamen- tal Energy	
A7H	ANenergyCF	R/C	Phase C Reverse Active Fundamental Energy	Resolution is 0.01CF. Cleared after read.
A8H	APenergyTH	R/C	Total Forward Active Harmonic Energy	
A9H	APenergyAH	R/C	Phase A Forward Active Harmonic E nergy	
AAH	APenergyBH	R/C	Phase B Forward Active Harmonic E nergy	
ABH	APenergyCH	R/C	Phase C Forward Active Harmonic E nergy	
ACH	ANenergyTH	R/C	Total Reverse Active Harmonic Energy	
ADH	ANenergyAH	R/C	Phase A Reverse Active Harmonic E nergy	
AEH	ANenergyBH	R/C	Phase B Reverse Active Harmonic E nergy	
AFH	ANenergyCH	R/C	Phase C Reverse Active Harmonic E nergy	

# 5.6 MEASUREMENT REGISTERS

# 5.6.1 POWER AND POWER FACTOR REGISTERS

# Table-13 Power and Power Factor Register

Register Address	Register Name	Read/Write Type	Functional Description	Comment		
B0H	PmeanT	R	Total (All-phase-sum) Active Power			
B1H	PmeanA	R	Phase A Active Power	Complement,		
B2H	PmeanB	R	Phase B Active Power	Power=32-bit register value* 0.00032 W		
B3H	PmeanC	R	Phase C Active Power			
B4H	QmeanT	R	Total (All-phase-sum) Reactive Power	Complement,		
B5H	QmeanA	R	Phase A Reactive Power			
B6H	36H QmeanB		Phase B Reactive Power	Power=32-bit register value* 0.00032 var		
B7H	QmeanC	R	Phase C Reactive Power			
B8H	SAmeanT	R	Total (Arithmetic Sum) Apparent Power	Complement,		
B9H	SmeanA R		Phase A Apparent Power	Power=32-bit register value* 0.00032		
BAH	SmeanB			Ň		
BBH	SmeanC	R	Phase C Apparent Power	*		
BCH	PFmeanT	R	Total Power Factor	Signed with complement format,		
BDH	PFmeanA	R	Phase A Power Factor	X.XXX		
BEH	PFmeanB	R	Phase B Power Factor	LSB is 0.001. Range from -1000 to		
BFH	PFmeanC	R	Phase C Power Factor	+1000		
С0Н	PmeanTLSB	R	Lower Word of Total (All-phase-sum) Active Power	Lower word of Active Powers.		
C1H	PmeanALSB	R	Lower Word of Phase A Active Power			
C2H	PmeanBLSB	R	Lower Word of Phase B Active Power	Lower word of Active Powers.		
C3H	PmeanCLSB	R	Lower Word of Phase C Active Power	*		
C4H	QmeanTLSB	R	Lower Word of Total (All-phase-sum) Reactive Power	Lower word of ReActive Powers.		
C5H	QmeanALSB	R	Lower Word of Phase A Reactive Power			
C6H	QmeanBLSB	R	Lower Word of Phase B Reactive Power	Lower word of ReActive Powers.		
C7H	QmeanCLSB	R	Lower Word of Phase C Reactive Power			
C8H	SAmeanTLSB	R	Lower Word of Total (Arithmetic Sum) Apparent Power	Lower word of Apparent Powers.		
С9Н	SmeanALSB	R	Lower Word of Phase A Apparent Power			
САН	SmeanBLSB	R	Lower Word of Phase B Apparent Power	Lower word of Apparent Powers.		
СВН	SmeanCLSB	R	Lower Word of Phase C Apparent Power	1		

### 5.6.2 FUNDAMENTAL/ HARMONIC POWER AND VOLTAGE/ CURRENT RMS REGISTERS

Register Address	Register Name	Read/Write           Name         Type         Functional Description		Comment	
D0H	PmeanTF	R	Total Active Fundamental Power	Complement, Power=32-bit register value* 0.00032 V	
D1H	PmeanAF	R	Phase A Active Fundamental Power		
D2H	PmeanBF	R	Phase B Active Fundamental Power	Complement, Power=32-bit register value* 0.00032 W	
D3H	PmeanCF	R	Phase C Active Fundamental Power		
D4H	PmeanTH	R	Total Active Harmonic Power	Complement, Power=32-bit register value* 0.00032 W	
D5H	PmeanAH	R	Phase A Active Harmonic Power		
D6H	PmeanBH	R	Phase B Active Harmonic Power	Complement, Power=32-bit register value* 0.00032 W	
D7H	PmeanCH	R	Phase C Active Harmonic Power		
D9H	UrmsA	R	Phase A Voltage RMS		
DAH	UrmsB	R	Phase B Voltage RMS	Unsigned, 1LSB corresponds to 0.01 V	
DBH	UrmsC	R	Phase C Voltage RMS		
DCH	IrmsN	R	N Line Calculated Current RMS	Unsigned 16-bit integer with unit of 0.001A	
DDH	IrmsA	R	Phase A Current RMS		
DEH	IrmsB	R	Phase B Current RMS	1LSB corresponds to 0.001 A	
DFH	IrmsC	R	Phase C Current RMS		
E0H	PmeanTFLSB	R	Lower Word of Total Active Funda- mental Power	Lower word of D0H register.	
E1H	PmeanAFLSB	R	Lower Word of Phase A Active Funda- mental Power		
E2H	PmeanBFLSB	R	Lower Word of Phase B Active Funda- mental Power	Lower word of registers from D1H to D3H.	
E3H	PmeanCFLSB	R	Lower Word of phase C active funda- mental Power		
E9H	UrmsALSB	R	Lower Word of Phase A Voltage RMS		
EAH	UrmsBLSB	R	Lower Word of Phase B Voltage RMS	Lower word of registers from D9H to DBH.	
EBH	UrmsCLSB	R	Lower Word of Phase C Voltage RMS		
EDH	IrmsALSB	R	Lower Word of Phase A Current RMS		
EEH	IrmsBLSB	R	Lower Word of Phase B Current RMS	Lower word of registers from DDH to DFH.	
EFH	IrmsCLSB	R	Lower Word of Phase C Current RMS		
Note: The p	ower regisiters are all of 32	-bit. The E0H~E	EFH registers are the lower words of the	D0H~DFH registers.	

# Table-14 Fundamental/ Harmonic Power and Voltage/ Current RMS Registers

### 5.6.3 PEAK, FREQUENCY, ANGLE AND TEMPERATURE REGISTERS

Register Address	Register Name	Read/Write Type	Functional Description	Comment		
F1H	UPeakA	R	Channel A Voltage Peak			
F2H	UPeakB	R	Channel B Voltage Peak			
F3H	UPeakC	R	Channel C Voltage Peak			
F5H	IPeakA	R	Channel A Current Peak			
F6H	IPeakB	R	Channel B Current Peak			
F7H	IPeakC	R	Channel C Current Peak			
F8H	Freq	R	Frequency	1LSB corresponds to 0.01 Hz		
F9H	PAngleA	R	Phase A Mean Phase Angle	Unsigned, 1LSB corresponds to 0.1 degree,		
FAH	PAngleB	R	Phase B Mean Phase Angle			
FBH	PAngleC	R	Phase C Mean Phase Angle	0°~+360.0°		
FCH	Temp	R	Measured Temperature	1LSB corresponds to 1 °C Signed, MSB as the sign bit		
FDH	UangleA	R	Phase A Voltage Phase Angle	Always '0'		
FEH	UangleB R Phase B Voltage Phase Angle		Phase B Voltage Phase Angle	Unsigned,		
FFH	UangleC	R Phase C Voltage Phase Angle		1LSB corresponds to 0.1 degree, 0°~+360.0°		

# Table-15 Peak, Frequency, Angle and Temperature Registers

### UPeakA Channel A Voltage Peak

Address: F1H Type: Read Default Value:		
Bit	Name	Description
15:0	UPeakDataA	Channel A voltage peak data detected in the configured period. Component. Unit is V. UPeak is calculated as below: $UPeak = UPeakRegVdue \times \frac{UgainRegVdue}{100 \times 2^{13}}$ Here UgainRegValue is the register value of the Ugain (61H/65H/69H) register.

### IPeakA Channel A Current Peak

Address: F5H Type: Read Default Value:		
Bit	Name	Description
15:0	IPeakDataA	Channel A current peak data detected in the configured period. Component. Unit is A. IPeak is calculated as below: <i>IPeak = IPeakRegValue</i> $\times \frac{IgainRegValue}{1000 \times 2^{13}}$ Here IgainRegValue is the register value of the Igain (62H/66H/6AH) register.

# 6 ELECTRICAL SPECIFICATION

# 6.1 ELECTRICAL SPECIFICATION

Parameter	Min	Тур	Мах	Unit	Test Condition/ Comments
		Accu	racy	1	
DC Power Supply Rejection Ratio (PSRR) <sup>note1</sup>			±0.1	%	VDD=3.3V $\pm$ 0.3V, I=5A, V=220V, CT 1000:1, sampling resistor 4.8 $\Omega$
AC Power Supply Rejection Ratio (PSRR) <sup>note1</sup>			±0.1	%	VDD=3.3V superimposes 400mVrms, I=5A, V=220V, CT 1000:1, sampling resistor 4.8 $\Omega$
Active Energy Error (Dynamic Range 6000:1)			±0.1	%	CT 1000:1, sampling resistor 4.8 $\Omega$
		ADC Ch	nannel		
Channel Differential Input <sup>note1</sup>	120µ		720m	Vrms	PGA=1
Voltage Channel Input Impedance		120		KΩ	PGA=1
Current Channel Input Impedance		120 80 50		ΚΩ	PGA=1 PGA=2 PGA=4
Channel Sampling Frequency		8		kHz	
Channel Sampling Bandwidth		2		kHz	
-	<b>Femperat</b>	ure Sens	or and Re	ference	
Temperature Sensor Accuracy		1		°C	
Reference voltage		1.2		V	3.3 V, 25 °C
Reference voltage temperature coefficient <sup>note1</sup>		6	15	ppm/ °C	From -40 to 85 °C
	(	Current d	etectors		
Current Detector threshold range	1.5		4	mVrms	3.3 V, 25 °C
Current Detector threshold setting step/ resolu- tion		0.05		mVrms	3.3 V, 25 °C
Current Detector detection time (single-side)	32			ms	
Current Detector detection time (double-side)	17			ms	
	(	Crystal O	scillator		
Oscillator Frequency (f <sub>sys_clk</sub> )		16.384		MHz	The Accuracy of crystal or external clock is $\pm 20$ ppm, 10pF ~ 20pF crystal load capacitor integrated.
		Power S	Supply		
AVDD	2.8	3.3	3.6	V	
DVDD	2.8	3.3	3.6	V	
VDD18		1.8		V	
	С	perating	Currents	1	
Normal mode operating current (I-Normal)		13		mA	3.3 V, 25 °C
Idle mode operating current (I-Idle)		<0.1	1	μΑ	
Detection mode operating current (I-Detection)		200 100	230 115	μΑ	Double-side detection Single-side detection
Partial Measurement mode operating current (I-Measurement)		7		mA	3.3 V, 25°C

Parameter	Min	Тур	Max	Unit	<b>Test Condition/ Comments</b>
		S	PI		1
Slave mode (SPI) bit rate	400		<b>1100k</b> <sup>note2</sup>	bps	
		ES	SD		
Charged Device Model (CDM)		500		V	JESD22-C101
Human Body Model (HBM)		4000		V	JESD22-A114
Latch Up			±100	mA	JESD78A
Latch Up			5.4	V	JESD78A
	D	C Chara	cteristics		
Digital Input High Level (all digital pins except OSCI)	2.0		5.5	V	VDD=3.3V, 5V digital input compatible
Digital Input Low Level (all digital pins except OSCI)			0.8	V	VDD=3.3V
Digital Input Leakage Current			±1	μA	VDD=3.6V, VI=VDD or GND
Digital Output Low Level (CF1, CF2, CF3, CF4, ZX0, ZX1, ZX2, SDO)			0.4	V	VDD=3.3V, I <sub>OL</sub> =8mA
Digital Output Low Level (IRQ0, IRQ1, War-nOut)			0.4	V	VDD=3.3V, I <sub>OL</sub> =5mA
Digital Output High Level (CF1, CF2, CF3, CF4, ZX0, ZX1, ZX2, SDO)	VDD-0.4			V	VDD=3.3V, I <sub>OH</sub> =-8mA, by separately
Digital Output High Level (IRQ0, IRQ1, War-nOut)	VDD-0.4			V	VDD=3.3V, I <sub>OH</sub> =-5mA, by separately

note2: The maximum SPI bit rate during current detector calibration is 900k bps.

**Atmel** 

## 6.2 METERING/ MEASUREMENT ACCURACY

#### 6.2.1 METERING ACCURACY

Metering accuracy or energy accuracy is calculated with relative error:

$$\gamma = \frac{E_{mea} - E_{real}}{E_{real}} \times 100\%$$

Where  $E_{mea}$  is the energy measured by the meter,  $E_{real}$  is the actual energy measured by a high accurate normative meter.

Table-16 Metering Accuracy for Different Energy within the Dynamic Range

Energy Type	Energy Pulse	ADC Range When Gain=1	Metering Accuracy <sup>note</sup>	
		PF=1.0 120µV-720mV		
Active energy (Per phase and all-phase-sum)	CF1	PF=0.5L, 180µV-720mV	0.1%	
(Fel pliase and all-pliase-sum)		PF=0.8C, 150µV-720mV		
		sinΦ=1.0 120 <b>μ</b> V-720mV		
Reactive energy (Per phase and all-phase-sum)	CF2	sinΦ=0.5L, 180 <b>μ</b> V-720mV	0.2%	
(rei pilase and an-pilase-sum)		sinΦ=0.8C, 150 <b>μ</b> V-720mV		
Apparent energy (Per phase and arithmetic all-phase- sum)	CF2	600µV-720mV <sup>note 2</sup>	0.2%	
		PF=1.0 120µV-720mV		
Fundamental active energy	CF3	PF=0.5L, 180µV-720mV	0.2%	
(Per phase and all-phase-sum)		PF=0.8C, 150µV-720mV		
		PF=1.0 120µV-720mV		
Harmonic active energy (Per phase and all-phase-sum)	CF4	PF=0.5L, 180 <b>µ</b> V-720mV	0.5%	
(rei pilase allu all-pilase-sulli)		PF=0.8C, 150µV-720mV		

Note 1: All the parameters in this table is tested on Atmel test platform.

Note 2: Apparent energy is tested using active energy with unity power factor since there's no standard for apparent energy. Signal below 600 µV is not tested.



#### 6.2.2 MEASUREMENT ACCURACY

The measurements are all calculated with fiducial error except for frequency.

Fiducial error is calculated as follows:

$$Fiducial\_Error = \frac{U_{mea} - U_{real}}{U_{FV}} * 100\%$$

Where  $U_{mea}$  means the measured data of one measurement parameter, and  $U_{real}$  means the real/actual data of the parameter,

U<sub>FV</sub> means the fiducial value of this measurement parameter, which can be defined as Table-17.

		M90E32AS Defined		
Measurement	Fiducial Value (FV)	Format	Range	Comment
Voltage	reference voltage Un	XXX.XX	0 ~ 655.35V	Unsigned integer with unit of 0.01V
Current	maximum current Imax (4×In is recom- mended)	XX.XXX	0 ~ 65.535A	Unsigned integer with unit of 0.001A
Voltage rms	Un	XXX.XX	0 ~ 655.35V	Unsigned integer with unit of 0.01V
Current rms note 1	lb/ln	XX.XXX	0 ~ 65.535A	Unsigned integer with unit of 0.001A
Frequency	Reference Fre- quency 50 Hz	XX.XX	45.00~65.00 Hz	Signed integer with unit/LSB of 0.01Hz
Power Factor	1.000	X.XXX	-1.000 ~ +1.000	Signed integer, LSB/Unit = 0.001
Phase Angle <sup>note 2</sup>	180°	XXX.X	-180° ~ +180°	Signed integer, unit/LSB = $0.1^{\circ}$

Table-17 Measurement Parameter Range and Format

Note 1:

All registers are of 16-bit. For cases when the current or active/reactive/apparent power goes beyond the above range, it is suggested to be handled by MCU in application. For example, register value can be calibrated to 1/2 of the actual value during calibration, then multiply 2 in application.

Note 2:

Phase angle is obtained when voltage/current crosses zero at the sampling frequency of 256kHz.

For the above mentioned parameters, the measurement accuracy requirement is 0.5% maximum.

For frequency, temperature:

Parameter Accuracy

Frequency: 0.01Hz

Temperature: 1 °C

Accuracy of all orders of harmonics: 5% relative error

## 6.3 INTERFACE TIMING

#### 6.3.1 SPI INTERFACE TIMING (SLAVE MODE)

The SPI interface timing is as shown in Figure-22 and Table-18.

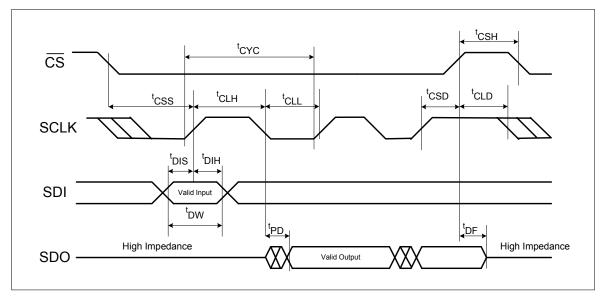


Figure-22 SPI Timing Diagram

#### Table-18 SPI Timing Specification

Symbol	Description	Min.	Typical	Max.	Unit
t <sub>CSH</sub>	Minimum CS High Level Time	2T <sup>note 1</sup> +10			ns
t <sub>CSS</sub>	CS Setup Time	2T+10			ns
t <sub>CSD</sub>	CS Hold Time	3T+10			ns
t <sub>CLD</sub>	Clock Disable Time	1T			ns
t <sub>CYC</sub>	SCLK cycle	7T+10			ns
t <sub>CLH</sub>	Clock High Level Time	5T+10			ns
t <sub>CLL</sub>	Clock Low Level Time	2T+10			ns
t <sub>DIS</sub>	Data Setup Time	2T+10			ns
t <sub>DIH</sub>	Data Hold Time	1T+10			ns
t <sub>DW</sub>	Minimum Data Width	3T+10			ns
t <sub>PD</sub>	Output Delay			2T+20	ns
t <sub>DF</sub>	Output Disable Time			2T+20	ns

# 6.4 POWER ON RESET TIMING

In most case, the power of M90E32AS and MCU are both derived from 220V power lines. To make sure M90E32AS is reset and can work properly, MCU must force M90E32AS into idle mode firstly and then into normal mode. In this operation, RESET is held to high in idle mode and de-asserted by delay T1 after idle-normal transition. Refer to Figure-23.

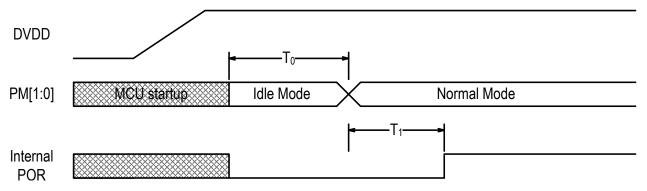


Figure-23 Power On Reset Timing (M90E32AS and MCU are Powered on Simultaneously)

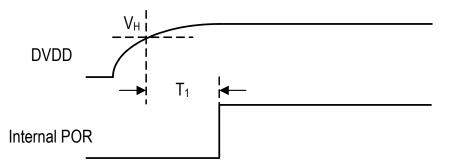


Figure-24 Power On Reset Timing in Normal & Partial Measurement Mode

#### Table-19 Power On Reset Specification

Symbol	Description	Min	Тур	Мах	Unit
V <sub>H</sub>	Power On Trigger Voltage		2.5	2.7	V
T <sub>0</sub>	Duration forced in idle mode after power on	1			ms
T <sub>1</sub>	Delay time after power on or exit idle mode	5	16	40	ms

# 6.5 ZERO-CROSSING TIMING

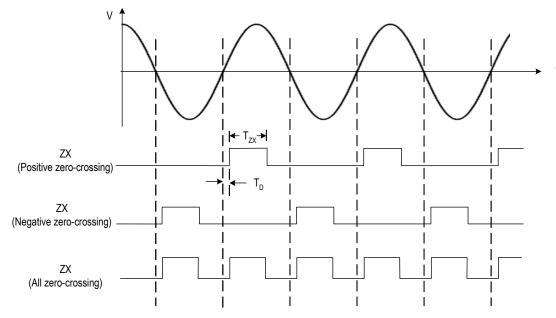


Figure-25 Zero-Crossing Timing Diagram (per phase)

## Table-20 Zero-Crossing Specification

Symbol	Description	Min	Тур	Мах	Unit
T <sub>ZX</sub>	High Level Width		5		ms
T <sub>D</sub>	Delay Time		0.2	0.5	ms



# 6.6 VOLTAGE SAG AND PHASE LOSS TIMING

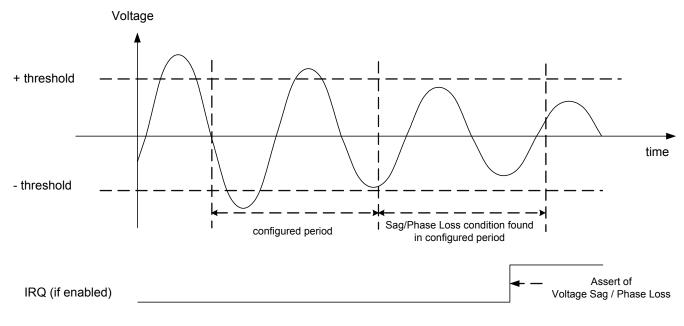


Figure-26 Voltage Sag and Phase Loss Timing Diagram

# 6.7 ABSOLUTE MAXIMUM RATING

Parameter	Maximum Limit
Relative Voltage Between AVDD and AGND	-0.3V~4.5V
Relative Voltage Between DVDD and DGND	-0.3V~4.5V
Analog Input Voltage (I1P, I1N, I2P, I2N, I3P, I3N, V1P, V1N, V2P, V2N, V3P, V3N)	-0.6V~AVDD
	-0.3V~DVDD
Digital Input Voltage	-0.3V~5.5V, for 5V tolerance pins
Operating Temperature Range	-50~120 °C
Maximum Junction Temperature	150 °C


Package Type	Thermal Resistance $\theta_{JA}$	Unit	Condition
TQFP48	58.5	°C/W	No Airflow



# **ORDERING INFORMATION**

Atmel Ordering Code	Package	Carrier	Temperature Range
ATM90E32AS-AU-R	TQFP48	Tape&Reel	Industry (-40°C to +85°C)
ATM90E32AS-AU-Y	TQFP48	Tray	Industry (-40°C to +85°C)

# PACKAGE DIMENSIONS

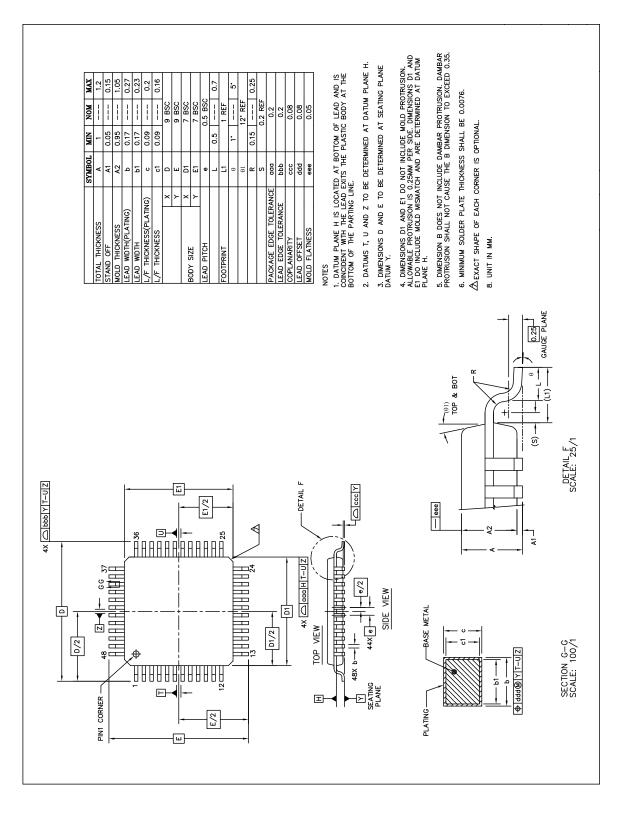

# **REVISION HISTORY**

Doc. Rev.	Date	Comments
46003A	05/20/2014	Initial document release in Atmel.
46003B	02/12/2015	Changed from Preliminary Datasheet to Datasheet. Added notes to section 6.1.

# Atmel Enabling Unlimited Possibilities®



I

Atmel Corporation 1600 Technology Drive, San Jose, CA 95110 USA T: (+1)(408) 441.0311 F: (+1)(408) 4

F: (+1)(408) 436.4200

www.atmel.com

© 2015 Atmel Corporation. All rights reserved. / Rev.: Atmel-46003B-SE-M90E32AS-Datasheet\_02122015.

Atmel®, Atmel logo and combinations thereof, Enabling Unlimited Possibilities®, and others are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

DISCLAIMER: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINCEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not suitable for, and shall not be used in automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

SAFETY-CRITICAL, MILITARY, AND AUTOMOTIVE APPLICATIONS DISCLAIMER: Atmel products are not designed for and will not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death ("Safety-Critical Applications") without an Atmel officer's specific written consent. Safety-Critical Applications include, without limitation, life support devices and systems, equipment or systems for the operation of nuclear facilities and weapons systems. Atmel products are not designed nor intended for use in military or aerospace applications or environments unless specifically designated by Atmel as military-grade. Atmel products are not designed nor intended for use in automotive applications unless specifically designated by Atmel as automotive-grade.



单击下面可查看定价,库存,交付和生命周期等信息

>>Microchip Technology