

AC Current Transducer AP-B420L


Split-core transducer for the electronic measurement of AC sinusoidal waveform currents, with galvanic separation between the primary circuit and the secondary circuit. Switch selectable measuring ranges and RMS 4-20 mA current output (loop powered).



Electrical data			
Primary nominal current $I_{\rm PN}$ (At RMS)	Output current $I_{\text{out}}(\text{mA})$	Types	RoHS since date code
10, 25, 50	4-20	AP 50 B420L	47129
50, 75, 100	4-20	AP 100 B420L	47113
100, 150, 200	4-20	AP 200 B420L	47150
200, 300, 400	4-20	AP 400 B420L	. 47150
$U_{\rm C}$ Supply voltage (loop powered) $R_{\rm L}$ Load resistance, with $U_{\rm C}$ = +24 V DC ¹⁾ $J_{\rm SL}$ Output current limitation ²⁾ Primary withstand peak current (maximum)		+12 24 < 350 < 25	V DC Ω mA
$\hat{I}_{P \text{ max}}$ Primary withstan	a peak current (maximum)	no limitatio	n

Accuracy - Dynamic performance data					
ε ε_{L} I_{OE} TCI_{OE} TCI_{out} $t_{D,90}$	Error @ I_{PN} , T_{A} = 25 °C (excluding offset) Linearity error (0 $\pm I_{PN}$) Electrical offset current @ T_{A} = 25 °C Temperature coefficient of I_{OE} Temperature coefficient of I_{out} (% of reading) Delay time to 90 % of the final output value for I_{PN} step	< ±1 < ±0.5 4 ±1 ±0.1 < 150	% of $I_{\rm PN}$ % of $I_{\rm PN}$ mA $\mu {\rm A/K}$ %/K		
BW	Frequency bandwidth (±1 %)	30 2000	Hz		
	1 7 (* * * *)				

1) Max. Load Resistance vs. Supply voltage Notes:

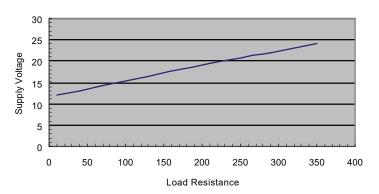

- ²⁾ The output current will never exceed this value for safety and protection reasons. The output value is not valid when measuring above the primary nominal current value.
- 3) Although the transducer can withstand very high currents, the measuring performance specified in the datasheet is valid within the 4-20 mA output range only.

$I_{PN} = 10 \dots 400 A$



Features

- RMS output (average)
- Split-core type
- Loop powered 4-20 mA current
- DIN rail or Panel mounting
- Switch selectable measuring ranges
- Insulating plastic case recognized according to UL 94-V0.

Advantages

- Ø 18 mm
- High insulation between primary and secondary circuits
- Eliminates insertion loss
- · Easy installation.

Applications

- · Automation systems Analog current reading for remote monitoring (e.g. motor) and sotware alarms.
- Panel meters Simple connection to power consumption displays.

Application domains

- Energies
- Automation.

N°74.43.25.000.0; N°74.43.34.000.0; N°74.43.44.000.0; N°74.43.48.000.0



Current Transducer AP-B420L

General data					
T_{A}	Ambient operating temperature	-20 + 60	°C		
T_{Ast}	Ambient storage temperature	-20 + 85	°C		
RH	Relative Humidity (non-condensing) 1)	≤ 85	%		
	Altitude above sea level (indoor use only)	2000	m		
m	Mass	90	g		
IPxx	Protection degree	IP 20			
Insulation coordination					

Rated insulation RMS voltage 2) 300 $U_{\rm Nm}$ with IEC 61010-1 standards and following conditions:

- Reinforced insulation
- Over voltage category CAT III
- Pollution degree PD2

U_{d}	RMS voltage for AC insulation test 3) 50 Hz, 1 min	4.13	kV
U_{t}	Partial discharge test voltage $(q_{\rm m}$ < 10 pC)	1.5	kV
U_{Ni}	Impulse withstand voltage 1.2/50 μs	6.1	kV
d_{Cp}	Creepage distance	5.5	mm
$d_{\rm Cl}$	Clearance ⁴⁾	5.5	mm
CTI	Comparative tracking index (Group I)	600	

Notes:

For example:

Cable insulation (primary) Category HAR 05 600 V CAT III HAR 07 1000 V CAT III

¹⁾ Long-term exposure to high humidity environment may affect to product reliability.

²⁾ If insulated cable is used for the primary circuit, the voltage category could be improved according to the insulation coordination given by the cable manufacturer.

³⁾ Between primary (completely filling the primary aperture) and secondary.

⁴⁾ Insulation distance between primary and secondary may be reduced at actual Installation depending on type and shape of primary conductor. In such case, it is highly recommended to use insulated cable in order to maintain required insulation voltage.



Current Transducer AP-B420L

Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly! Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications. Ensure you get up-to-date technical information that can be found in the latest associated datasheet under www.lem.com.



Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage! The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training.

The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor. The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturer' operating instructions.



Caution, Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (eg. primary conductor, power supply).

The user shall ensure to take all measures necessary to protect against

electical shock. The transducer is a build-in device containing conducting parts that shall not be accessible after installation.


A protective enclosure or additional insulation barrier may be necessary. The transducer shall not be put into operation if the jaw opening is open (split core version) or the installation is not completed.


Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.


Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.



Dimensions AP-B420L (in mm)

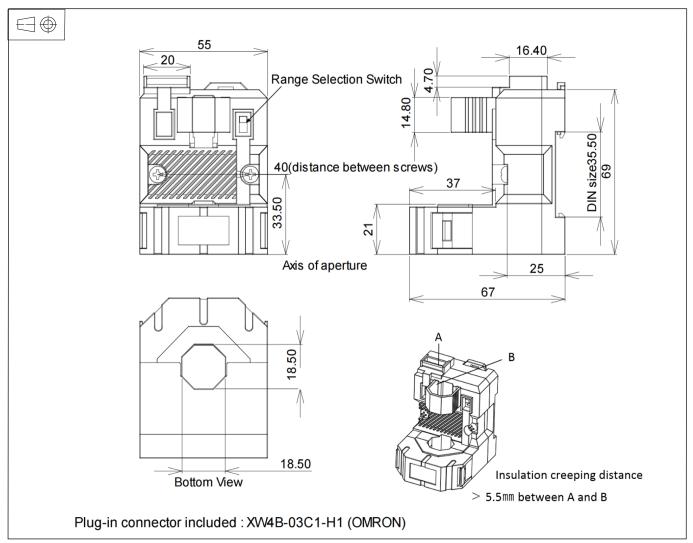

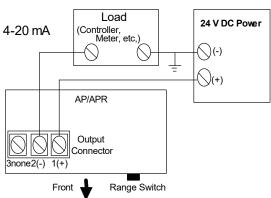

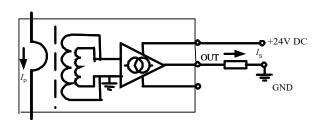

Connections

- Wires up to Ø 2 mm
- Female connector provided (spring terminal blocks)
- User-friendly spring-cage connection for no-tool direct conductor connection

Mechanical characteristics

General tolerance ±1 mm
 Primary aperture Ø 18.5 mm
 Panel mounting 2 holes Ø 4 mm

• Distance between holes 40 mm

For panel mounting, replace M4 screws by new one (not supplied) with appropriate length to panel's thickness.

Page 4/4

单击下面可查看定价,库存,交付和生命周期等信息

>>LEM(莱姆)