

RT6278BHGQUF Step-Down Converter Evaluation Board

Purpose

The RT6278B is an advanced constant on-time (ACOT[™]) mode synchronous buck converter with the input voltage range from 4.5V to 23V and provides 8A output current. This document explains the function and use of the RT6278B evaluation board (EVB), and provides information to enable operation, modification of the evaluation board and circuit to suit individual requirements.

Table of Contents

Purpose	. 1
Introduction	. 2
Bench Test Setup Conditions	. 3
Schematic, Bill of Materials & Board Layout	. 5
More Information	. 8
Important Notice for Richtek Evaluation Board	. 8



Introduction

General Product Information

The RT6278B is an advanced constant on-time (ACOT^T) mode synchronous buck converter. The main control loop of the RT6278B using an advanced constant on-time (ACOT^T) mode control which provides a very fast transient response. The RT6278B operates from 4.5V to 23V input voltage, the output voltage can be programmed between 0.6V to 5.1V.

Product Feature

- Input Voltage Range : 4.5V to 23V
- 8A Output Current
- ACOT[™] Mode Performs Fast Transient Response
- ACOT[™] Architecture to Enable All MLCC Output Capacitor Usage
- Fixed 500kHz Switching Frequency
- High Efficient Internal Power MOSFET Switch 24mΩ (High-Side) and 12mΩ (Low-Side)
- Adjustable Output Voltage from 0.6V to 5.1V
- Pre-biased Soft-Start
- Cycle-by-Cycle Over-Current Protection
- Input Under-Voltage Lockout
- Thermal Shutdown Protection
- Output Over/Under-Voltage Protection

Key Performance Summary Table

Key Features	Evaluation Board Number: PCB091_V1		
Default Input Voltage	12V		
Max Output Current	8A		
Default Output Voltage	3.3V		
Default Marking & Package Type RT6278BHGQUF, UQFN-12HL 3x3 (FC)			
Operation Frequency Steady 500kHz at all loads			



Bench Test Setup Conditions

Headers Description and Placement



Carefully inspect all the components used in the EVB according to the following Bill of Materials table, and then make sure all the components are undamaged and correctly installed. If there is any missing or damaged component, which may occur during transportation, please contact our distributors or e-mail us at <u>evb_service@richtek.com</u>.

Test Points

The EVB is provided with the test points and pin names listed in the table below.

Test point/ Pin name	Signal	Comment (expected waveforms or voltage levels on test points)		
VIN	Input voltage	Power input. Support 4.5V to 23V Input Voltage. Must bypass with a suitable large ceramic capacitor at this pin.		
EN	Enable test point	Enable control. Pull this pin high to turn on the Buck. Do not leave this pin floating.		
GND	Ground	Ground.		
PGOOD	Power good test point	Power good Indicator. Open drain output when the output voltage is within 90% to 120% of regulation point.		
FB	Feedback voltage input	The pin is used to set the output voltage of the converter to regulate to the desired voltage via a resistive divider. Feedback reference = 0.6V.		
VCC	Internal regulator output	5V linear regulator Output for Internal Control Circuit. A capacitor (typical 1µF should be connected to AGND. Don't connect to external Load.		
BOOT	Bootstrap supply test point	Bootstrap supply for high-side gate driver. Connect a $0.1 \mu F$ ceramic capacitor between the BOOT and SW pins.		
LX	Switch node test point	Connect this pin to an external L-C filter.		
ВҮР	Bypass test point	Bypass input for the internal LDO. BYP is externally connected to the output of switching regulator. When the BYP voltage rises above the bypass switch turn-on threshold, the LDO regulator shuts down and the VCC pin is connected to the BYP pin through an internal switch.		
ILIMT	Current limit seeting	Current limit setting pin. The current limit is set to 8A, 10A or 12A when this pin is pull low, floating or pull high respectively.		

RICHTEK your power partner.

Power-up & Measurement Procedure

- 1. Connect input power (4.5V < VIN < 23V) and input ground to VIN and GND test pins respectively.
- 2. Connect positive end and negative terminals of load to VOUT and GND test pins respectively.
- 3. Set the jumper at J7 to connect terminals 2 and 3, connecting EN to VIN through resistor REN, to enable operation.
- 4. Verify the output voltage (approximately 3.3V) between VOUT and GND.
- 5. Connect an external load up to 8A to the VOUT and GND terminals and verify the output voltage and current.

Output Voltage Setting


Set the output voltage with the resistive divider (R4, R5) between VOUT and GND with the midpoint connected to FB. The output is set by the following formula:

 $V_{OUT} = V_{FB} \times (1 + \frac{R4}{R5})$



Schematic, Bill of Materials & Board Layout

EVB Schematic Diagram

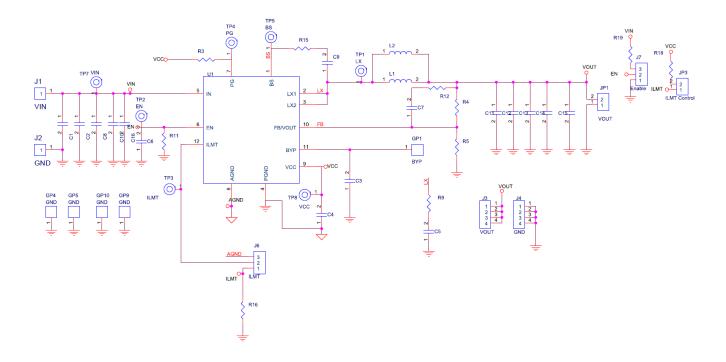


Bill of Materials


Reference	Qty	Part Number	Description	Package	Manufacturer
U1	1	RT6278BHGQUF	DC-DC Converter	UQFN-12HL 3x3	RICHTEK
C3	1	C1608X5R0J475KT	4.7µF/6.3V/0603	C-0603	TDK
C4	1	C1608X5R1E105KT000E	1µF/25V/X5R/0603	C-0603	TDK
C6, C9, C15, C16	4	C1608X7R1H104KT000N	0.1µF/50V/X7R/0603	C-0603	TDK
C7	1	0603N680J500	68pF/50V/NPO/0603	C-0603	WALSIN
C8, C10	2	UMK325BJ106MM	10µF/50V/X5R/1210	C-1210	TAIYO YUDEN
C11, C12	2	C3225X5R1E226MT	22µF/25V/X5R/1210	C-1210	TDK
L1	1	7443552150	1.5µH	L-GSCDK104	WE
R3, R19	2	WR06X1003FTL	100k/0603	R-0603	WALSIN
R4	1	RTT039092FTP	90.9k/0603	R-0603	WALSIN
R5	1	WR06X2002FTL	20k/0603	R-0603	WALSIN
R11	1	WR06X3602FTL	36k/0603	R-0603	WALSIN
R12, R15	2	WR06X000PTL	0R/0603	R-0603	WALSIN
R16	1	WR06X7502FTL	75k/0603	R-0603	WALSIN
R18	1	WR06X1002FTL	10k/0603	R-0603	WALSIN



PCB Layout

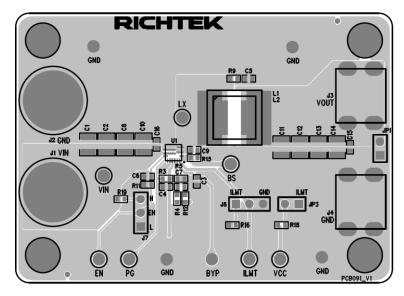


Top View (1st layer)

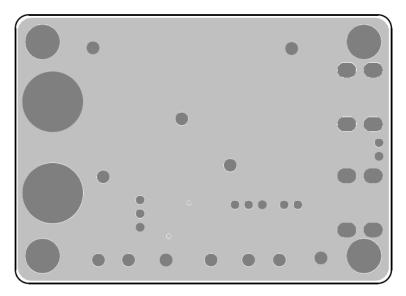


PCB Layout—Inner Side (2nd Layer)



RT6278BHGQUF Evaluation Board

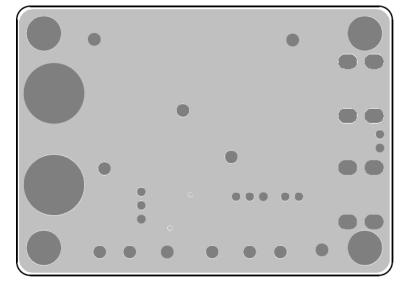

PCB Layout—Inner Side (3rd Layer)

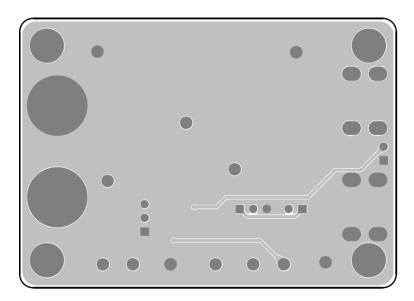

Bottom View (4th Layer)



More Information

For more information, please find the related datasheet or application notes from Richtek website <u>http://www.richtek.com</u>.

Important Notice for Richtek Evaluation Board

THIS DOCUMENT IS FOR REFERENCE ONLY, NOTHING CONTAINED IN THIS DOCUMENT SHALL BE CONSTRUED AS RICHTEK'S WARRANTY, EXPRESS OR IMPLIED, UNDER CONTRACT, TORT OR STATUTORY, WITH RESPECT TO THE PRESENTATION HEREIN. IN NO EVENT SHALL RICHTEK BE LIABLE TO BUYER OR USER FOR ANY AND ALL DAMAGES INCLUDING WITHOUT LIMITATION TO DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES. 单击下面可查看定价,库存,交付和生命周期等信息

>>Richtek(台湾立锜)